SAPIDO

Mobile Hotspot

ALL Broadbands

N+ Mini Broadband Router – All Broadbands

RB-1132 User Manual V 1.0

Table of Contents

Copyright Statement 6
Warranty 6
FCC Caution 6
Safe Seating Gestures 7
Chapter 1 Introduction 8
1.1 Overview 8
1.2 Features 9
1.2.1 Six Views of Product Appearance 11
1.2.2 LED Indicator Status Description 11
1.3 System Requirements 12
1.4 WAN Network Plug and Play 12
1.5 Get Your IP Automatically & Manually 13
1.5.1 Network Testing 16
1.5.2 Testing with Internet Browser 16
Chapter 2 Hardware Installation 19
2.1 Diagram of Connecting Hardware to N+ Mini Broadband Router 19
2.1.1 Hardware Connection and Application for Router Mode 19
2.1.2 Hardware Connection and Application for AP Mode 20
2.1.3 Hardware Connection and Application for Wi-Fi AP Mode 20
Chapter 3 One Button Setup 21
3.1 One Button Setup configuration for Router Mode 21
3.2 One Button Setup configuration for AP Mode 24
3.3 One Button Setup configuration for WiFi AP Mode 26
Chapter 4 Basic Setup 28
4.1 Router Mode 28
4.1.1 Switch to Router Mode 28
4.1.2 Administrator Setup Instruction 28
4.2 Basic Setup for Router Mode 29
4.2.1 Time Zone Setup 30
4.2.2 LAN Interface Setup 30
4.2.3 WAN Setup 31
4.2.4 Basic Setup Complete 43
4.3 AP Mode 43
4.3.1 Switch to AP Mode 43
4.4 Basic Setup 44
4.4.1 Time Zone Setup 45

4.4.2 Wireless Setup 45
4.4.3 Wireless Security Setup 46
4.4.4 Basic Setup Complete 48
4.5 WiFi AP Mode 48
4.5.1 Switch to WiFi AP Mode 48
4.6 Basic Setup 49
4.6.1 Time Zone Setup 49
4.6.2 Wireless Site Survey And Security Setup 50
4.6.3 Extend Wireless Setup 50
4.6.4 Quick Setup Complete 52
Chapter 5 Advanced Configuration for Router Mode 54
5.1 IP Configuration 54
5.1.1 WAN 54
5.1.2 LAN Interface Setup 74
5.1.3 Dynamic DNS Setting 75
5.2 Wireless Setup 77
5.2.1 Wireless Basic Settings 77
5.2.2 Wireless Advanced Settings 82
5.2.3 Wireless Security Setup 84
5.2.4 Wireless Access Control 86
5.2.5 WDS Settings 87
5.2.6 WPS 92
5.3 NAT 97
5.3.1 Visual Server 97
5.3.2 Visual DMZ 99
5.4 Firewall 99
5.4.1 Port Filtering 100
5.4.2 IP Filtering 102
5.4.3 MAC Filtering 103
5.4.4 URL Filtering 104
5.5 System Management 106
5.5.1 Change Password 106
5.5.2 Upgrade Firmware 107
5.5.3 Save / Reload Settings 108
5.5.4 Time Zone Setting 113
5.5.5 UPnP Setting 114
5.5.6 Language Setting 115
5.6 Log & Status 116

5.6.1 Network Config 116
5.6.2 Event Log 117
5.7 Logout 119
Chapter 6 Advance Configuration for AP Mode 120
6.1 IP Configuration 120
6.1.1 LAN Setup 120
6.1.2 LAN Interface Setup 120
6.2 Wireless Setup 122
6.2.1 Wireless Basic Settings 123
6.2.2 Wireless Advanced Settings 128
6.2.3 Wireless Security Setup 130
6.2.4 Wireless Access Control 133
6.2.5 WDS Settings 134
6.2.6 WPS 139
6.3 System Management 144
6.3.1 Change Password 144
6.3.2 Upgrade Firmware 145
6.3.3 Save / Reload Settings 146
6.3.4 Time Zone Setting 151
6.3.5 UPnP Setting 152
6.3.6 Language Setting 153
6.4 Log & Status 154
6.4.1 Network Config 154
6.4.2 Event Log 155
6.5 Logout 156
Chapter 7 Advance Configuration for WiFi AP Mode 157
7.1 IP Configuration 157
7.1.1 LAN Setup 157
7.1.2 LAN Interface Setup 158
7.2 Wireless Setup 159
7.2.1 Wireless Basic Settings 160
7.2.2 Wireless Advanced Settings 164
7.2.3 Wireless Site Survey 166
7.2.4 Wireless Security Setup 166
7.2.5 Wireless Access Control 169
7.2.6 WPS 170
7.3 System Management 175
7.3.1 Change Password 175

7.3.2 Upgrade Firmware 176
7.3.3 Save / Reload Settings 177
7.3.4 Time Zone Setting 182
7.3.5 UPnP Setting 184
7.3.6 Language Setting 185
7.4 Log & Status 186
7.4.1 Network Config 186
7.4.2 Event Log 187
7.5 Logout 188
Chapter 8 DDNS Service Application 189
Chapter 9 Q & A 194
9.1 Installation 194
9.2 LED 194
9.3 IP Address 195
9.4 OS Setting 195
9.5 N+ Mini Broadband Router Setup 197
9.6 Wireless LAN 199
9.7 Support 201
9.8 Others 202
Chapter 10 Appendices 203
10.1 Operating Systems 203
10.2 Browsers 203
10.3 Communications Regulation Information 203

Copyright Statement

The products, including accessories and software are the property of SAPIDO Technology Inc. It is prohibited to reproduced, transcribed, transmitted and stored without authorization from SAPIDO. SAPIDO may update, revise, and change the contents of this manual without further notice. Users can visit the official website for reference. After reviewing this manual, if you have any problem or suggestion. You are welcome to contact us. Our Technical Support Engineer will reply related problem as soon as possible.

All trademarks and trade names are the properties of their respective owners.
Copyright© 2010 All Right Reserved by SAPIDO.

Warranty

One-Year Warranty is provided for consumer products. This warranty is subject to the conditions and limitations set forth herein. ("We") warrants and tests the Product to be free from defects in material and workmanship and to conform to published specifications. During the warranty period, should the Product fail under normal use in the recommended environment due to improper workmanship or materials, we will repair the Product or replace it with a comparable one. This warranty is for a specific period of time from the date of purchase. Proof of date of purchase is required. We will inspect the Product and make the decision regarding repair or replacement. We reserve the right to provide a functionally equivalent refurbished replacement Product.
This warranty does not apply to Product failure due to：

1. accident, abuse, and mishandling
2. any software against product manual
3. improper installation
4. any unfitted replacement
5. over allowable environment
6. alteration
7. improper usage
8. wires or parts oxidized

FCC Caution

1. The device complies with Part 15 of the FCC rules. Operation is subject to the following conditions:

2. This device may not cause harmful interference, and this device must accept any interference received, including interference that may cause undesired operation.

3. FCC RF Radiation Exposure Statement: The equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body.

4. This Transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

5. Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user authority to operate the equipment.

Safe Seating Gestures

You should follow the manufacturer's instructions for adjusting the backrest to fit your body properly.

- An adjustable chair that provides firm, comfortable support is best.
- Adjust the height of the chair so your thighs are horizontal and your feet flat on the floor.
- The back of the chair should support your lower back (lumbar region).

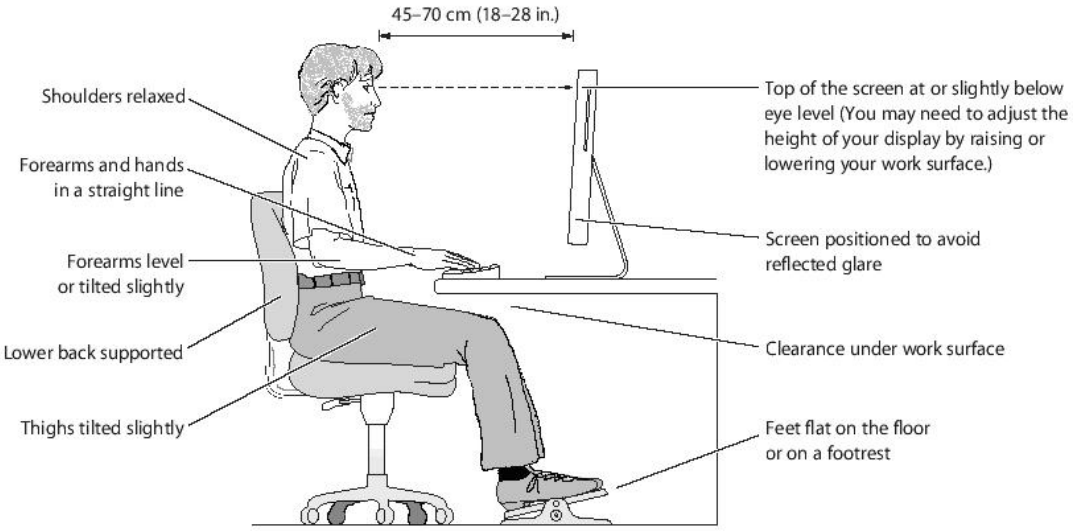
45–70 cm (18–28 in.)
Shoulders relaxed
Forearms and hands in a straight line
Forearms level or tilted slightly
Lower back supported
Thighs tilted slightly
Top of the screen at or slightly below eye level (You may need to adjust the height of your display by raising or lowering your work surface.)
Screen positioned to avoid reflected glare
Clearance under work surface
Feet flat on the floor or on a footrest

CE Statement of Conformity

Our product has been tested in typical configuration by Ecom Sertech Corp and was found to comply with the essential requirement of "Council Directive on the Approximation of the Laws of the Member States relating to Electromagnetic Compatibility" (89/336/EEC; 92/31/EEC; 93/68/EEC)

Chapter 1 Introduction

1.1 Overview

SAPIDO N+ Mini Broadband Router Multi-power Supply, Mini and Compact, Transofrmer built-in, All Boradbands can Work-SAPIDO is to present you a Mobile Hotspot powerful than ever.

Whatever broadband service you use- xDSL/ Cable, WiFi Hotspot, 3G/4G, or even WMAX, you can share internet connection effortlessly via Sapido Mobile Hotspot. No need cable or complicated WDS configuration to extend wireless coverage, with only one click or press on WPS button, Mobile Hotspot can work as wireless bridge to eliminate dead spot in your house.

With AC/DC dual power supply, whereever DSL/Cable or electricity is not available, you can still create instant hotspot at remote locations, such as construction sites, special occasions, conventional centers, vehicales, etc...to access internet on the go for surfing, skype, music, games, etc.

1.2 Features

- **All Broadbands can Work**, No matter what kind of Internet connections you use, ie. 3G、WiMAX、xDSL/Cable/Fiber or Public WiFi，you may share the connection via this Mobile Hotspot.
- **AC/DC Dual Power, Power Non-Stop!** Built-in transformer makes it easy to go with you. It supports both AC and DC power；moreover, there is a mini USB port on it, which works perfectly with AC power, power pack, or car charger. Hence, you can easily use it indoor, on the road, or in vehicles.
- **Complies with wireless 11n standard**, which upgrades data transfer rate to 300Mbps and with coverage 4 times larger than 11g.
- **One touch WPS encryption and connection**.
- **Multiple Network Environments:** Router, AP, WiFi AP
- **WiFi AP - Extend the Wireless Coverage Effortlessly.** You are able to complete the WDS via pressing the WPS button or one click at setup program.
- **Multi-AP** - Network groups setup for flexible management.

- **Specifications**

Interface	WAN Port	1 x 10/100 Mbps RJ45, with auto MDI/MDIX
	LAN Port	1 x 10/100 Mbps RJ45, with auto MDI/MDIX
	USB2.0 Port	1 x Standard _A type—USB 2.0 for 3.5G USB Dongle, WiMAX USB Dongle
	Wireless	Built-in Mini PCI
	Slide Switch	Router / AP / WiFi AP mode exchange function.
Function	Web-Base	Windows IE / Linux Firefox / MAC Safari
	WAN Protocol	PPPoE / PPTP / Static IP/ Dynamic IP/ HSDPA/UMTS / WiMAX
	WLAN	WDS / WEP Key / WPA / WPA-PSK / WPA2 / WPA2-PSK / MAC Access Control /Hidden SSID
	Routing	UPnP / DHCP / DNS / WINS / DDNS
	NAT	Virtual Server / Virtual DMZ
	Firewall	MAC Filter / URL Filter / SPI / DoS Protection / IP Packet Filter
Others	Operation Requirement	Operating Temp. 0°C~45°C (32°F~113°F) Storage Temp. -20°C~70°C (-14°F~158°F) Operating Humidity 10% to 85% Non-Condensing Storage Humidity 5% to 90% Non-Condensing
Application	Dimension	91mm (L) x 878mm (W) x 31mm (H)
	Power	AC 100 V ~ 240 Mini USB Type B: DC 5V 1.5A

1.2.1 Six Views of Product Appearance

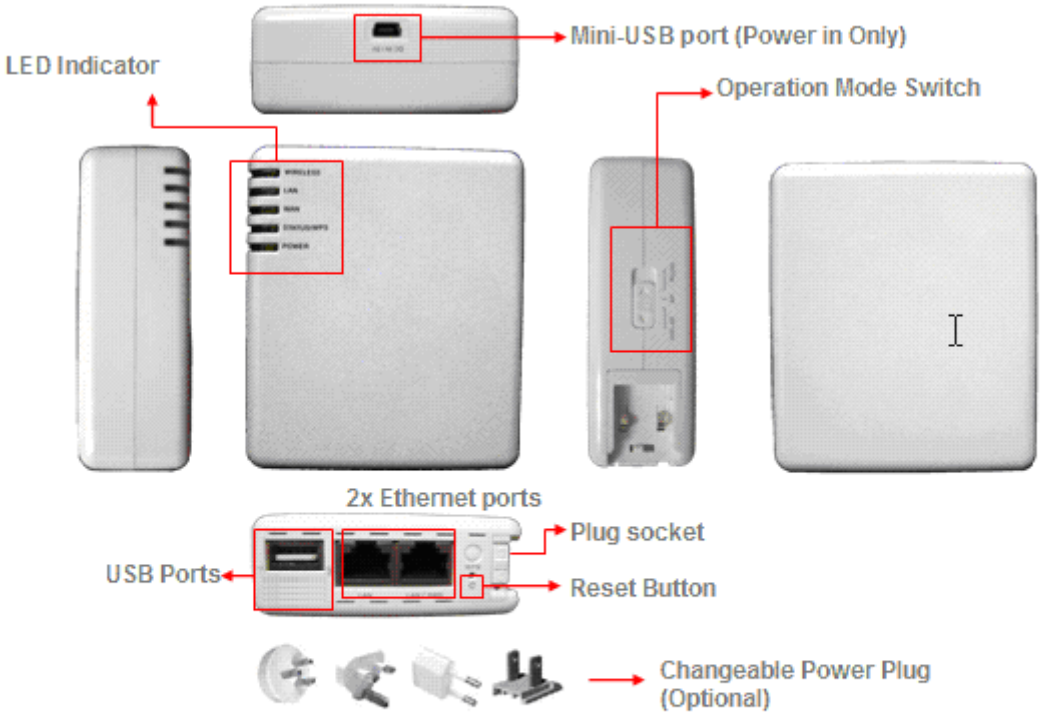

Power Plug	100V ~ 240V Input
Operation Mode Switch	Router, AP, and WiFi AP operation modes
Reset Button	Press "**Reset**" button over 10 seconds. When status indicator turns from flashing to solid, the process is completed. All settings are back to default.
Ethernet Port	2 RJ-45 Ethernet 10/100 Ports
USB2.0 Ports	1 USB Ports

1.2.2 LED Indicator Status Description

Status / LED Indicator	Solid	Flashing
WIRELESS	Operation OK	Green: Transmitting Data
LAN	RJ-45 Plugged in	Transmitting Data
WAN	RJ-45, 3.5G/WiMAX usb dongle plugged in	Transmitting Data
STATUS & WPS	Operation OK	Green: Reset / Firmware updates in progress Orange: WPS enabled
POWER	Operation OK	Power on

1.3 System Requirements

To begin with **N+ Mini Broadband Router**, you must have the following minimum system requirements. If your system can't correspond to the following requirements, you might get some unknown troubles on your system.

- XDSL/Cable Modem and broadband Internet Account.
- PC Ethernet adapter (10 BASE-T or 10/100 BASE-TX).
- Wireless adapter must be 802.11n or g or b standard.
- Recommended OS: Windows / Linux/ Mac.

1.4 WAN Network Plug and Play

✧ WAN Interface auto-detection：

◆ When Ethernet cable is plugged to Router WAN Port, router will auto detect "Ethernet" as WAN Interface.

◆ When 3.5G modem is plugged to Router USB Port, router will auto detect "3.5G" as WAN Interface connection.

◆ When WiMax modem is plugged to Router USB Port, router will auto detect "WiMax" as WAN Interface connection.

◆ When Ethernet cable is plugged to Router WAN Port with 3.5G modem, router will auto detect "Ethernet" as WAN Interface and "3.5G" will be used as backup connection.

✧ WAN Type auto-detection：

◆ When the router auto detects Ethernet as WAN interface:

➢ Router support PPPoE, DHCP, PPTP and L2TP as WAN access type.

➢ Router will detect WAN type from last settings or users have to input required information by ISP.

➢ If there is no setting from user, the router will load the default settings.

◆ When using 3.5G auto-connection:

➢ The router will load settings from last time or users have to input required information by ISP.

1.5 Get Your IP Automatically & Manually

After N+ Mini Broadband Router connected with your computer, please make sure your IP is in the automatic IP position to activate the Internet network. If you don't know how to enter the settings, please follow the steps as below.

Step 1. Go to **Start**>**Settings**> **Network Connections** and then select **Local Area Connection**.

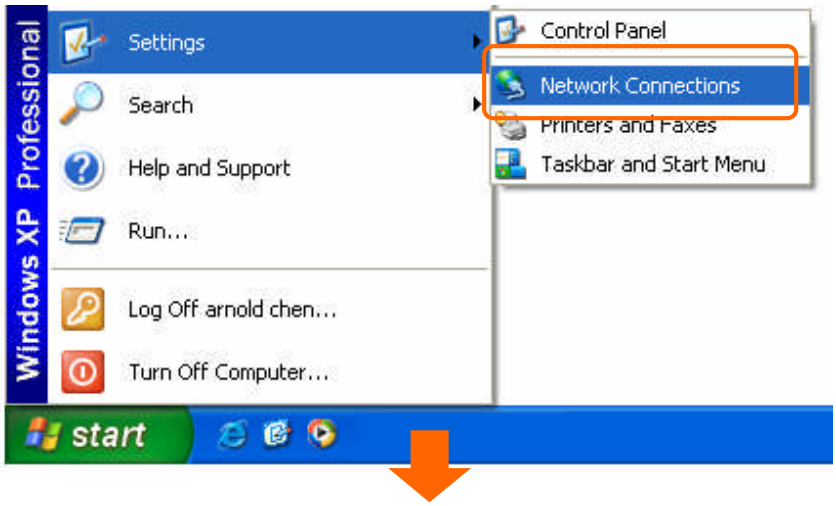

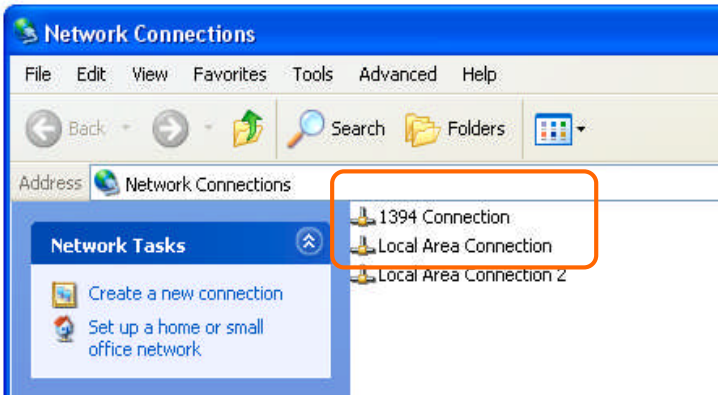

Step 2. Click on Properties

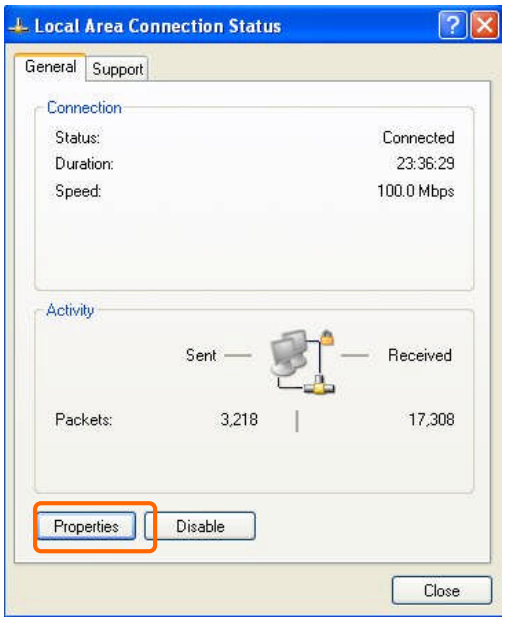

Step 3. Double click on Internet Protocol (TCP/IP).

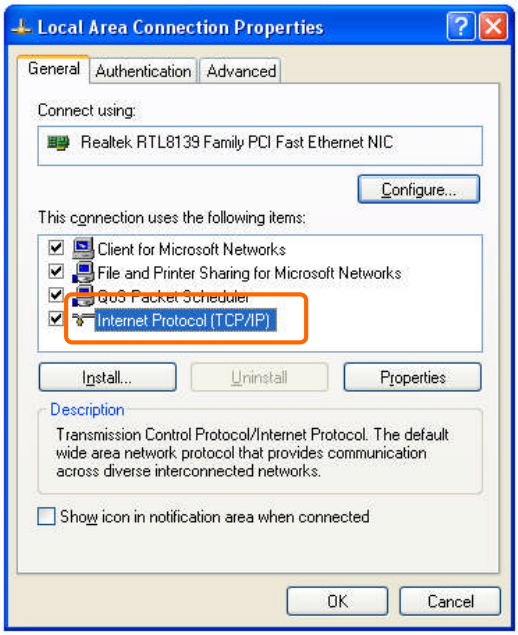

Step 4-1. For getting IP automatically, if you are one of the users under N+ Mini Broadband Router, please skip **Use the following IP address** and then select **Obtain an IP address automatically** and **Obtain DNS server address automatically** and then click on **OK** button.

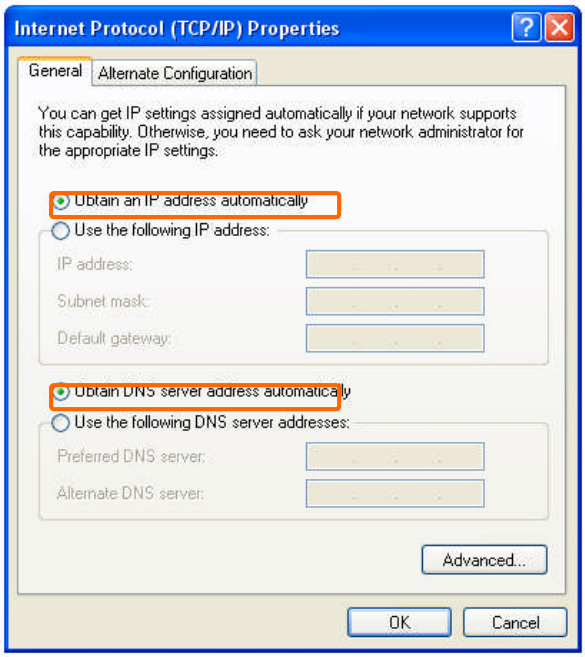
Internet Protocol (TCP/IP) Properties
General
Alternate Configuration
You can get IP settings assigned automatically if your network supports this capability. Otherwise, you need to ask your network administrator for the appropriate IP settings.
Obtain an IP address automatically
Use the following IP address:
IP address:
Subnet mask:
Default gateway:
Obtain DNS server address automatically
Use the following DNS server addresses:
Preferred DNS server:
Alternate DNS server:
Advanced...
OK
Cancel

Step 4-2. For getting IP manually in order to specify a Virtual Server, such as Print Server, FTP Server and so on, please skip **Obtain an IP address automatically** and then select **Use the following IP address**. And the following default setting of N+ Mini Broadband Router should be noted:

- IP Address: 192.168.1.10 (as your Print Server for example)
- Subnet Mask: 255.255.255.0
- Default Gateway: 192.168.1.1

Note: If you configure your computer's IP Address manually, it needs to be on the same network segment.

For example:

- IP Address: 192.168.1.xxx (xxx can be any number between 2 and 253, but it can't be repeated, we use 100 to be the example.)
- Subnet Mask: 255.255.255.0
- Gateway: 192.168.1.1 (this is the IP address of N+ Mini Broadband Router in Router Mode)
- DNS: 192.168.1.1 (use N+ Mini Broadband Router's IP address or on your own choice)

Note: IP address and Default gateway cannot be the same.

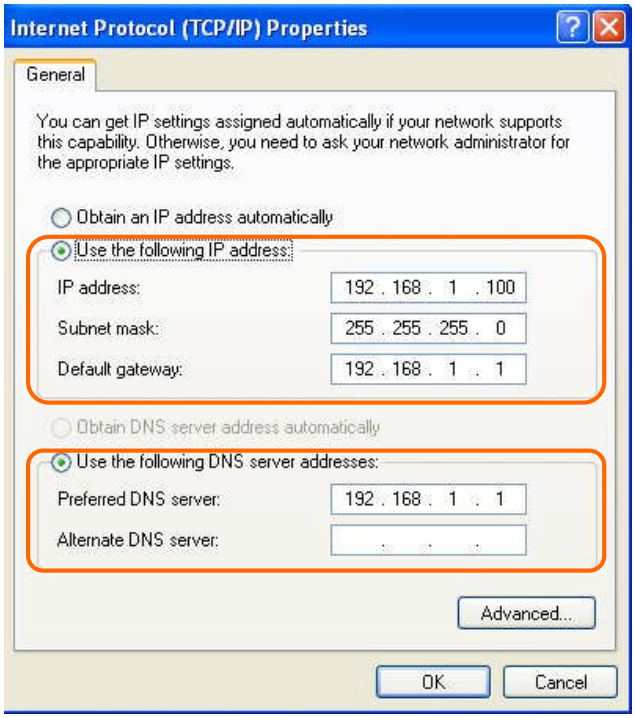
Internet Protocol (TCP/IP) Properties
General
You can get IP settings assigned automatically if your network supports this capability. Otherwise, you need to ask your network administrator for the appropriate IP settings.
Obtain an IP address automatically
Use the following IP address:
IP address: 192 . 168 . 1 . 100
Subnet mask: 255 . 255 . 255 . 0
Default gateway: 192 . 168 . 1 . 1
Obtain DNS server address automatically
Use the following DNS server addresses:
Preferred DNS server: 192 . 168 . 1 . 1
Alternate DNS server:
Advanced...
OK
Cancel

1.5.1 Network Testing

There are two ways to test your Network whether it can work on Internet or not. They are "Testing with Internet Browser" and "Testing with Dos".

1.5.2 Testing with Internet Browser

Open an Internet Browser, such as Internet Explore or Netscape. Input a valid web address you like, for example, http://www.yahoo.com in the web address blank and then press enter. If the website appears, that means your Internet is working under normal situation.

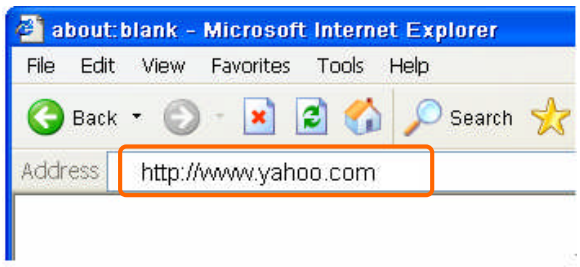

1.5.2.1 Testing with DOS (Windows XP Platform)

Step 1. Go to **start** -> **Run**.

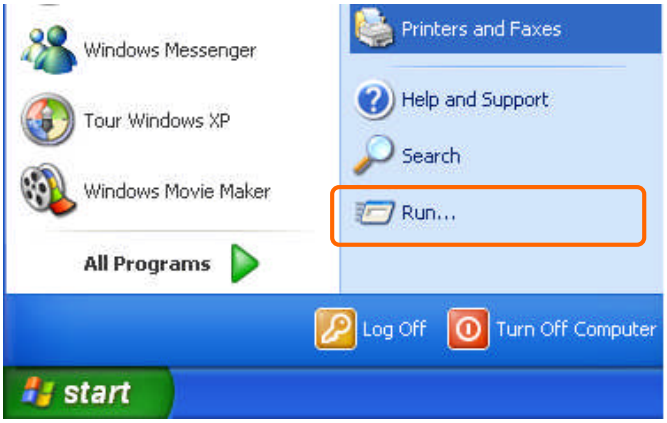

Step 2. Input **cmd** in the blank, and then click **OK**. The Command Prompt window appears.

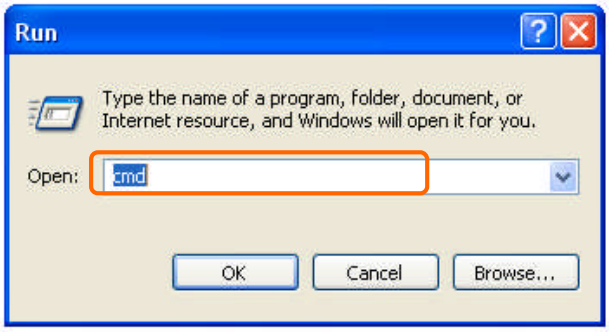

Step 3. Input **ipconfig** in the flashing area then press enter. You will get an IP Address 192.168.1.100, for example, and Default Gateway as 192.168.1.1.

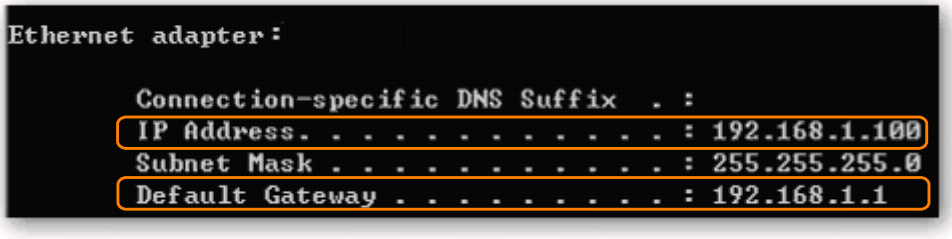
Ethernet adapter:
Connection-specific DNS Suffix . :
IP Address. . . . . : 192.168.1.100
Subnet Mask . . . . . : 255.255.255.0
Default Gateway . . . . . : 192.168.1.1

Step 4. Ping a legal WAN Address such as 192.168.1.1. If Internet works, it will show **Reply from 192.168.1.1: bytes = 32 time = 3ms TTL =64,** for example.

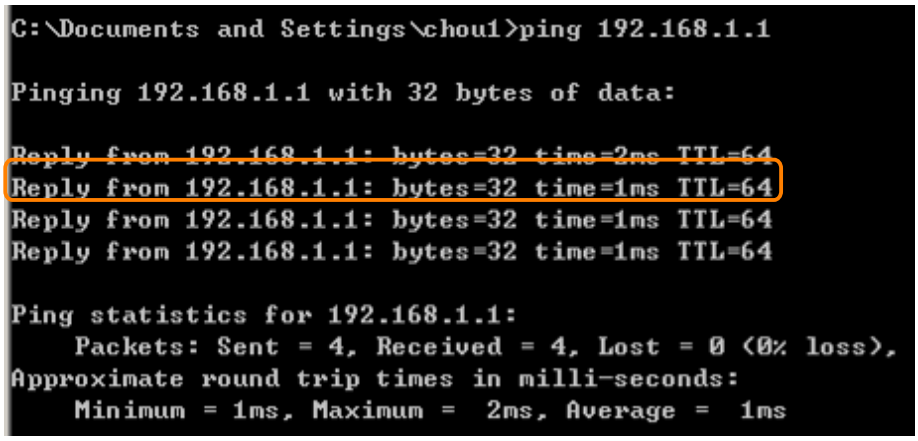
C:\Documents and Settings\chou1>ping 192.168.1.1
Pinging 192.168.1.1 with 32 bytes of data:
Reply from 192.168.1.1: bytes=32 time=2ms TTL=64
Reply from 192.168.1.1: bytes=32 time=1ms TTL=64
Reply from 192.168.1.1: bytes=32 time=1ms TTL=64
Reply from 192.168.1.1: bytes=32 time=1ms TTL=64
Ping statistics for 192.168.1.1:
Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
Approximate round trip times in milli-seconds:
Minimum = 1ms, Maximum = 2ms, Average = 1ms

If it can't work, it will show **Request timed out**.

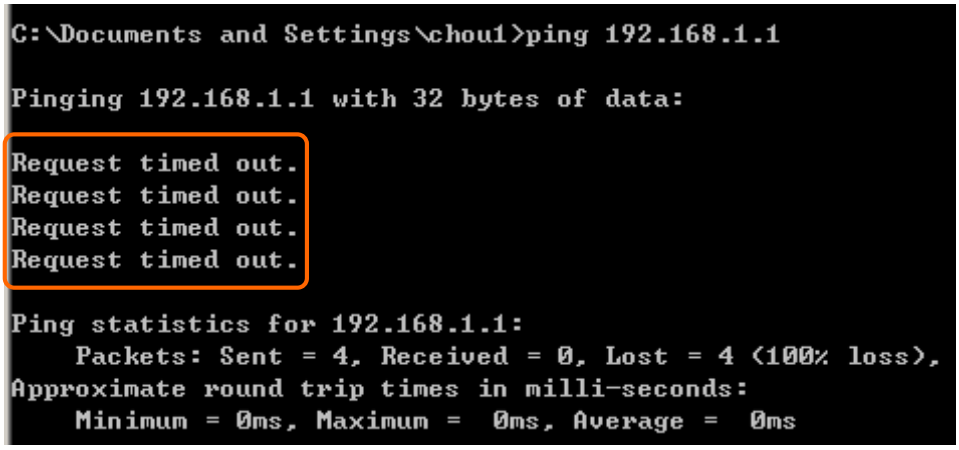
C:\Documents and Settings\chou1>ping 192.168.1.1
Pinging 192.168.1.1 with 32 bytes of data:
Request timed out.
Request timed out.
Request timed out.
Request timed out.
Ping statistics for 192.168.1.1:
Packets: Sent = 4, Received = 0, Lost = 4 (100% loss),
Approximate round trip times in milli-seconds:
Minimum = 0ms, Maximum = 0ms, Average = 0ms

Chapter 2 Hardware Installation

2.1 Diagram of Connecting Hardware to N+ Mini Broadband Router

N+ Mini Broadband Router is a portable and convenient wireless solution for the traveling businessmen delivering 802.11n wireless connectivity with a maximum wireless speed of up to 300Mbps. Use it in conference rooms, hotel rooms, or even at hotspots. The Wireless Pocket Router/AP might be small in size, but is huge in functionality, supporting multiple operation modes, including Access Point (AP) mode, Router mode, and WiFi AP mode. You can switch among these modes easily by using N+ Mini Broadband Router's 3-way configuration slide switch. Moreover, there is an USB port support with N+ Mini Broadband Router; user can plug the USB devices - 3.5G or WiMAX USB Dongle.

Warning: Before sliding the switch modes, please power-off the router firstly. Moreover, please stay over 5 seconds between power-off / power-on condition.

2.1.1 Hardware Connection and Application for Router Mode

When N+ Mini Broadband Router switches to Router Mode, there will be each WAN and LAN port existing, the administrator can do the Quick Setup including WAN Setup, LAN Setup, Wireless Setup, Time Server Setup, Password Setup, Firewall Setup, QoS Setup.

2.1.2 Hardware Connection and Application for AP Mode

Under AP Mode, it supports 1 LAN port as Bridge, and user can connect to N+ Mini Broadband Router via LAN port or wireless. The administrator can set up quickly, including LAN Setup, Wireless Setup, Time Server Setup, and Password Setup.

2.1.3 Hardware Connection and Application for Wi-Fi AP Mode

As WiFi AP Mode, N+ Mini Broadband Router will be a bridge and supports 2 LAN ports. The administrator can set up quickly, including LAN Setup, Wireless Setup, Time Server Setup, and Password Setup.

Chapter 3 One Button Setup

The advanced One Button Setup provides users a simple way to set up the complicated network. Instead of numbers of IPs to be memorized, you just need to fill in some necessary information and then enjoy the secured internet by clicking the "**Finished**" button.

3.1 One Button Setup configuration for Router Mode

Step 1. Please switch to Router mode and plug in power.

The default UPnP of N+ Mini Broadband Router is ON. When users connect 3.5G Mobile Router to their PC, and icon will show up in the right-down corner.

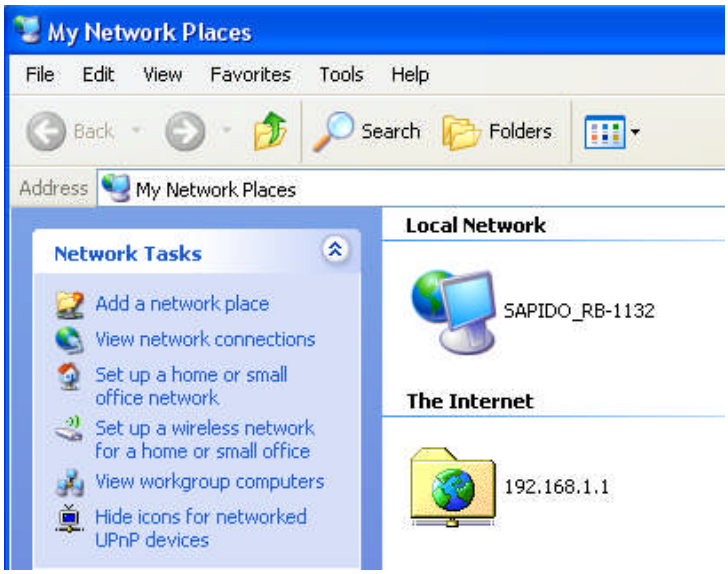

Step 2. Click the **Internet Gateway Device** to open the login page.

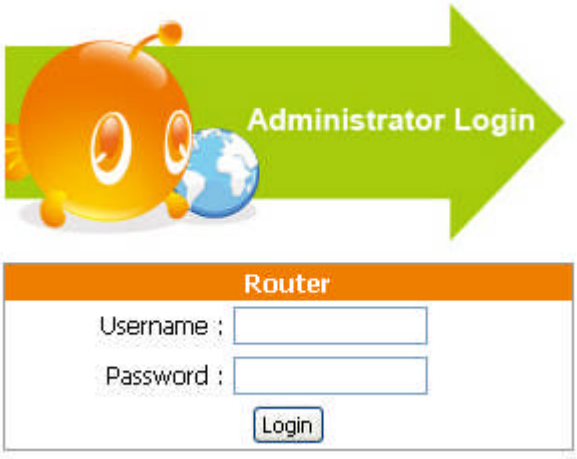

Step 3. Click **One Button Setup** on the left of the main menu under router mode.

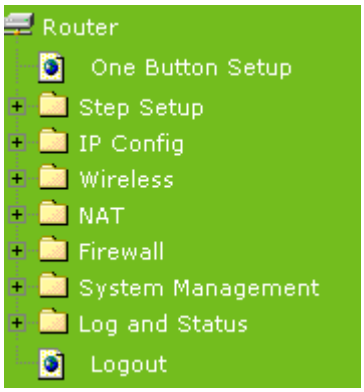

One Button Setup

This page is used to configure all of the server router function for first time.

Time Zone Select

Time Zone Select : (GMT+08:00)Taipei

Change Password

New Password:

Device Name

Device Name: SAPIDO_RB-1132

WAN Interface Setup

WAN Interface: 3.5G usb dongle

Service: UMTS/HSPA/HSDPA/HSUPA

Connect Speed: Auto Switch / 2.5G/2.75G only / 3G/3.5G only

SIM PIN: None

Retype SIM PIN:

APN: internet

Username:

Password:

PHONE Number: *99#

Wireless Setup

SSID: SAPIDO_Mobile_Hotspot

Encryption: WEP

- **Time Zone Select:** Select your time zone from the Time Zone drop-down list.
- **Change Password:** For changing password, please fill the password information into the blank.

- **Device Name:** Name your device here. The default is SAPIDO_RB-1132.

Note: System will automatically copy the last 6 numbers of this device's MAC address after your device name.

- **WAN Interface Setup:** Select the WAN Interface from the drop-down list.
- **WAN Type Setup:** Please choose the access type.
- **Wireless Setup:** Fill in the ESSID if it is blank, and your preferred Encryption type. The default is SAPIDO_Mobile_Hotspot**.**
- **Finished:** Click **finished** button to complete the setting.

3.2 One Button Setup configuration for AP Mode

Step 1. Please switch to AP mode and plug in power.

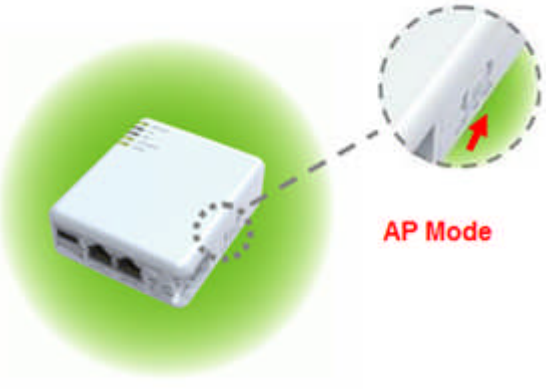

Step 2. Click the **Internet Gateway Device** to open the login page.

Step 3. Click One Button Setup on the left of the main menu under AP mode.

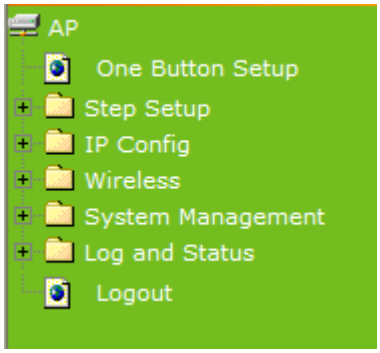

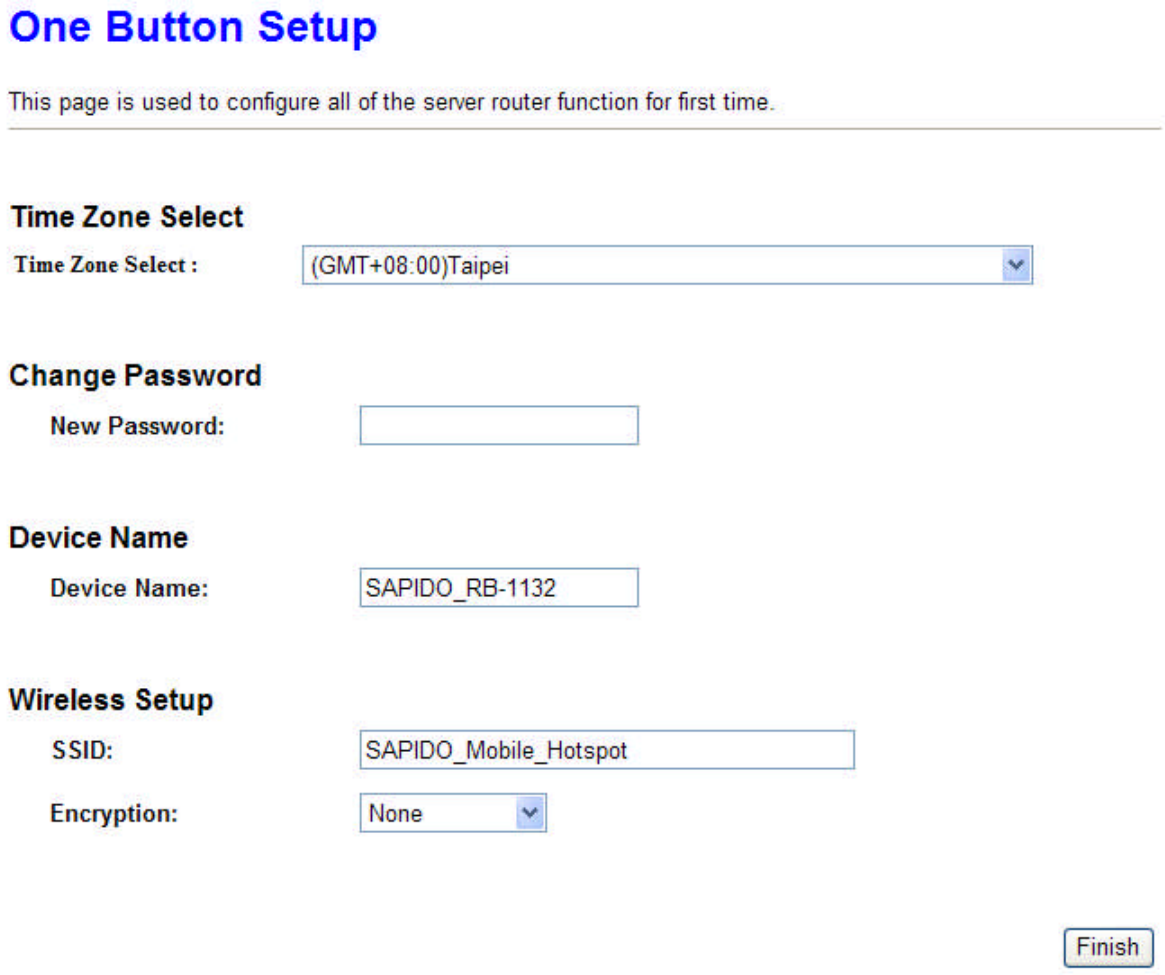

- **Time Zone Select:** Select your time zone from the **Time Zone** drop-down list.
- **Change Password:** For changing password, please fill the password information into the blank.
- **Device Name:** Name your device here. The default is **SAPIDO_RB-1132.**

Note: System will automatically copy the last 6 numbers of this device's MAC address after your device name.

- **Wireless Setup:** Define the SSID, and Encryption type.

- **Finished:** Please click **finished** button to complete the setting.

3.3 One Button Setup configuration for WiFi AP Mode

Step 1. Please switch to WiFi AP mode and plug in power.

Step 2. Click the **Internet Gateway Device** to open the login page.

Step 3. Click One Button Setup on the left of the main menu under WiFi AP mode.

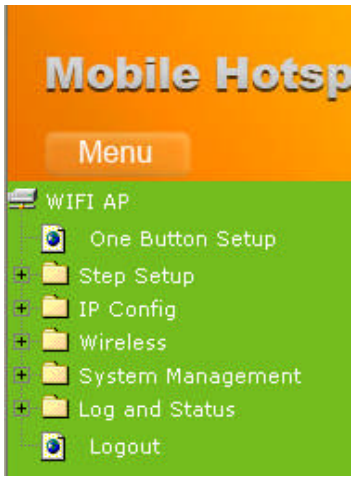

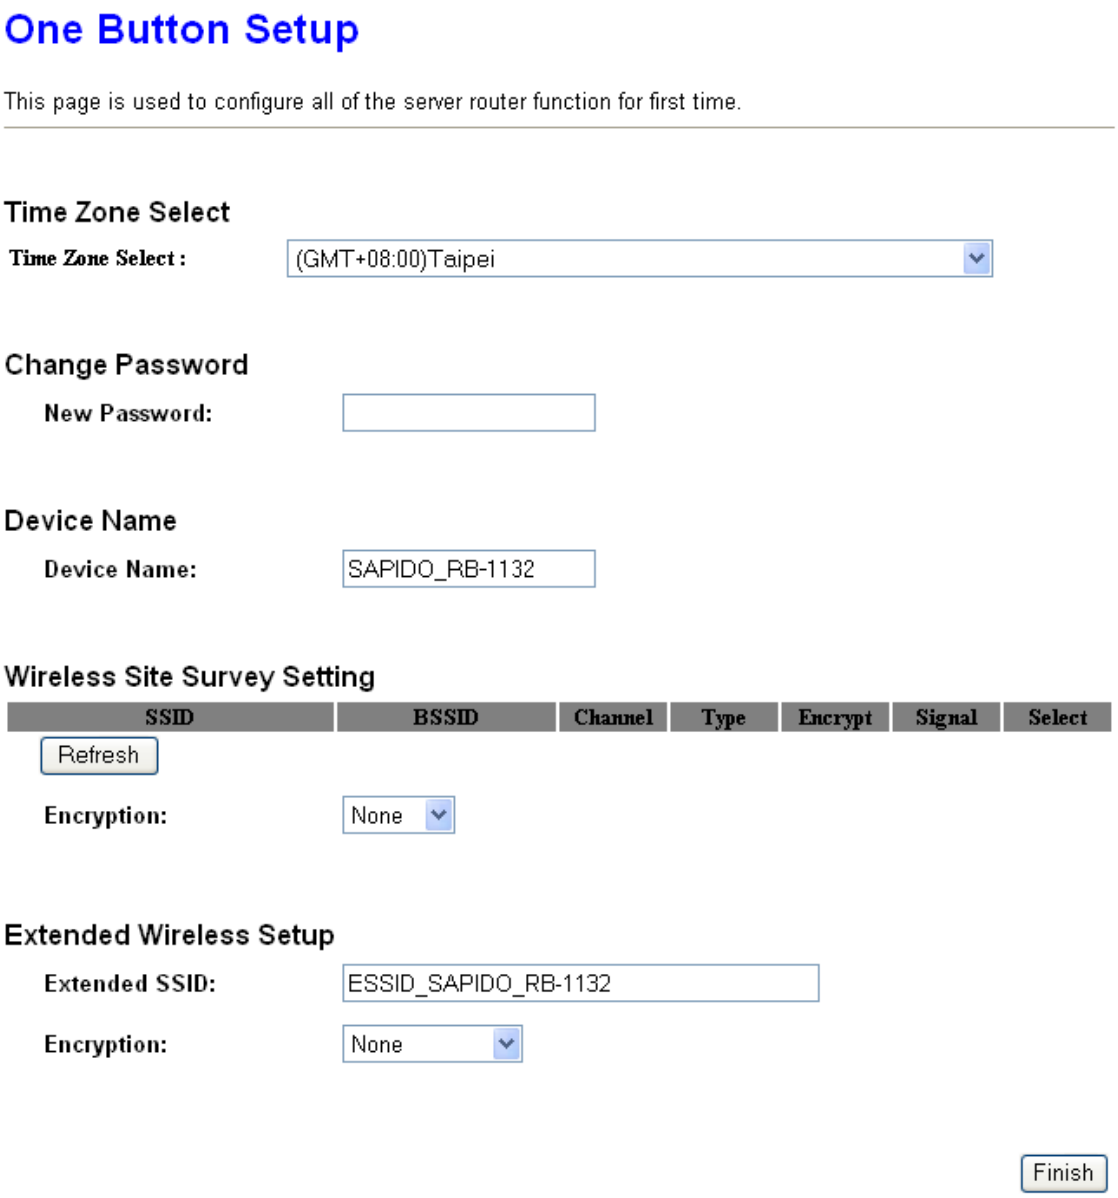

- **Time Zone Select:** Select your time zone from the **Time Zone** drop-down list.
- **Change Password:** For changing password, please fill the password information into the blank.
- **Device Name:** Name your device here. The default is SAPIDO_RB-1132.

Note: System will automatically copy the last 6 numbers of this device's MAC address after your device name.

- **Wireless Site Survey Setting:** Select the preferred AP for connection, and the encryption type.
- **Extended Wireless Setup:** Define the ESSID, and Encryption type.
- **Finished:** Please click **finished** button to complete the setting.

Note: One Button Setup is not completed unless users finish all settings and click **Finished** button.

Chapter 4 Basic Setup

4.1 Router Mode

Under Router Mode, the 3.5G plus 11n Mobile Router provides a Router/AP function. User can get IP address assigned by ISP wired or wireless. It also supports NAT and DHCP functions that enable multiple computers to share Internet connection at the same time.

4.1.1 Switch to Router Mode

Switch to Router mode and plug in power.

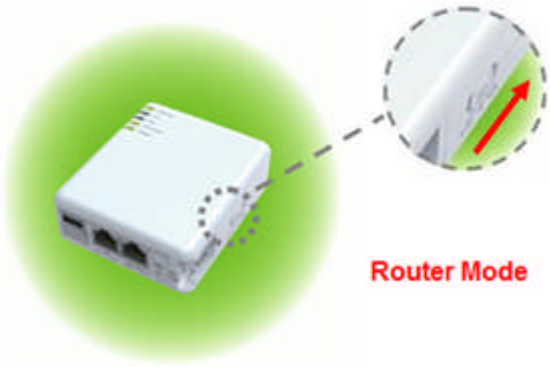

Note: 1. Before sliding the switch modes, please power-off the router firstly. Moreover, please stay over 5 seconds between power-off / power-on condition.
2. Switching the mode while power is on will make the router crush, and cause the hardware damage and information lost.

4.1.2 Administrator Setup Instruction

Make sure switch the mode to Router Mode, then open a Microsoft Internet Explorer, Mozilla Firefox or Apple Safari browser, and enter http://192.168.1.1 (Default Gateway) in browser's blank.

Note: If the homepage doesn't appear, please check if the TCP/IP configuration is obtaining IP address automatically or not. If you don't know how to do it, please refer to **"1.5 Get your IP Automatically & Manually".**

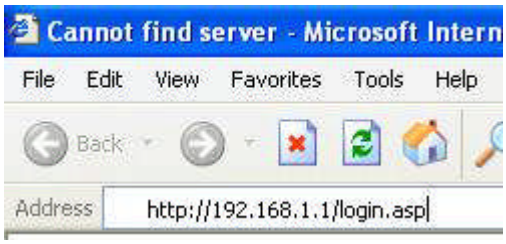

The default value for Username and Password are **admin** (all in lowercase letters). Click **Login** to enter.

4.2 Basic Setup for Router Mode

Typical Configuration Manager Page consists of two separate frames. The left frame contains all the means available for device configuration. Menus are indicated by file icons, and related menus are grouped into categories, such as LAN, WAN and etc., and indicated by folder icon, depending on whether the group of menus are expanded or not. You can click on any of these to display a specific configuration page.

Select **Step Setup** on the left of the main menu. Then you'll see the full functionality selection screen appears and detailed settings for each item.

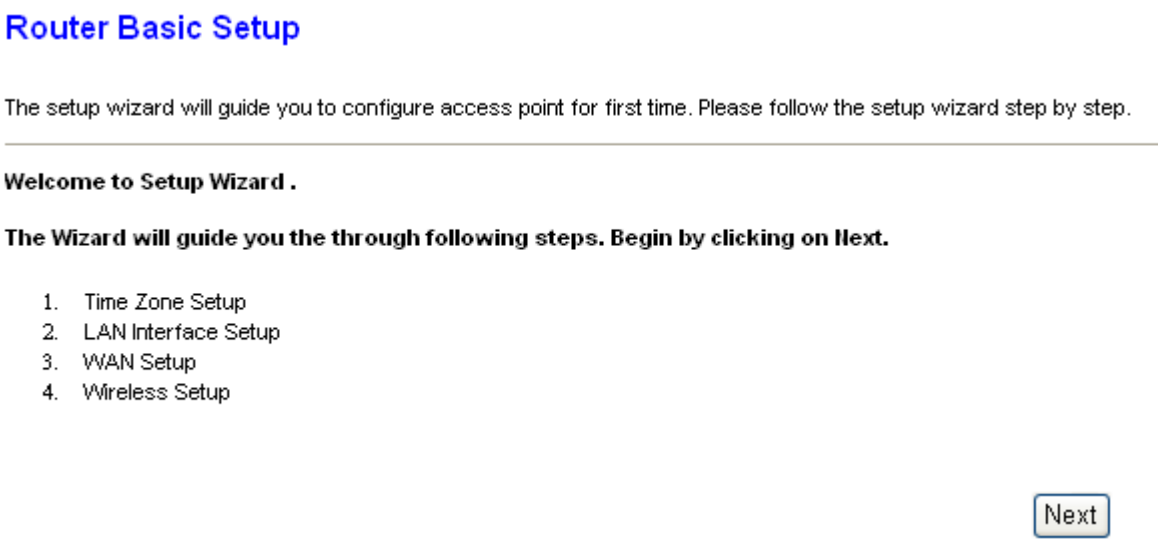
Router Basic Setup
The setup wizard will guide you to configure access point for first time. Please follow the setup wizard step by step.
Welcome to Setup Wizard .
The Wizard will guide you the through following steps. Begin by clicking on Next.
1. Time Zone Setup
2. LAN Interface Setup
3. WAN Setup
4. Wireless Setup
Next

4.2.1 Time Zone Setup

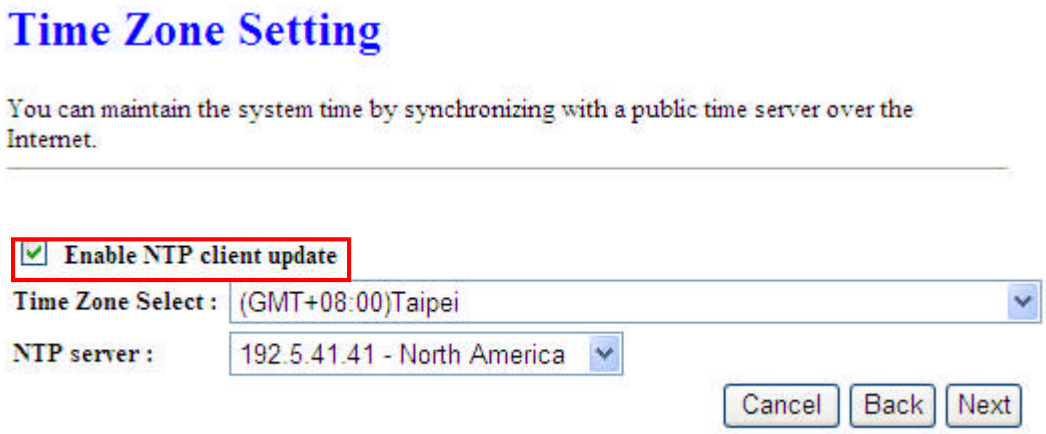

Select **Enable NTP client update** to maintain the system time.

4.2.2 LAN Interface Setup

If you are using **N+ Mini Broadband** Router with multiple PCs on your LAN, you could connect Ethernet switch with LAN port. You must assign a unique IP address to each device residing on your LAN. The LAN IP address identifies the router as a node on your network; that is, its IP address must be in the same subnet as the PCs on your LAN. The default LAN IP for the Internet Security Router is 192.168.1.1.

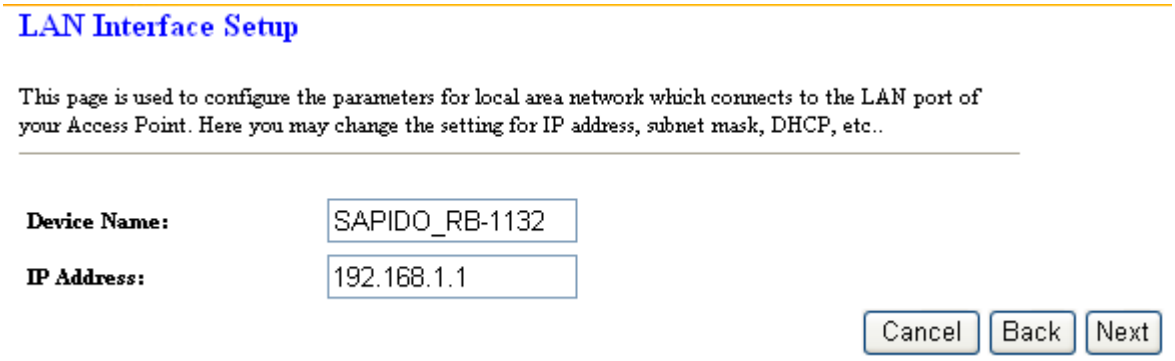
LAN Interface Setup
This page is used to configure the parameters for local area network which connects to the LAN port of your Access Point. Here you may change the setting for IP address, subnet mask, DHCP, etc..
Device Name:
SAPIDO_RB-1132
IP Address:
192.168.1.1
Cancel
Back
Next

For Gateway IP Address, the IP address 192.168.1.xxx (xxx can be any number between 1 and 254 that is not used by another device.) Please don't change the default LAN IP settings at this section until you have completed the rest of the configurations and confirm that your Internet connection is working.

Click on **Next** button to proceed.

4.2.3 WAN Setup

The WAN settings can be referred to as the Public setting. All IP information in the WAN settings is public IP addresses which are accessible on the Internet. N+ Mini Broadband Router supports 3 interfaces and 4 access types to WAN. Select one of the WAN connection modes required by your ISP in the following WAN Setup Configuration page, the WAN setup pages will vary depending on what kind of WAN Type you select.

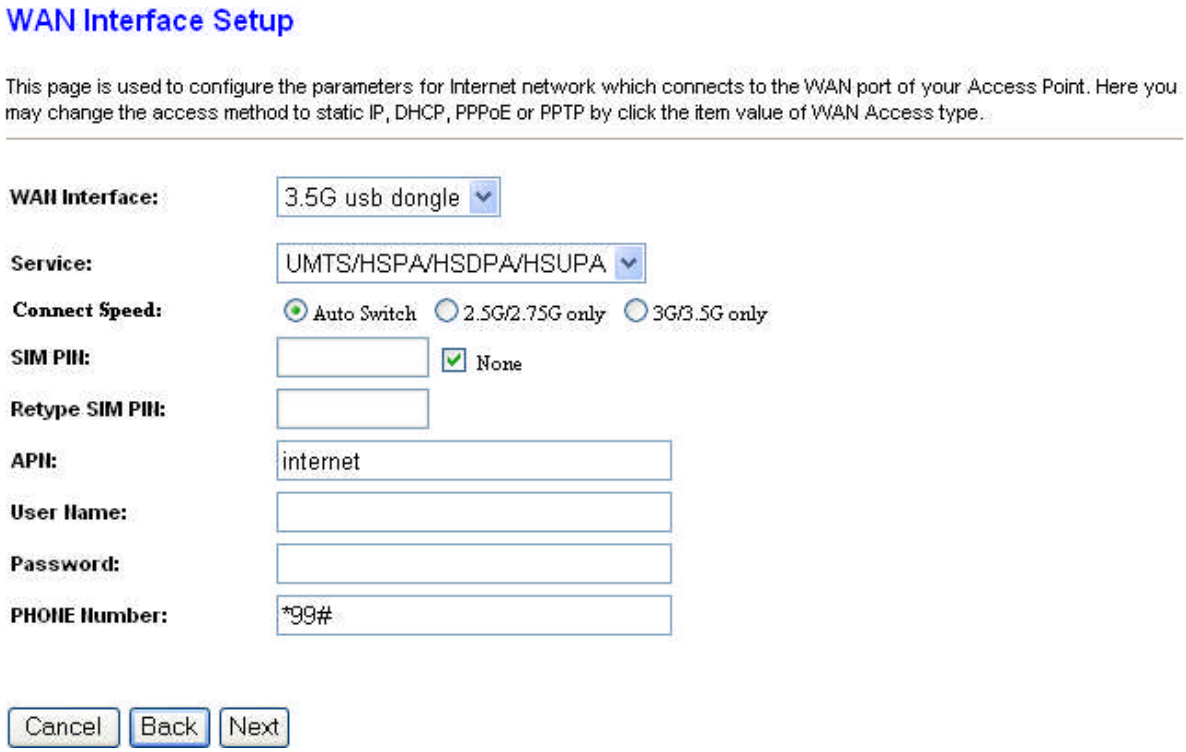

Choose your WAN Interface and Access WAN type as the above mentioned, and click **Next,** its associated settings will show up.

4.2.3.1 WAN Interface–WiMAX

If you are using WiMAX as the WAN Type, please select **WiMAX USB Dongle** and fill in the required information as follows to directly access Internet via connected WiMAX adapter.

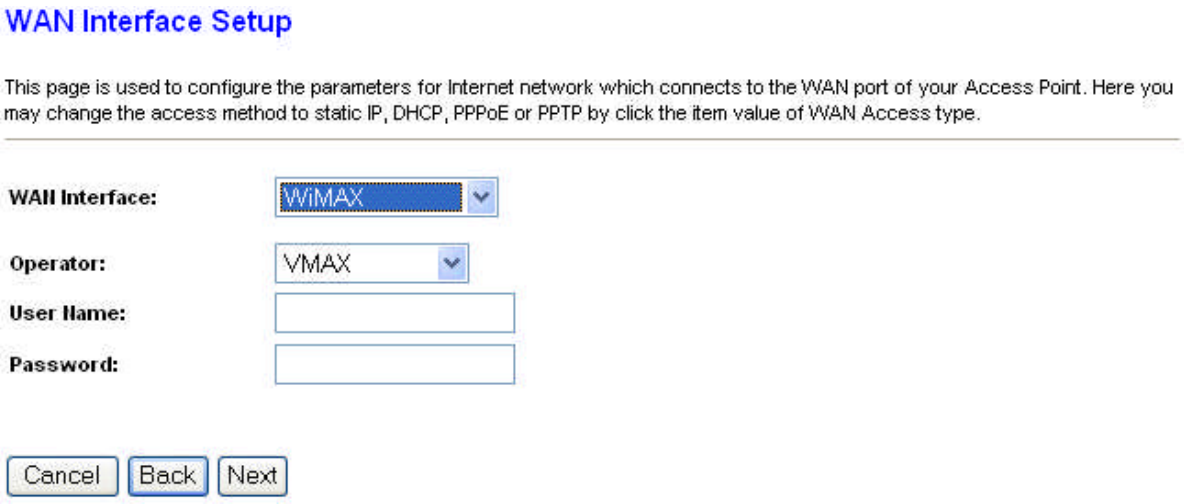
WAN Interface Setup
This page is used to configure the parameters for Internet network which connects to the WAN port of your Access Point. Here you may change the access method to static IP, DHCP, PPPoE or PPTP by click the item value of WAN Access type.
WAN Interface:
WiMAX
Operator:
VMAX
User Name:
Password:
Cancel
Back
Next

4.2.3.2 WAN Interface–3.5G (HSDPA/UMTS)

If you are using HSDPA/UMTS (3.5G connection) as the WAN Type, please select **3.5G USB Dongle** and fill in the required information as follows to directly access Internet via connected 3.5G adapter. At this moment, **Backup of Connection** is not available. When 3.5G signal cannot be reached, the system starts to search downward for 3/2.75/2.5G signals until none existed

.

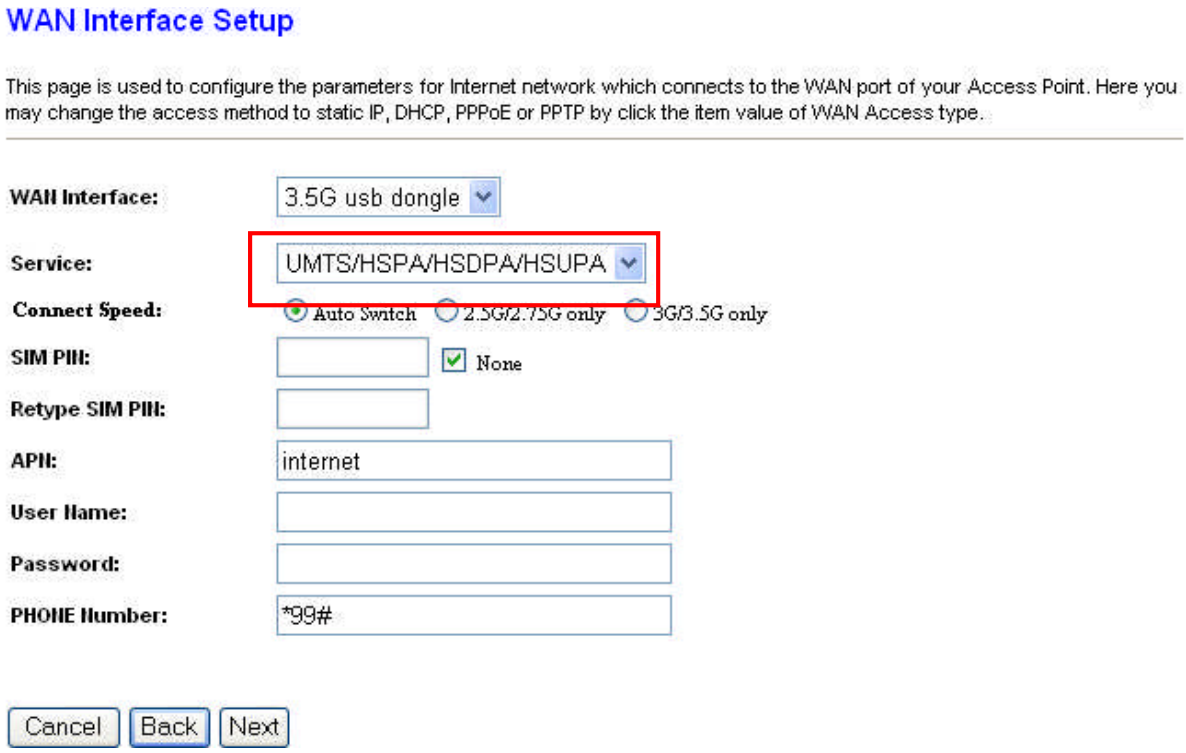

4.2.3.3 WAN Interface– Ethernet Port

If you are using an Ethernet cable to connect the Internet, please select **Ethernet port**.

WAN Interface Setup
This page is used to configure the parameters for Internet network which connects to the WAN port of your Access Point. Here you may change the access method to static IP, DHCP, PPPoE or PPTP by click the item value of WAN Access type.
WAN Interface:
Ethernet Port
WAN Access Type:
DHCP Client

4.2.3.4 WAN Interface– Wireless

If you are connecting the internet via wireless, please select **Wireless** and its associated settings will show up underneath at the same time.

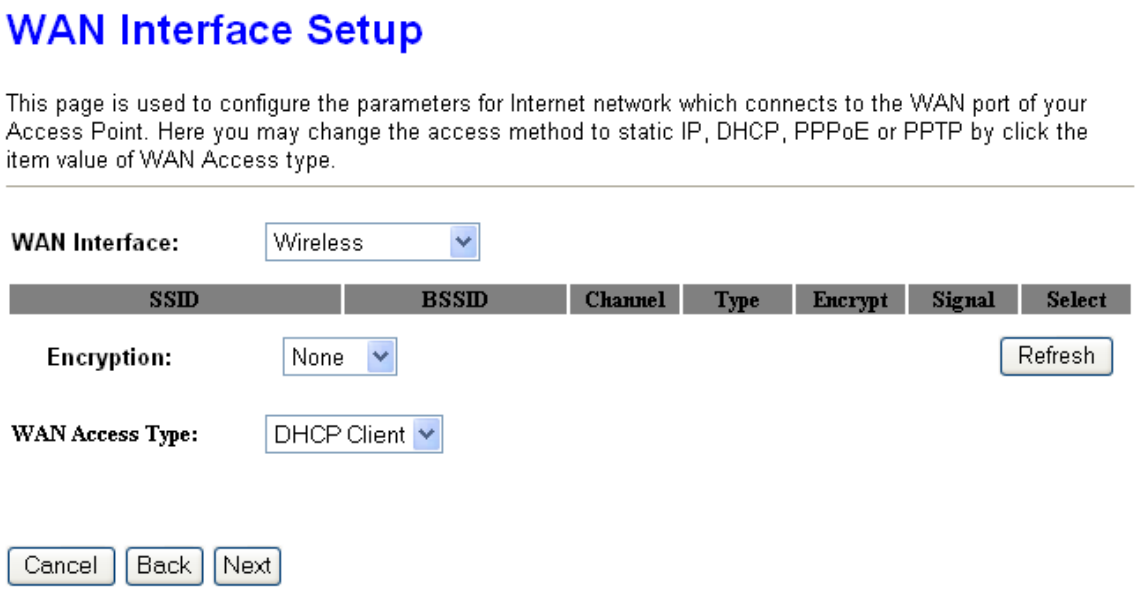

You can see a list of available Wireless networks. Select you preferred one to connect and the Encryption type form the drop-down list.

4.2.3.5 WAN Access Type – Static IP

Choose Static IP Address if all WAN IP information is provided to you by your ISP. You will need to enter the IP address, IP Netmask and IP gateway as provided. Each entered fields must be in the appropriate IP form, which are four IP octets separated by a dot (x.x.x.x). The Router will not accept the IP address if it is not in this format. Fill in the DNS information provided by your ISP; otherwise, **Domain Name** can't be used.

In particular, here provides 3G or 3.5G transmission rate when the 3.5G adapter is plugged, just check to apply for the backup. In other words, once Static IP connection is disconnected, the system automatically connects Internet via 3.5G adapter. If 3.5G signal is not available, it starts to search downward for 3/2.75/2.5G signals until none existed. The default interval between the two connection detection is 3 minutes. The interval range is from 1 to 60 minutes.

The 3.5G feature is working as mutual backup for other 3 WAN Types, and the required information is listed as follows, such as user name, password and SIM PIN etc. That is, setting up the interval time to auto detect whether the Internet connection is lost or not. If yes,

the system immediately switches to 3.5G Internet connection and will disconnect when the original Static IP connection recovers.

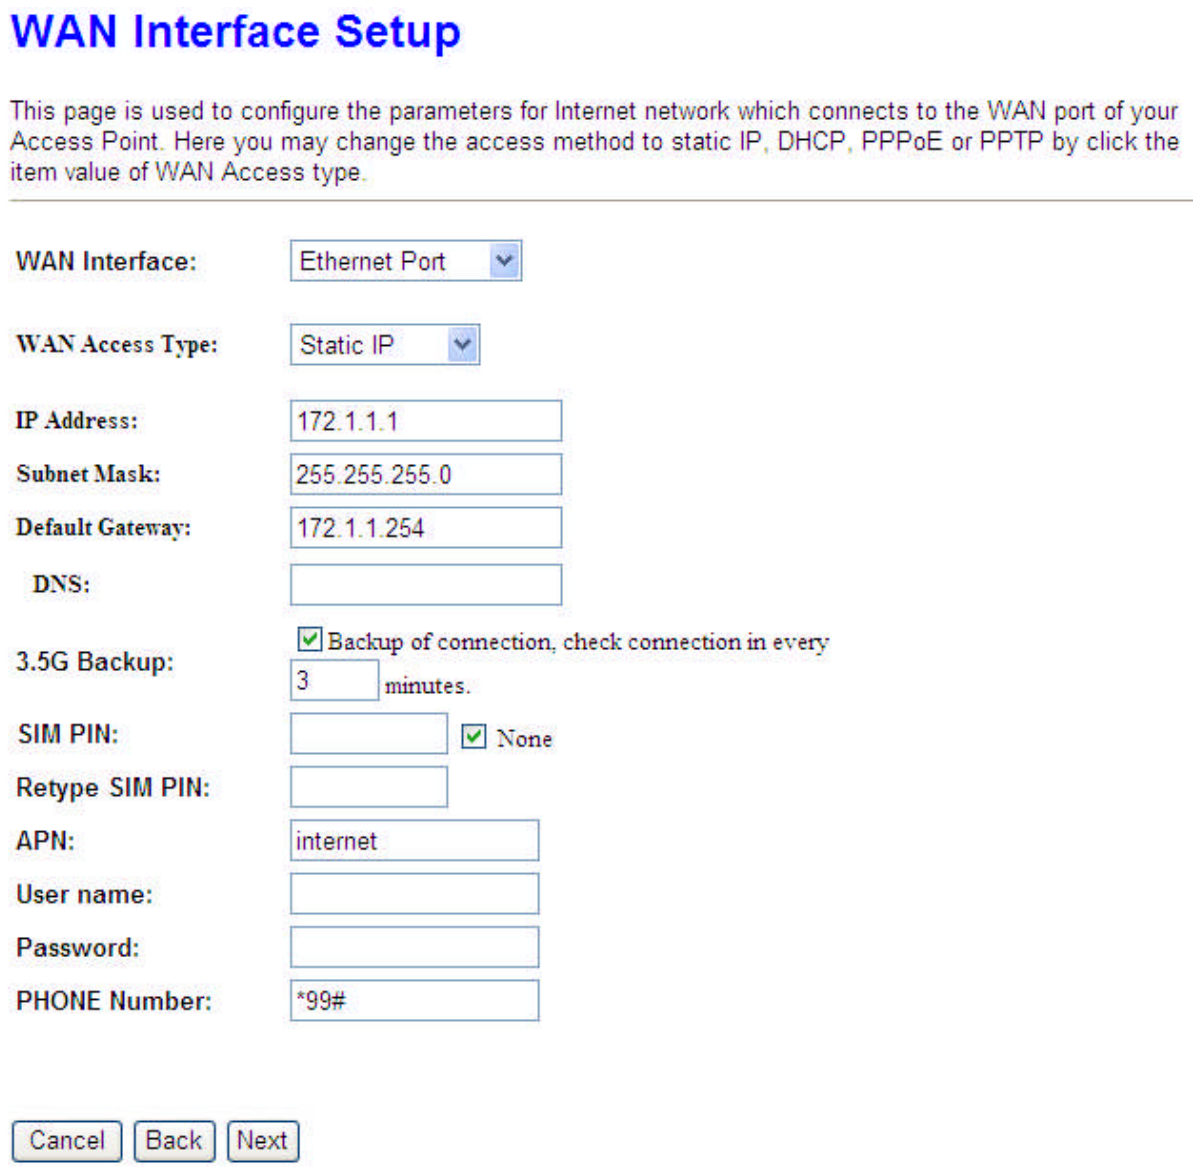

Click on **Next** button to go on next setting page.

4.2.3.6 WAN Access Type – Dynamic IP

Choose Dynamic IP to obtain IP address information automatically from your ISP. Select this option if your ISP does not give you any IP numbers to use. This option is commonly used for Cable modem services.

Apply 3G or 3.5G transmission rate for the backup. Once Dynamic IP connection is disconnected, the system automatically connects Internet via 3.5G adapter. If 3.5G signal is

not available, it starts to search downward for 3/2.75/2.5G signals until none existed.

Setting up the interval time to auto detect whether the Internet connection is lost or not. If yes, the system immediately switches to 3.5G Internet connection and will disconnect when the original Dynamic IP recovers.

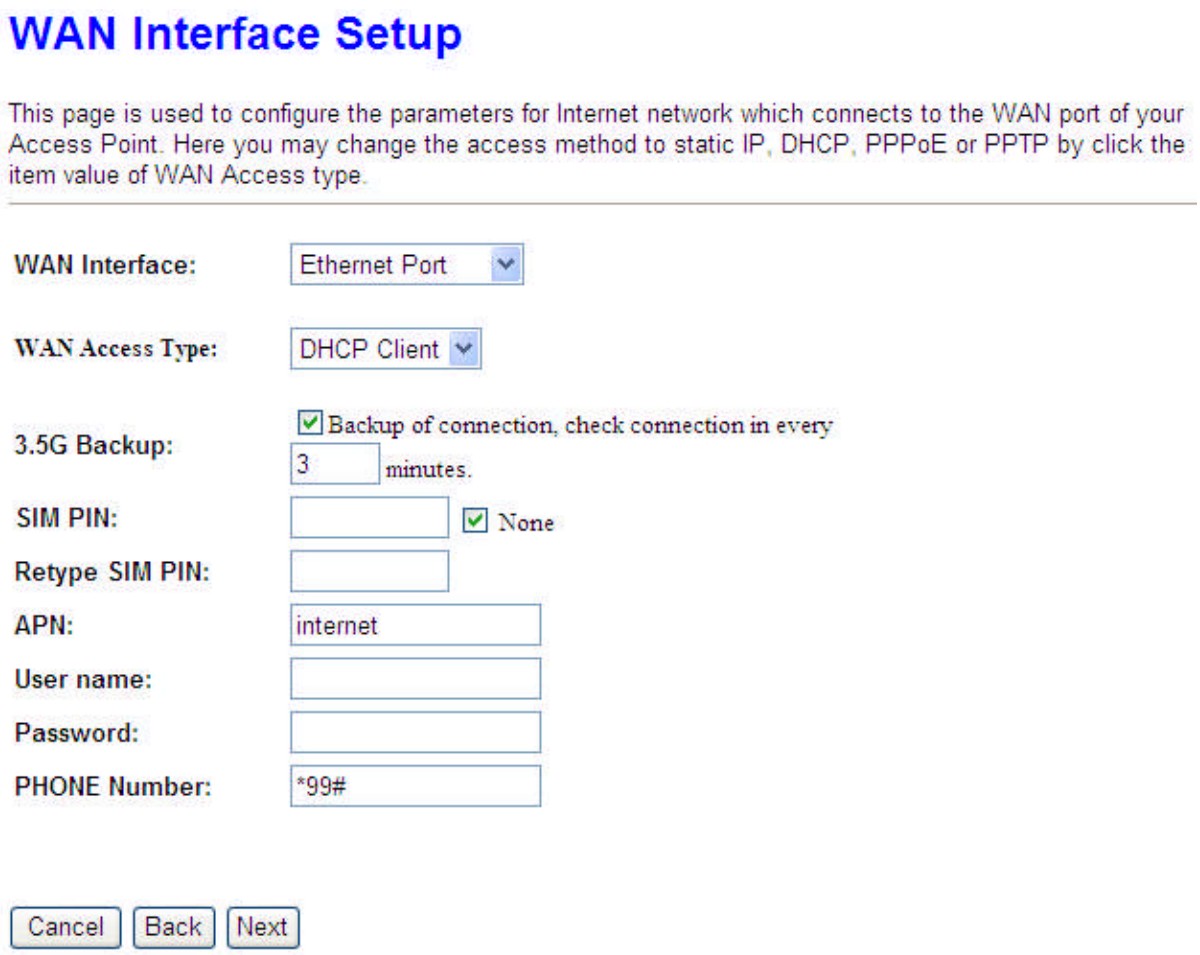

Click on **Next** button to go on next setting page.

4.2.3.7 WAN Access Type – PPPoE

This option is typically used for DSL services. Choose PPPoE (Point to Point Protocol over Ethernet) if your ISP uses PPPoE connection. Your ISP will provide you with a username and password.

Apply 3G or 3.5G transmission rate for the backup. In other words, once PPPoE connection is disconnected, the system automatically connects Internet via 3.5G adapter. If 3.5G signal

is not available, it starts to search downward for 3/2.75/2.5G signals until none existed.

Setting up the interval time to auto detect whether the Internet connection is lost or not. If yes, the system immediately switches to 3.5G Internet connection and will disconnect when the original PPPoE connection recovers.

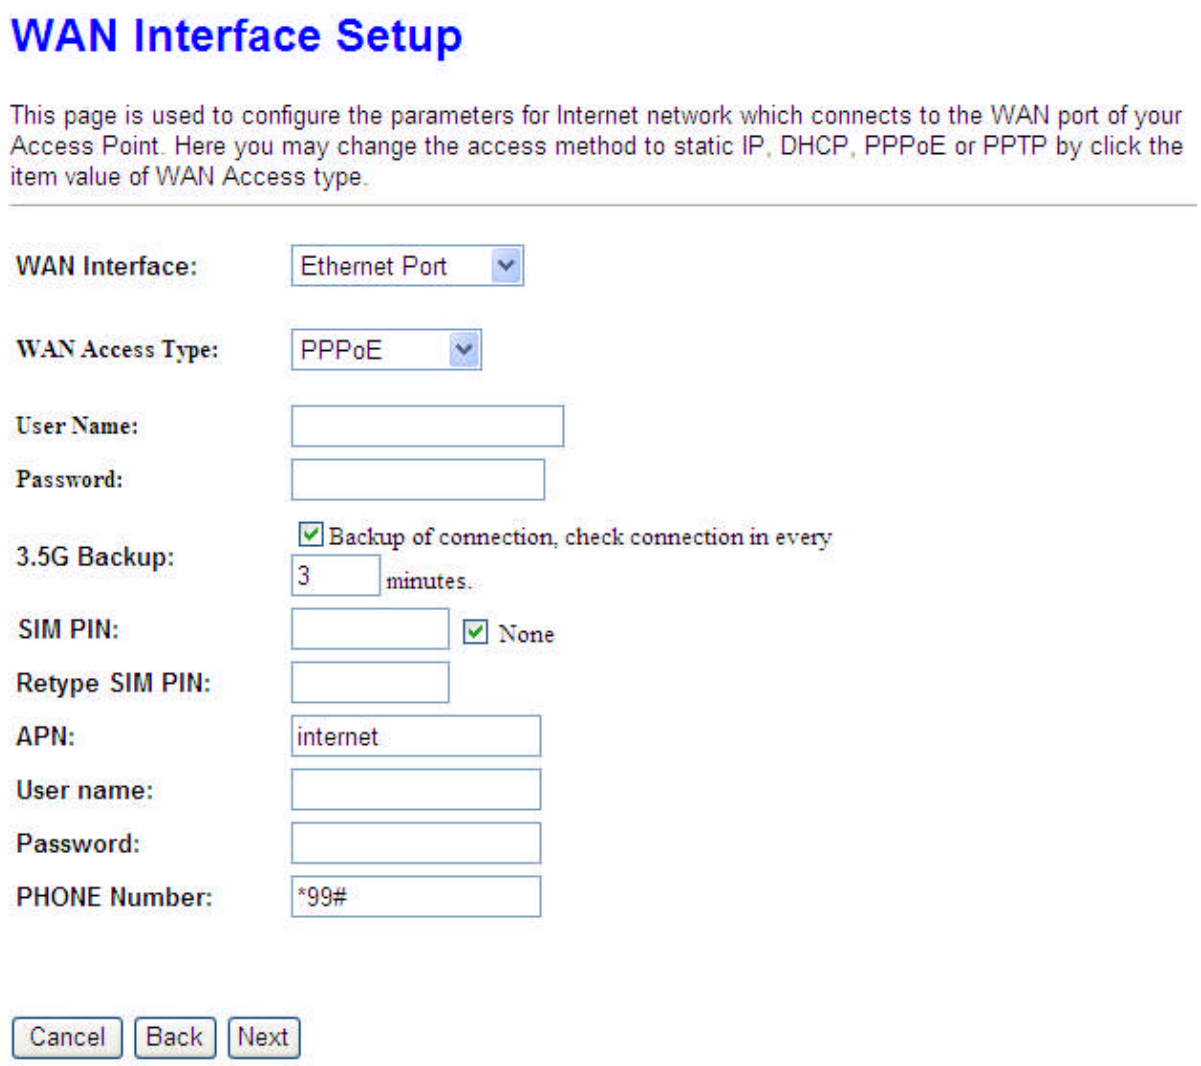

Click on **Next** button to go on next setting page.

4.2.3.8 WAN Access Type – PPTP

This option is typically used for DSL services. Some DSL service providers supply a special DSL modem. This kind of modem only supports the PPTP tunnel to access the Internet, you should create a PPTP tunnel that carries a PPP session and terminates on the DSL model. Once the tunnel has been established, this kind of DSL modem will forward the PPP session to the ISP. As long as the PPP session is connected, all the local users will be able to share this PPP session to access to the Internet.

Apply 3G or 3.5G transmission rate for the backup. Once Dynamic IP connection is disconnected, the system automatically connects Internet via 3.5G adapter. If 3.5G signal is not available, it starts to search downward for 3/2.75/2.5G signals until none existed.

Setting up the interval time to auto detect whether the Internet connection is lost or not. If yes, the system immediately switches to 3.5G Internet connection and will disconnect when the original PPTP connection recovers.

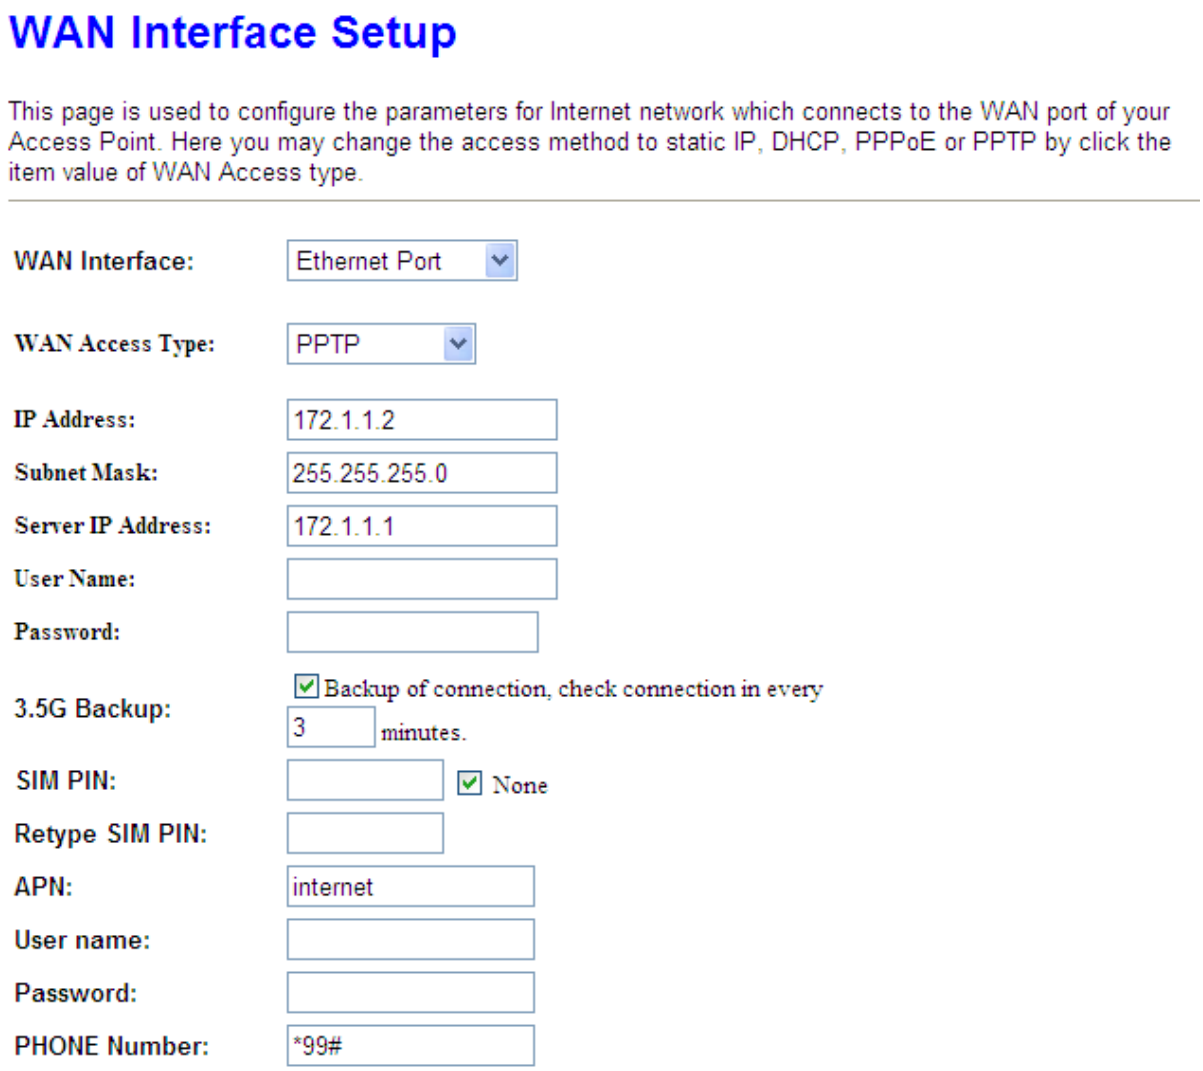

Click on **Next** button to go on next setting page.

4.2.3.9 WAN Access Type – L2TP

You can access a private network through the Internet or other public network by using a virtual private network (VPN) connection with the Layer Two Tunneling Protocol (L2TP). L2TP is an industry-standard Internet tunneling protocol with roughly the same functionality as the Point-to-Point Tunneling Protocol (PPTP).

Apply 3G or 3.5G transmission rate for the backup. Once Dynamic IP connection is disconnected, the system automatically connects Internet via 3.5G adapter. If 3.5G signal is not available, it starts to search downward for 3/2.75/2.5G signals until none existed.

Setting up the interval time to auto detect whether the Internet connection is lost or not. If yes, the system immediately switches to 3.5G Internet connection and will disconnect when the original PPTP connection recovers.

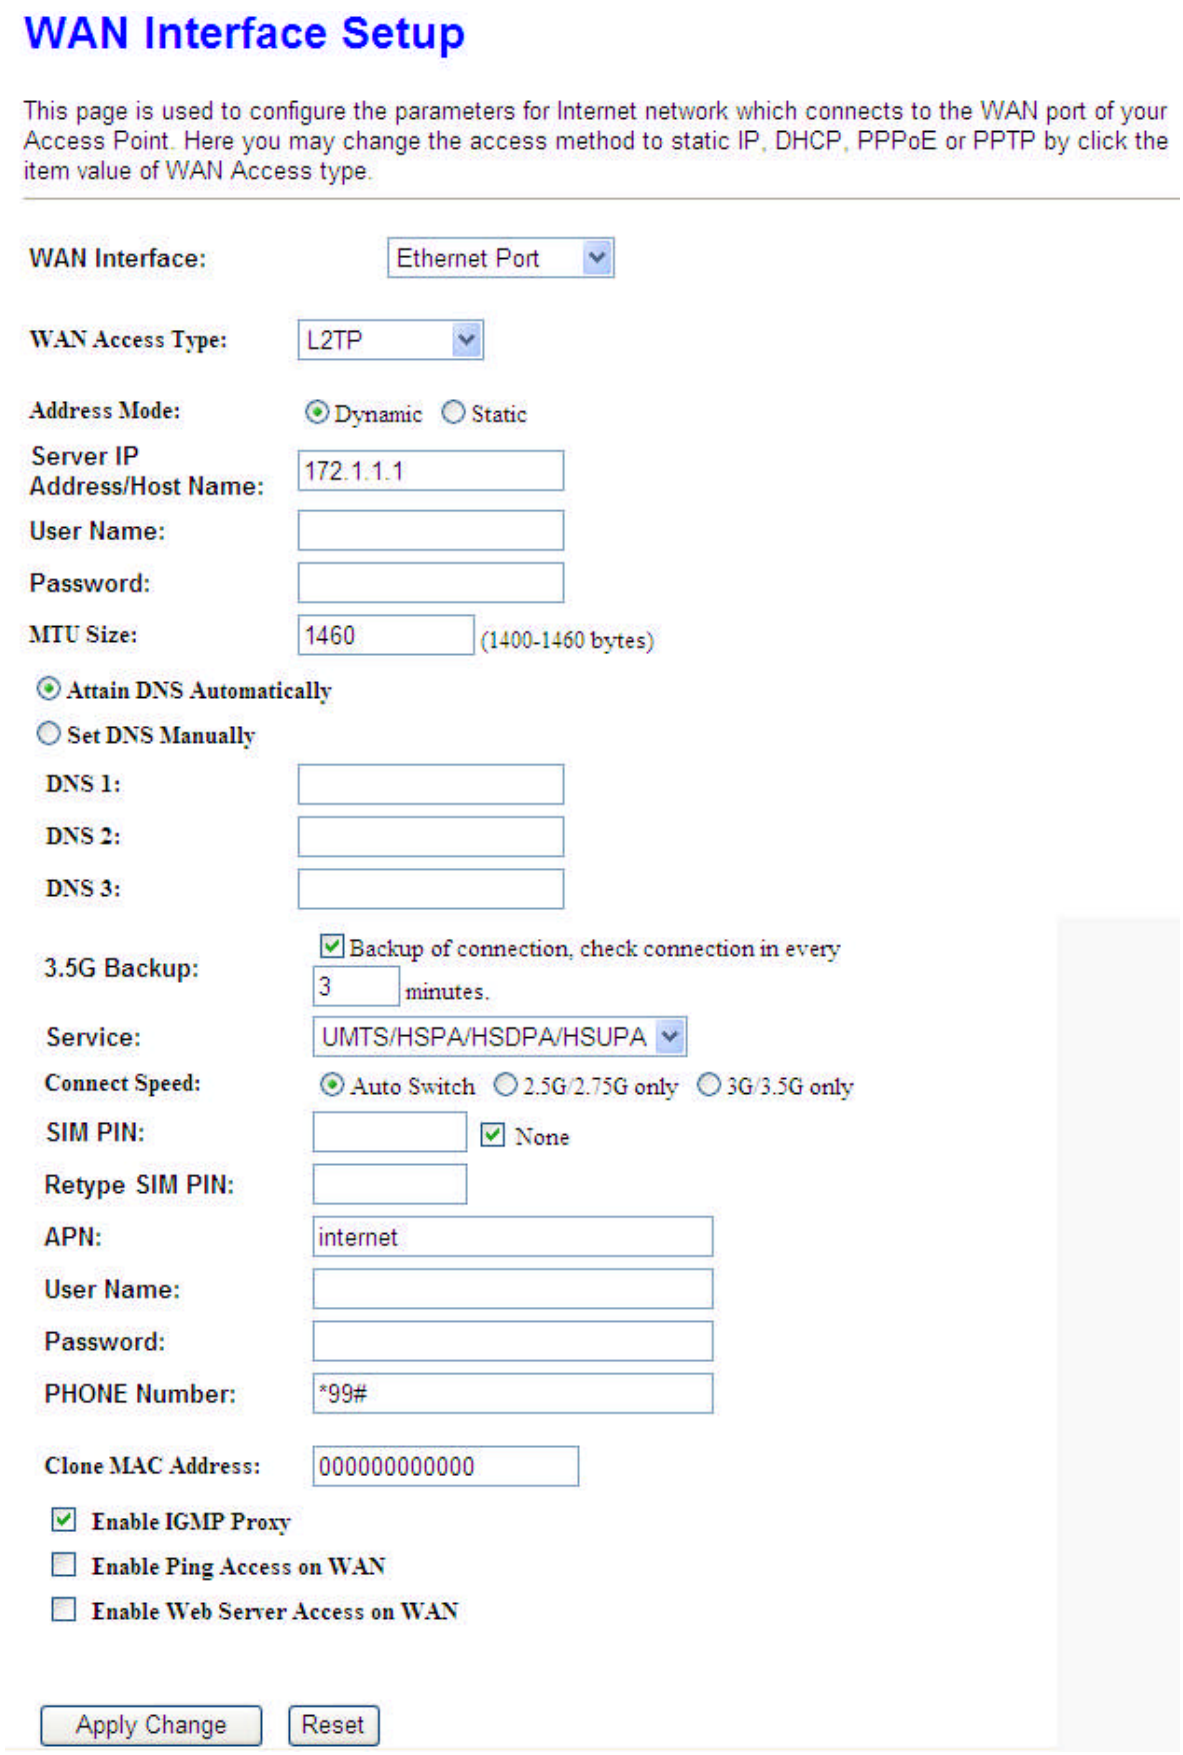

Click on **Next** button to go on next setting page.

4.2.3.10 Wireless Setup

First step is to name your SSID, and the default value is SAPIDO_Mobile_Hotspot. Please follow the illustrations below to proceed.

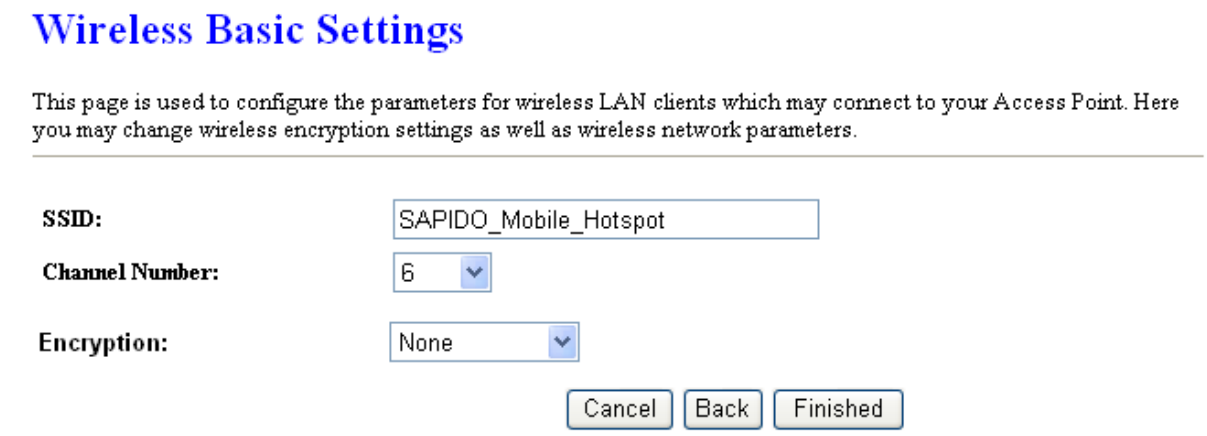
Wireless Basic Settings
This page is used to configure the parameters for wireless LAN clients which may connect to your Access Point. Here you may change wireless encryption settings as well as wireless network parameters.
SSID:
SAPIDO_Mobile_Hotspot
Channel Number:
6
Encryption:
None
Cancel
Back
Finished

4.2.3.11 Wireless Security Setup

The security function is provided to prevent the connection requests from unauthorized wireless clients. As the **Encryption Type**, select WEP or WPA can protect your data from eavesdroppers, if you do not need the encryption, select “None” to skip the following setting.

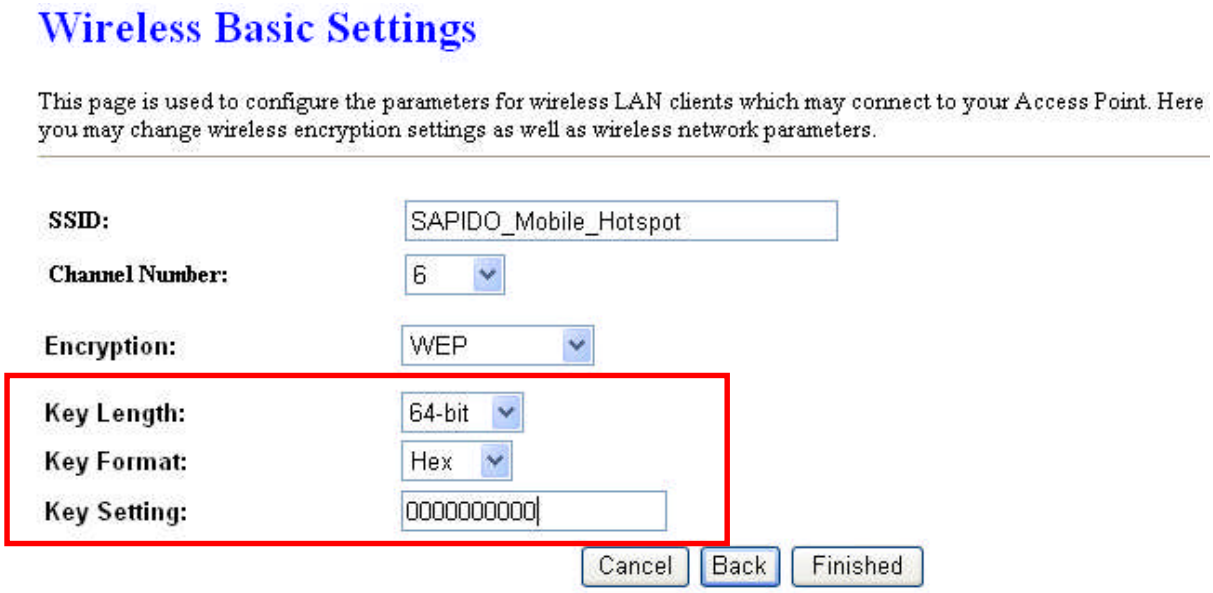

a. Encrypt Type - WEP

N+ Mini Broadband Router supports both 64-bit and 128-bit encryption using the Wired Equivalent Privacy (WEP) algorithm. Select the type of encryption you want to use (64 or 128 bit) and configure one to four WEP Keys. The “1280bit” method is more secure than the “64-bit”.

Key Length: For 64bits WEP key, 10 hexadecimal digitals leading by **0x** can be entered. For 128bits WEP key, 26 hexadecimal digits leading by **0x** can be entered.

Key Format: The keys can be entered in ASCII or Hexadecimal. Select the item from drop-down list you wish to use.

Key Setting: A password is requested here.

Note: 128 bits WEP is most secure, but has more encryption/decryption overhead. Note that all wireless devices must support the same WEP encryption bit size and have the same key.

b. Encrypt Type - WPA, WPA2 & WPA2 Mixed

The WPA and WPA2 encrypt each frame transmitted from the radio using the pre-shared key (PSK) which entered from this panel or a key got dynamically through 802.1x.

WPA (TKIP) and WPA2 (TKIP): Allow the access from WPA clients simultaneously and the encryption keys are given from PSK respectively.

Pre-Shared Key Format: The keys can be entered in ASCII, 8~63 ASCII characters, for example, “0123456789ABCD….” or Hex, 64 bytes hexadecimal digits (0~9, a~f, and A~F). Select the item from drop-down list you wish to use and enter your **Pre-Shared Key.**

After checking each above and choose the suitable item by demand, click **Finished** to proceed.

4.2.4 Basic Setup Complete

The Basic Setup has been completed successfully when you see this screen.

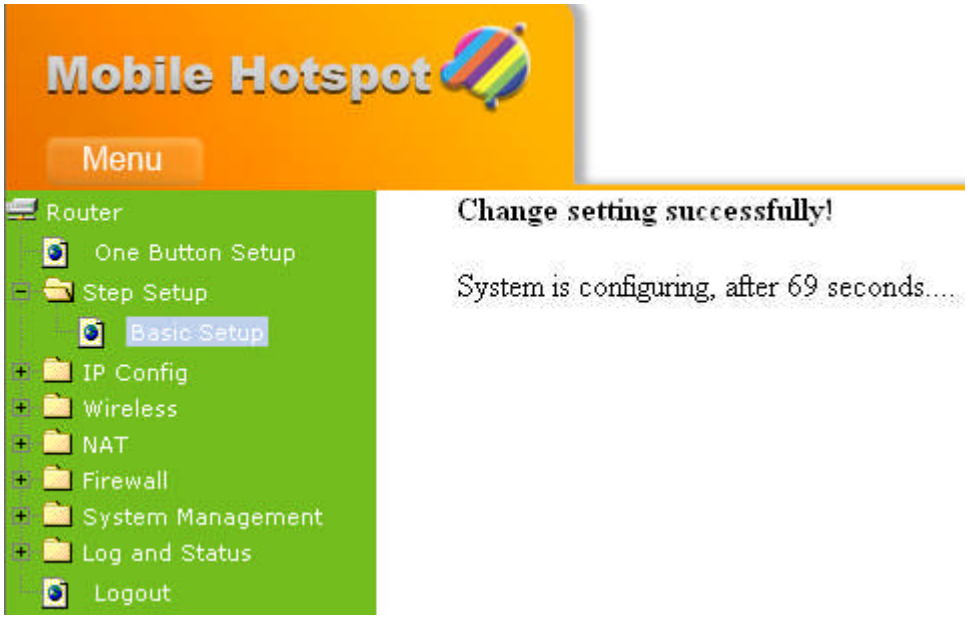

The system will reboot automatically and go to the product's diagram homepage. You may connect to Internet via wired or wireless at this moment according to above settings.

4.3 AP Mode

Under AP Mode, the N+ Mini Broadband Router supports 1 LAN port as Bridge, and user can connect to this Router via LAN port and provide the lower level wired or wireless internet connections. NAT function is disabled under AP mode. The N+ Mini Broadband Router connects the upper level device only through the Ethernet port and gets its assigned IP address. If not, the N+ Mini Broadband Router will use the default IP or assigned by the user.

4.3.1 Switch to AP Mode

Switch to AP mode and plug in power.

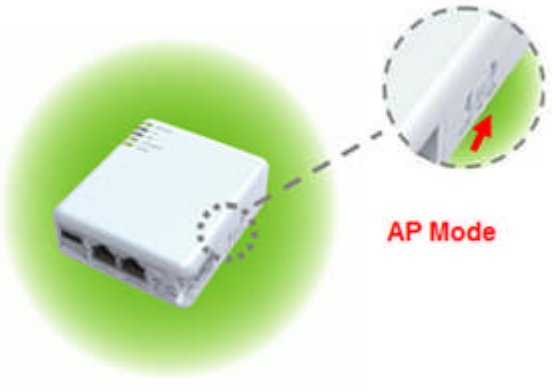

Note: 1. Before sliding the switch modes, please power-off the router firstly. Moreover, please stay over 5 seconds between power-off / power-on condition.
2. Switching the mode while power is on will make the router crush, and cause the hardware damage and information lost.

4.4 Basic Setup

Click **Step Setup** on the left of the main menu. Then you'll see the full functionality selection screen appears and detailed settings for each item.

Click on **Next** button to go on next setting page.

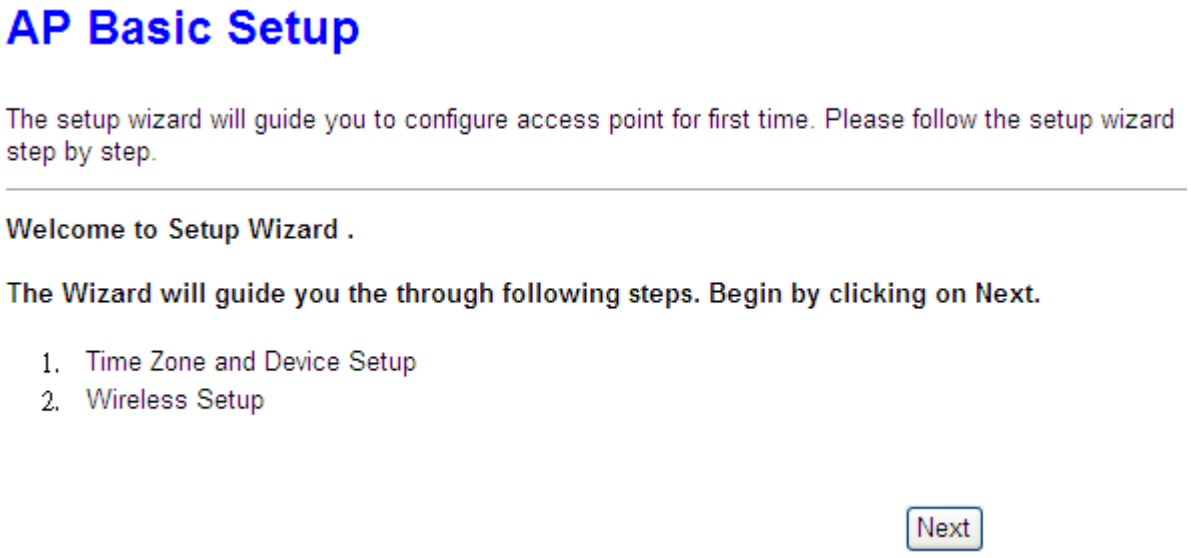
AP Basic Setup
The setup wizard will guide you to configure access point for first time. Please follow the setup wizard step by step.
Welcome to Setup Wizard .
The Wizard will guide you the through following steps. Begin by clicking on Next.
1. Time Zone and Device Setup
2. Wireless Setup
Next

4.4.1 Time Zone Setup

Select **Enable NTP client update** to maintain the system time.

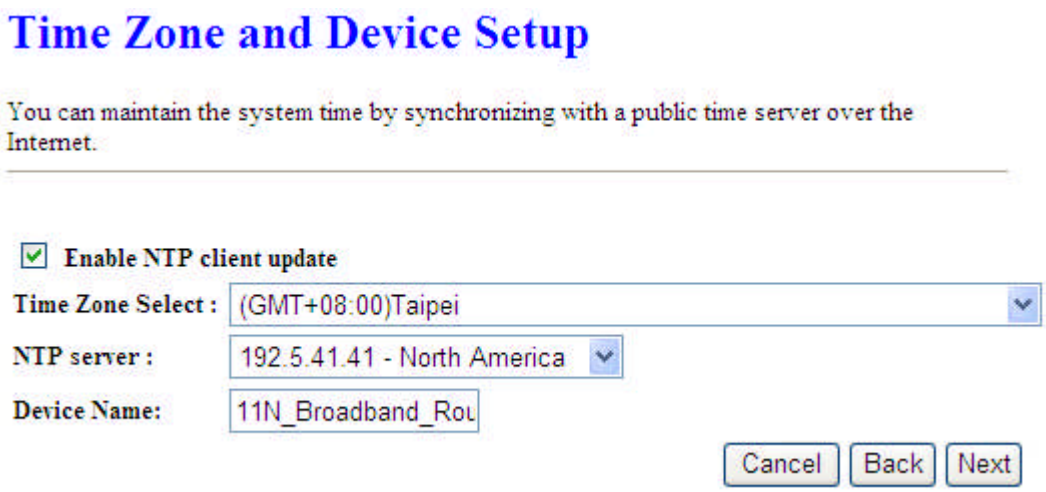

4.4.2 Wireless Setup

First step is to name your SSID, and the default value is SAPIDO_Mobile_Hotspot. Please follow the illustrations below to proceed.

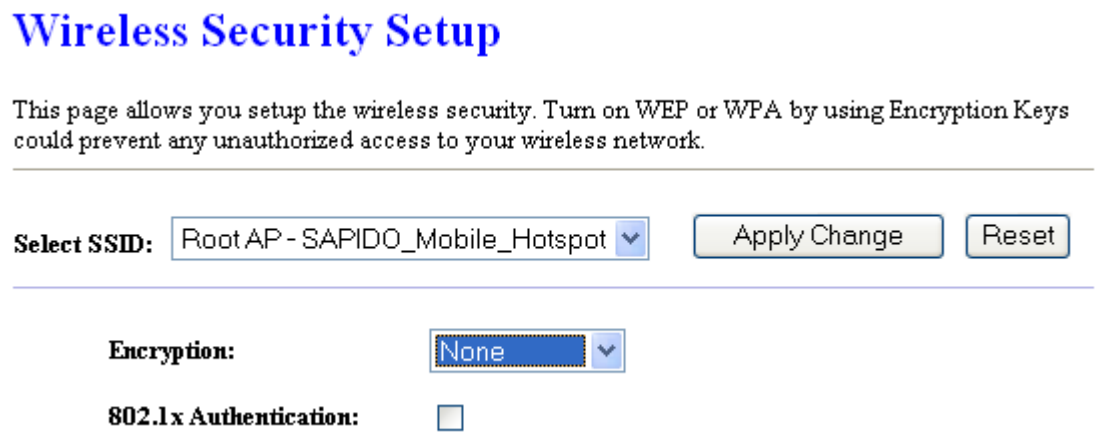
Wireless Security Setup
This page allows you setup the wireless security. Turn on WEP or WPA by using Encryption Keys could prevent any unauthorized access to your wireless network.
Select SSID:
Root AP - SAPIDO_Mobile_Hotspot
Apply Change
Reset
Encryption:
None
802.1x Authentication:

After checking each above and choose the suitable item by demand, click **Next** to proceed.

4.4.3 Wireless Security Setup

The security function is provided to prevent the connection requests from unauthorized wireless clients. As the **Encryption Type**, select WEP or WPA can protect your data from eavesdroppers, if you do not need the encryption, select “None” to skip the following setting.

a. WEP Encryption

N+ Mini Router supports both 64-bit and 128-bit encryption using the Wired Equivalent Privacy (WEP) algorithm. Select the type of encryption you want to use (64 or 128 bit) and configure one to four WEP Keys. The “1280bit” method is more secure than the “64-bit”.

Key Length: For 64bits WEP key, 10 hexadecimal digitals leading by **0x** can be entered. For 128bits WEP key, 26 hexadecimal digits leading by **0x** can be entered.

Key Format: The keys can be entered in ASCII or Hexadecimal. Select the item from drop-down list you wish to use.

Key Setting: A password is requested here.

Note: 128 bits WEP is most secure, but has more encryption/decryption overhead. Note that all wireless devices must support the same WEP encryption bit size and have the same key.

b. Encrypt Type – WPA and WPA2 WPA、WPA2 & WPA2 Mixed

The WPA and WPA2 encrypt each frame transmitted from the radio using the

pre-shared key (PSK) which entered from this panel or a key got dynamically through 802.1x.

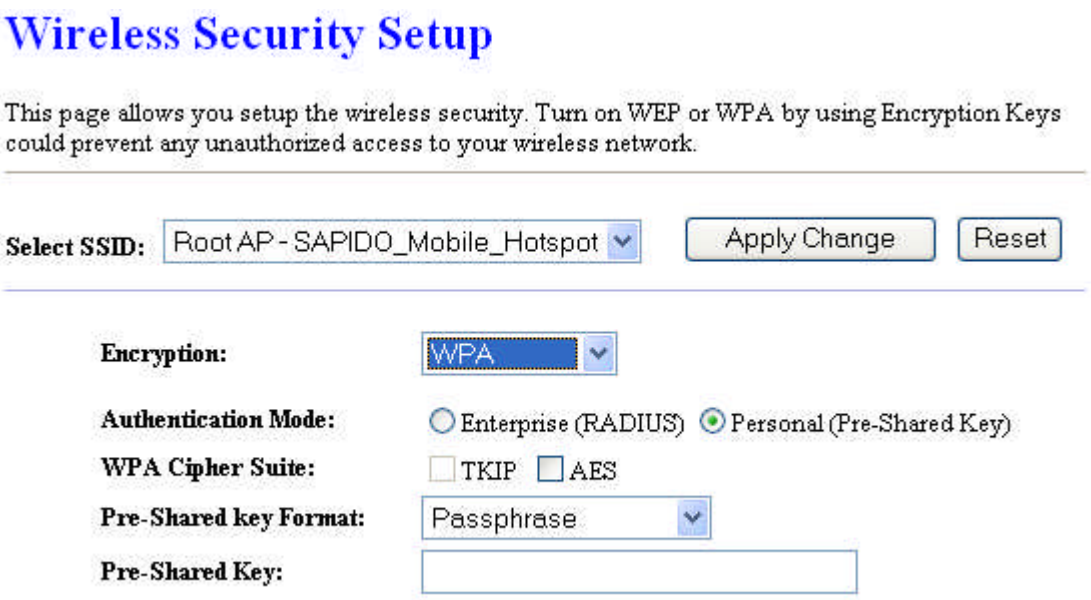

WPA (TKIP) and WPA2 (TKIP): Allow the access from WPA clients simultaneously and the encryption keys are given from PSK respectively.

Pre-Shared Key Format: The keys can be entered in ASCII, 8~63 ASCII characters, for example, “0123456789ABCD….” or Hex, 64 bytes hexadecimal digits (0~9, a~f, and A~F). Select the item from drop-down list you wish to use and enter your Pre-Shared Key.

After checking each above and choose the suitable item by demand, click **Finished** to proceed.

4.4.4 Basic Setup Complete

The Basic Setup has been completed successfully when you see this screen.

Change setting successfully!

System is configuring, after 69 seconds....

4.5 WiFi AP Mode

As WiFi AP Mode, N+ Mini Broadband Router will be a bridge and support a wireless LAN. NAT function is disabled under WiFi AP mode. The N+ Mini Broadband Router connects the upper level device wirelessly and gets its assigned IP address. If not, the N+ Mini Broadband Router will use the default IP or assigned by the user.

4.5.1 Switch to WiFi AP Mode

Switch to WiFi AP mode and plug in power.

Note: 1. Before sliding the switch modes, please power-off the router firstly. Moreover, please stay over 5 seconds between power-off / power-on condition.
2. Switching the mode while power is on will make the router crush, and cause the hardware damage and information lost.

4.6 Basic Setup

Click **Step Setup** on the left of the main menu. Then you'll see the full functionality selection screen appears and detailed settings for each item, including "**Basic**" and "**Application**" two parts.

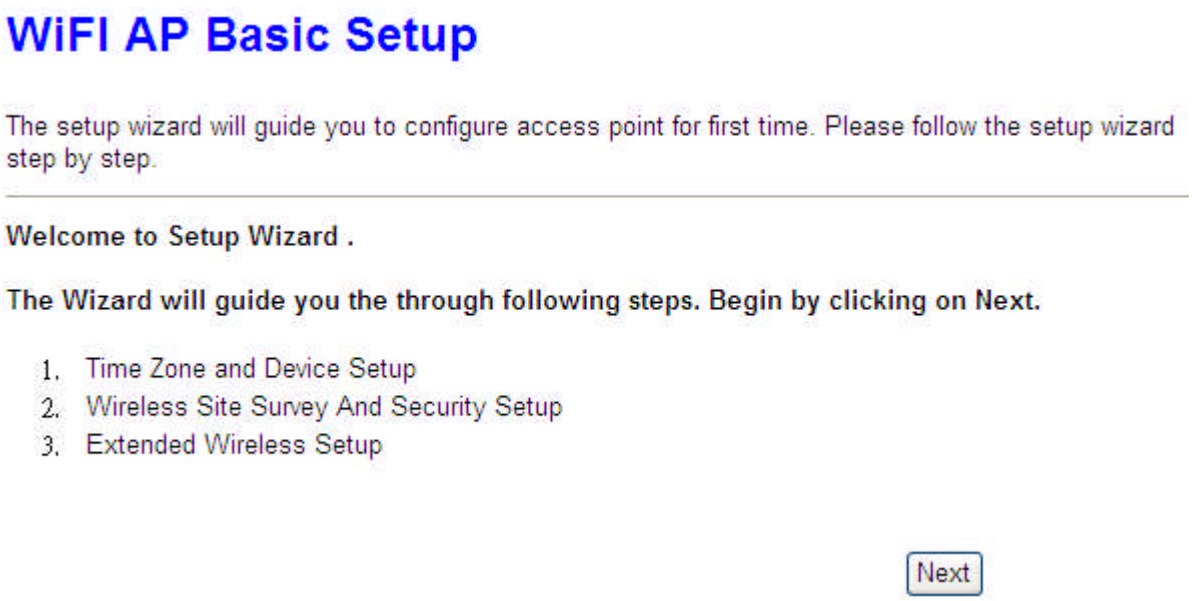
WiFI AP Basic Setup
The setup wizard will guide you to configure access point for first time. Please follow the setup wizard step by step.
Welcome to Setup Wizard .
The Wizard will guide you the through following steps. Begin by clicking on Next.
1. Time Zone and Device Setup
2. Wireless Site Survey And Security Setup
3. Extended Wireless Setup
Next

Click on **Next** button to go on next setting page.

4.6.1 Time Zone Setup

Select **Enable NTP client update** to maintain the system time.

4.6.2 Wireless Site Survey And Security Setup

Search for available wireless APs to access Internet. Click **Refresh** to show the information.

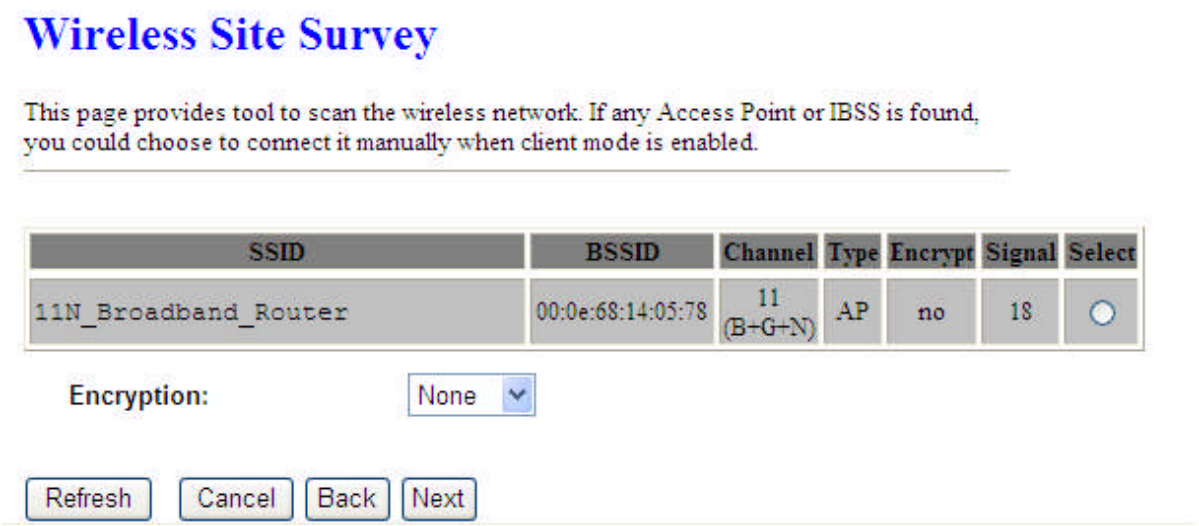

Select the preferred AP for connection, for example, 11N_Broadband__Router as above, and click **Next** to continue.

4.6.3 Extend Wireless Setup

The security function is provided to prevent the connection requests from unauthorized wireless clients. As the **Encryption Type**, select WEP or WPA can protect your data from eavesdroppers, if you do not need the encryption, select “None” to skip the following setting.

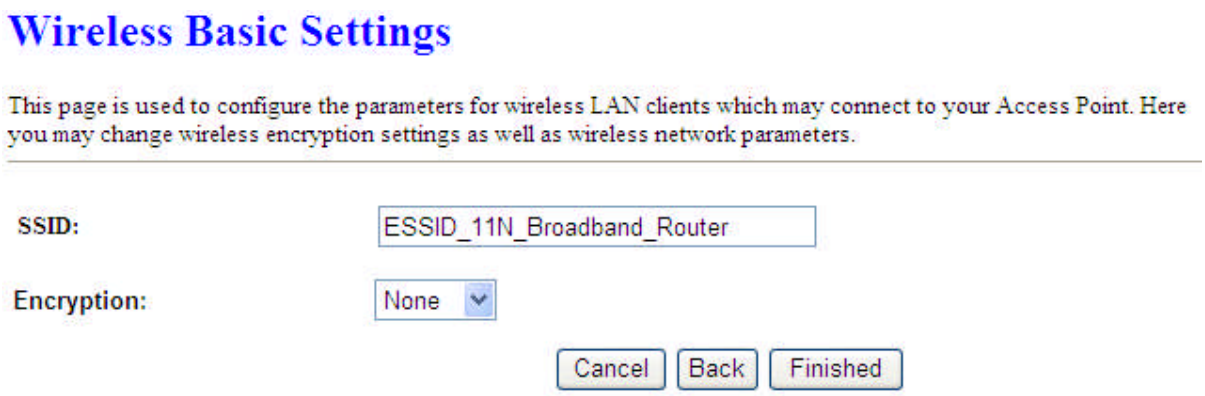
Wireless Basic Settings
This page is used to configure the parameters for wireless LAN clients which may connect to your Access Point. Here you may change wireless encryption settings as well as wireless network parameters.
SSID:
ESSID_11N_Broadband_Router
Encryption:
None
Cancel
Back
Finished

a. WEP Encryption

N+ Mini Broadband Router supports both 64-bit and 128-bit encryption using the Wired Equivalent Privacy (WEP) algorithm. Select the type of encryption you want to

use (64 or 128 bit) and configure one to four WEP Keys. The “1280bit” method is more secure than the “64-bit”.

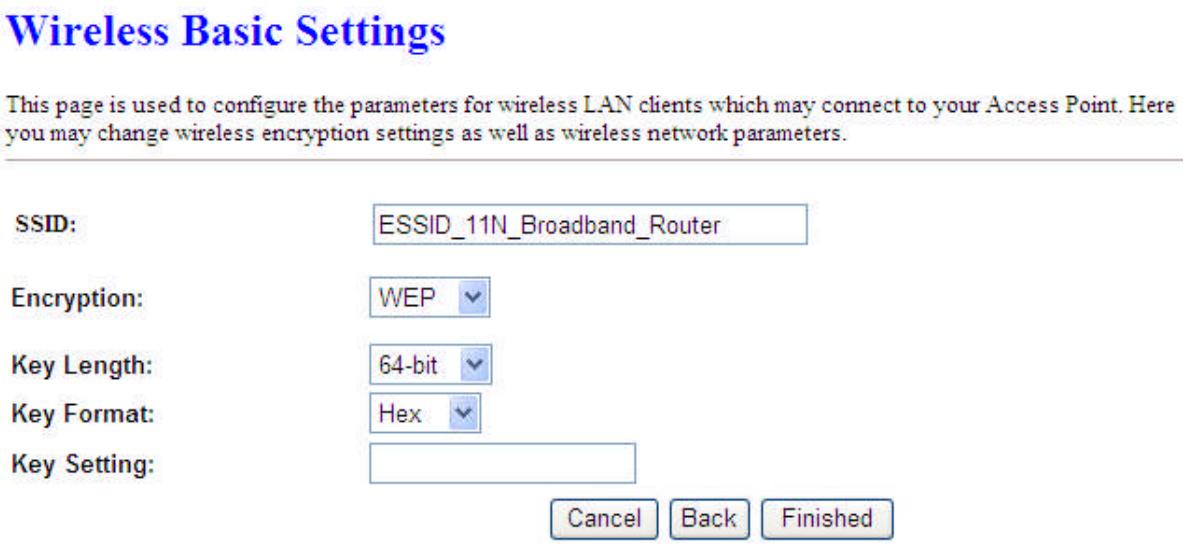

Key Length: For 64bits WEP key, 10 hexadecimal digitals leading by **0x** can be entered. For 128bits WEP key, 26 hexadecimal digits leading by **0x** can be entered.

Key Format: The keys can be entered in ASCII or Hexadecimal. Select the item from drop-down list you wish to use.

Key Setting: A password is requested here.

Note: 128 bits WEP is most secure, but has more encryption/decryption overhead. Note that all wireless devices must support the same WEP encryption bit size and have the same key.

b. Encrypt Type – WPA and WPA2 WPA、WPA2 & WPA2 Mixed

The WPA and WPA2 encrypt each frame transmitted from the radio using the pre-shared key (PSK) which entered from this panel or a key got dynamically through 802.1x.

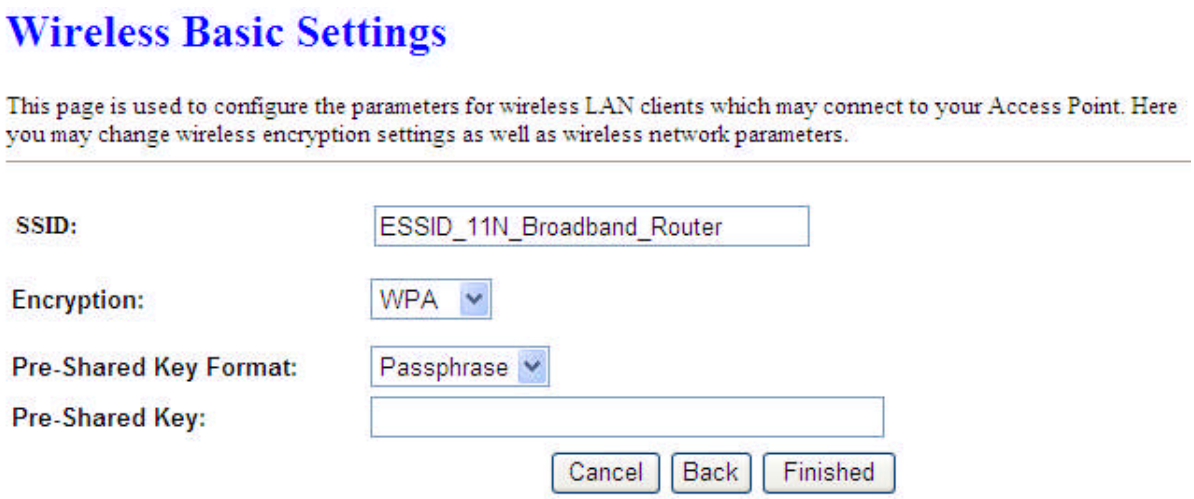
Wireless Basic Settings
This page is used to configure the parameters for wireless LAN clients which may connect to your Access Point. Here you may change wireless encryption settings as well as wireless network parameters.
SSID:
ESSID_11N_Broadband_Router
Encryption:
WPA
Pre-Shared Key Format:
Passphrase
Pre-Shared Key:
Cancel
Back
Finished

WPA (TKIP) and WPA2 (TKIP): Allow the access from WPA clients simultaneously and the encryption keys are given from PSK respectively.

Pre-Shared Key Format: The keys can be entered in ASCII, 8~63 ASCII characters, for example, “0123456789ABCD….” or Hex, 64 bytes hexadecimal digits (0~9, a~f, and A~F). Select the item from drop-down list you wish to use and enter your Pre-Shared Key.

After checking each above and choose the suitable item by demand, click **Finished** to proceed.

4.6.4 Quick Setup Complete

The Basic Setup has been completed successfully when you see this screen.

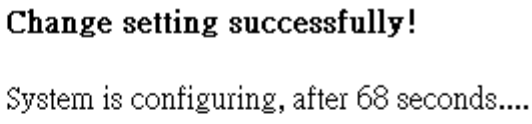

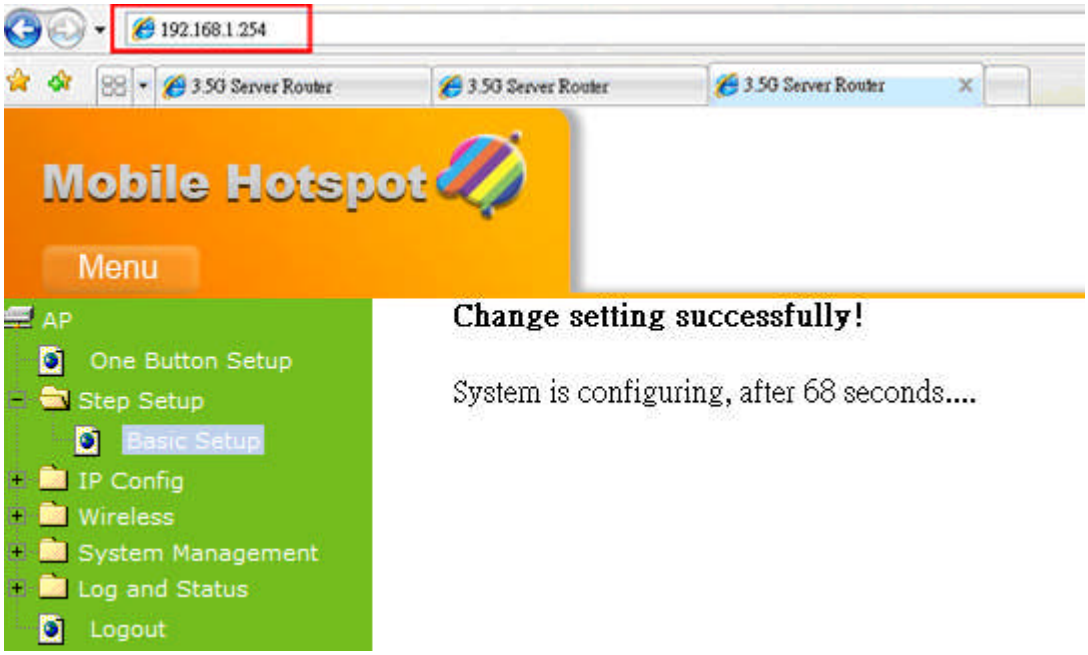
192.168.1.254
3.5G Server Router
3.5G Server Router
3.5G Server Router
Mobile Hotspot
Menu
AP
One Button Setup
Step Setup
Basic Setup
IP Config
Wireless
System Management
Log and Status
Logout
Change setting successfully!
System is configuring, after 68 seconds....

Chapter 5 Advanced Configuration for Router Mode

5.1 IP Configuration

This function allows you to add routing rules into N+ Mini Broadband Router. It is useful if you connect several computers behind N+ Mini Broadband Router to share the same connection to Internet.

5.1.1 WAN

Select **WAN** under the **IP Config** menu. N+ Mini Broadband Router supports 3 interfaces and 4 access types. Follow the instructions below for each to set up accordingly.

Choose your WAN Interface and WAN type, and click **Next,** its associated settings will show up.

5.1.1.1 WAN Interface–WiMAX

If you are using WiMAX as the WAN Type, please select **WiMAX USB Dongle**.

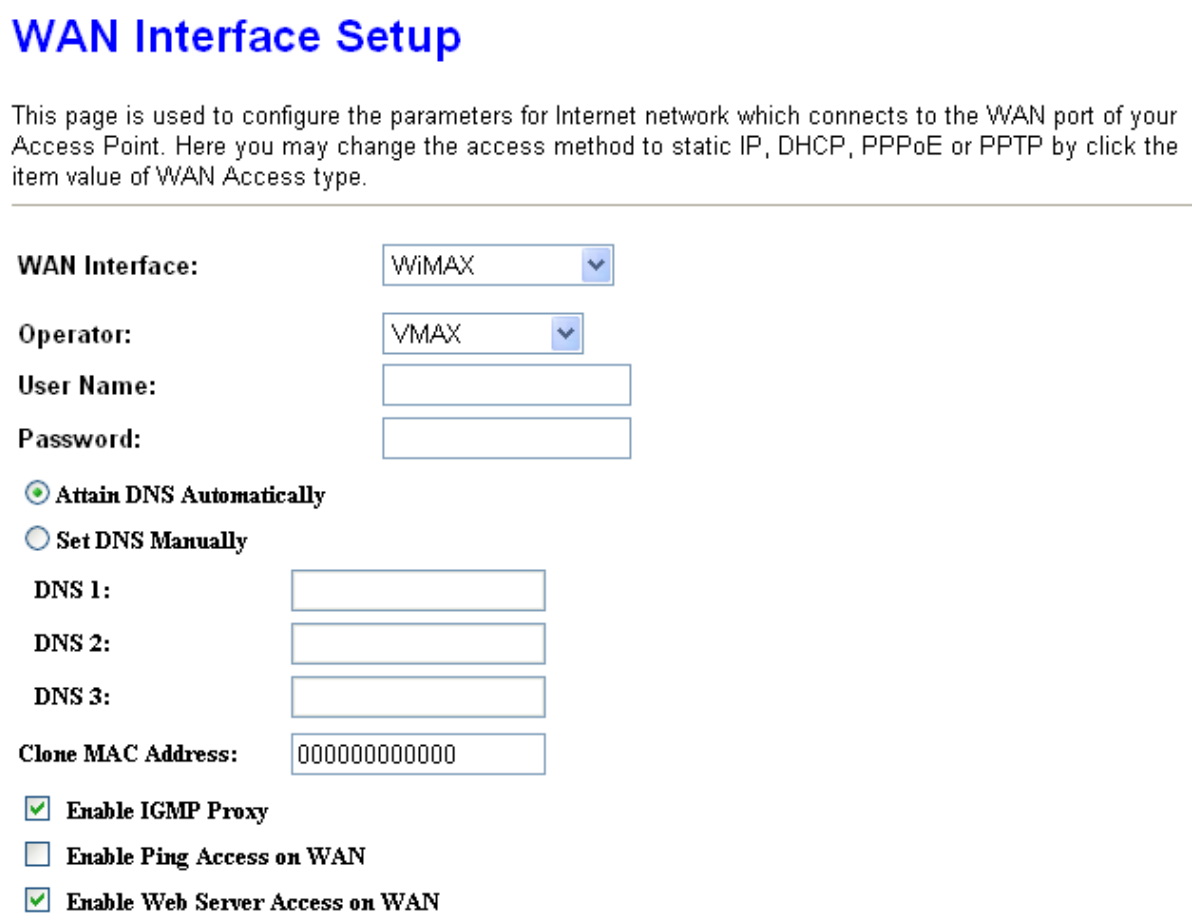
WAN Interface Setup
This page is used to configure the parameters for Internet network which connects to the WAN port of your Access Point. Here you may change the access method to static IP, DHCP, PPPoE or PPTP by click the item value of WAN Access type.
WAN Interface:
WiMAX
Operator:
VMAX
User Name:
Password:
Attain DNS Automatically
Set DNS Manually
DNS 1:
DNS 2:
DNS 3:
Clone MAC Address:
000000000000
Enable IGMP Proxy
Enable Ping Access on WAN
Enable Web Server Access on WAN

5.1.1.2 WAN Interface–3.5G (HSDPA/UMTS)

If you are using HSDPA/UMTS (3.5G connection) as the WAN Type, please select **3.5G USB Dongle.** At this moment, **Backup of Connection** is not available. When 3.5G signal cannot be reached, the system starts to search downward for 3/2.75/2.5G signals until none existed.

WAN Interface Setup

This page is used to configure the parameters for Internet network which connects to the WAN port of your Access Point. Here you may change the access method to static IP, DHCP, PPPoE or PPTP by click the item value of WAN Access type.

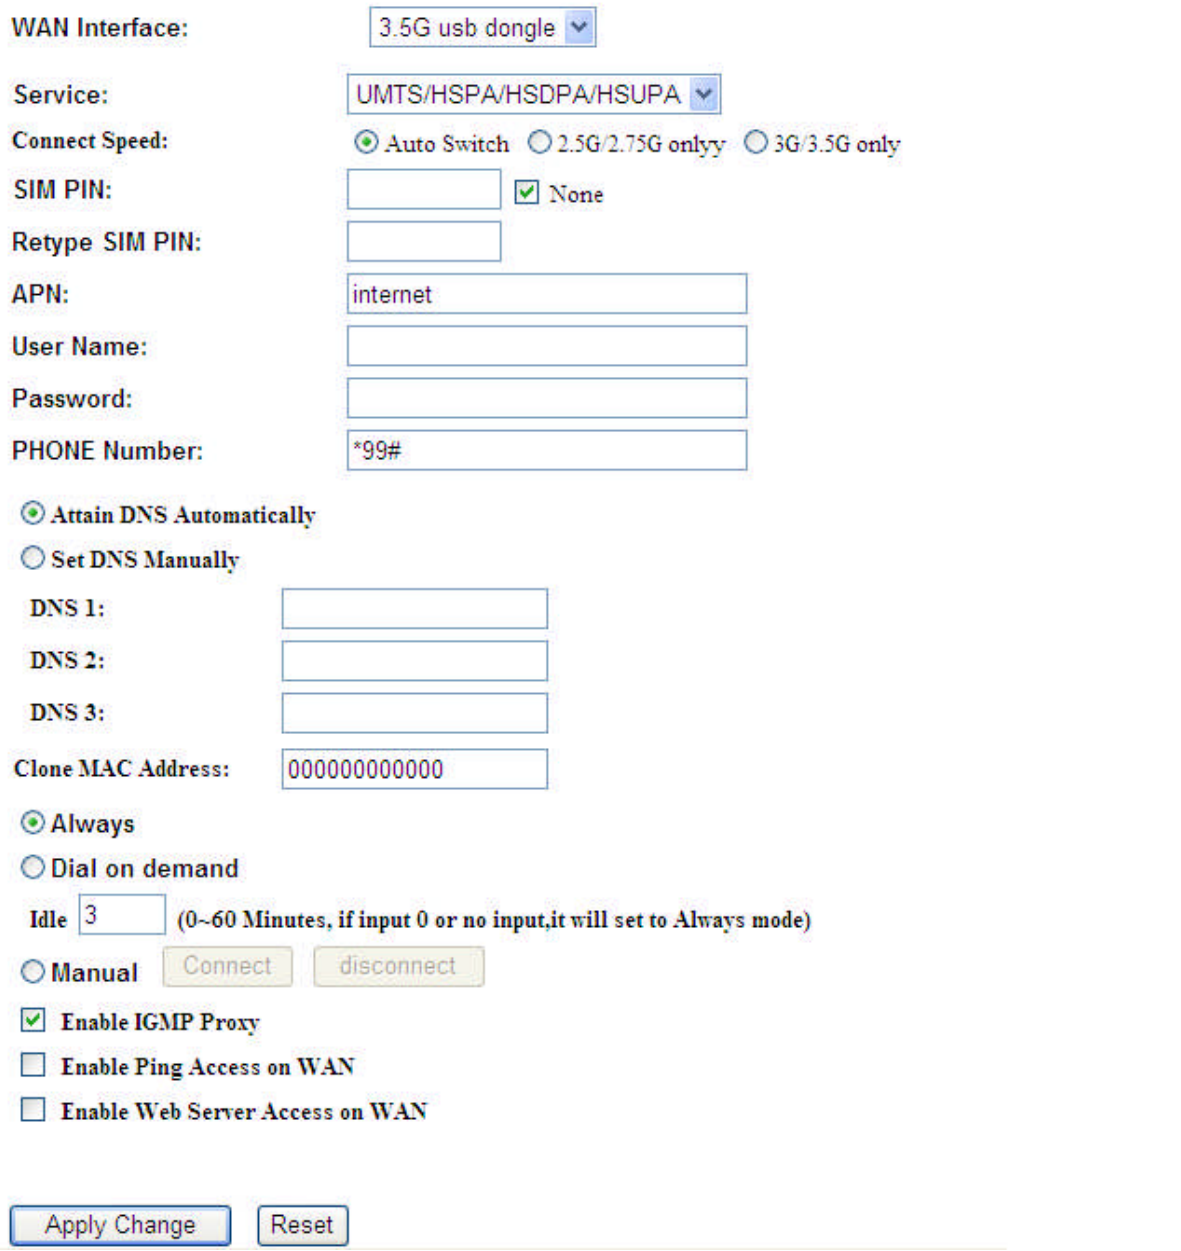

5.1.1.3 WAN Interface– Ethernet Port

If you are using an Ethernet cable to connect the Internet, please select **Ethernet port**.

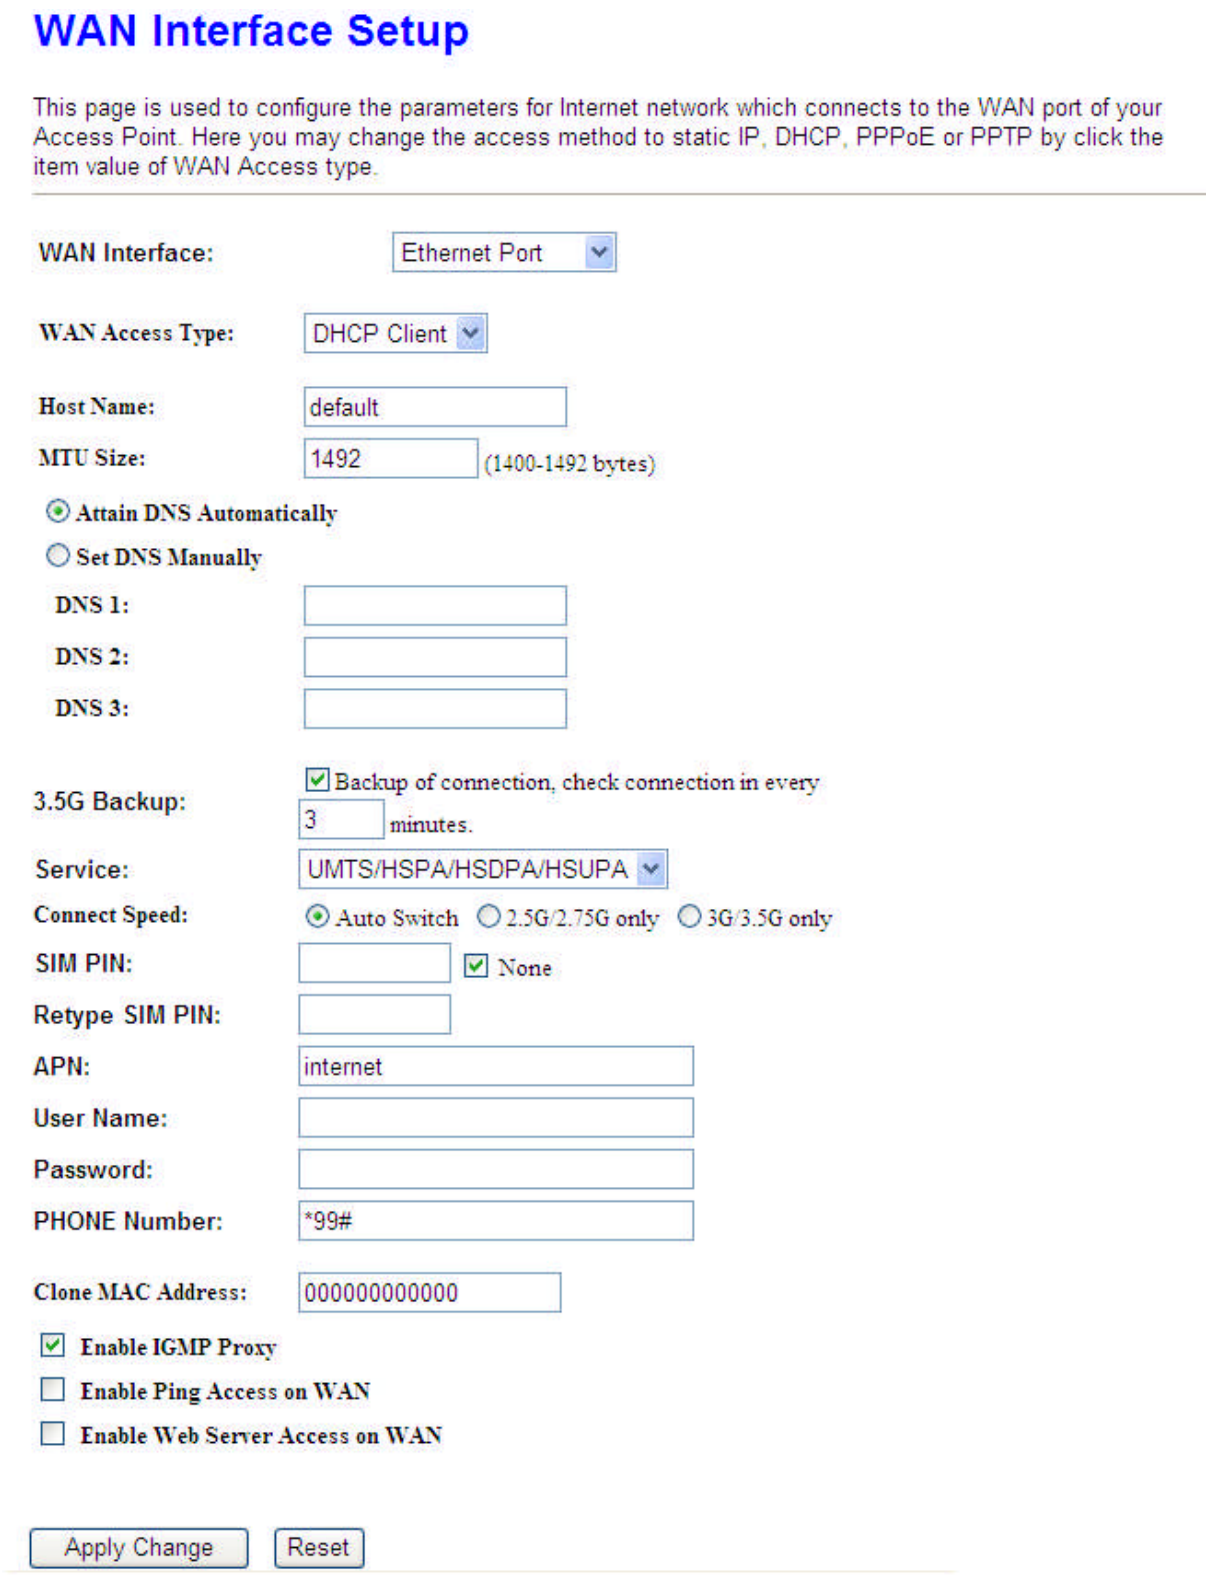

5.1.1.4 WAN Interface– Wireless

If you are connecting the internet via wireless, please select **Wireless** and its associated settings will show up underneath at the same time.

You can see a list of available Wireless networks. Select you preferred one to connect and the Encryption type form the drop-down list.

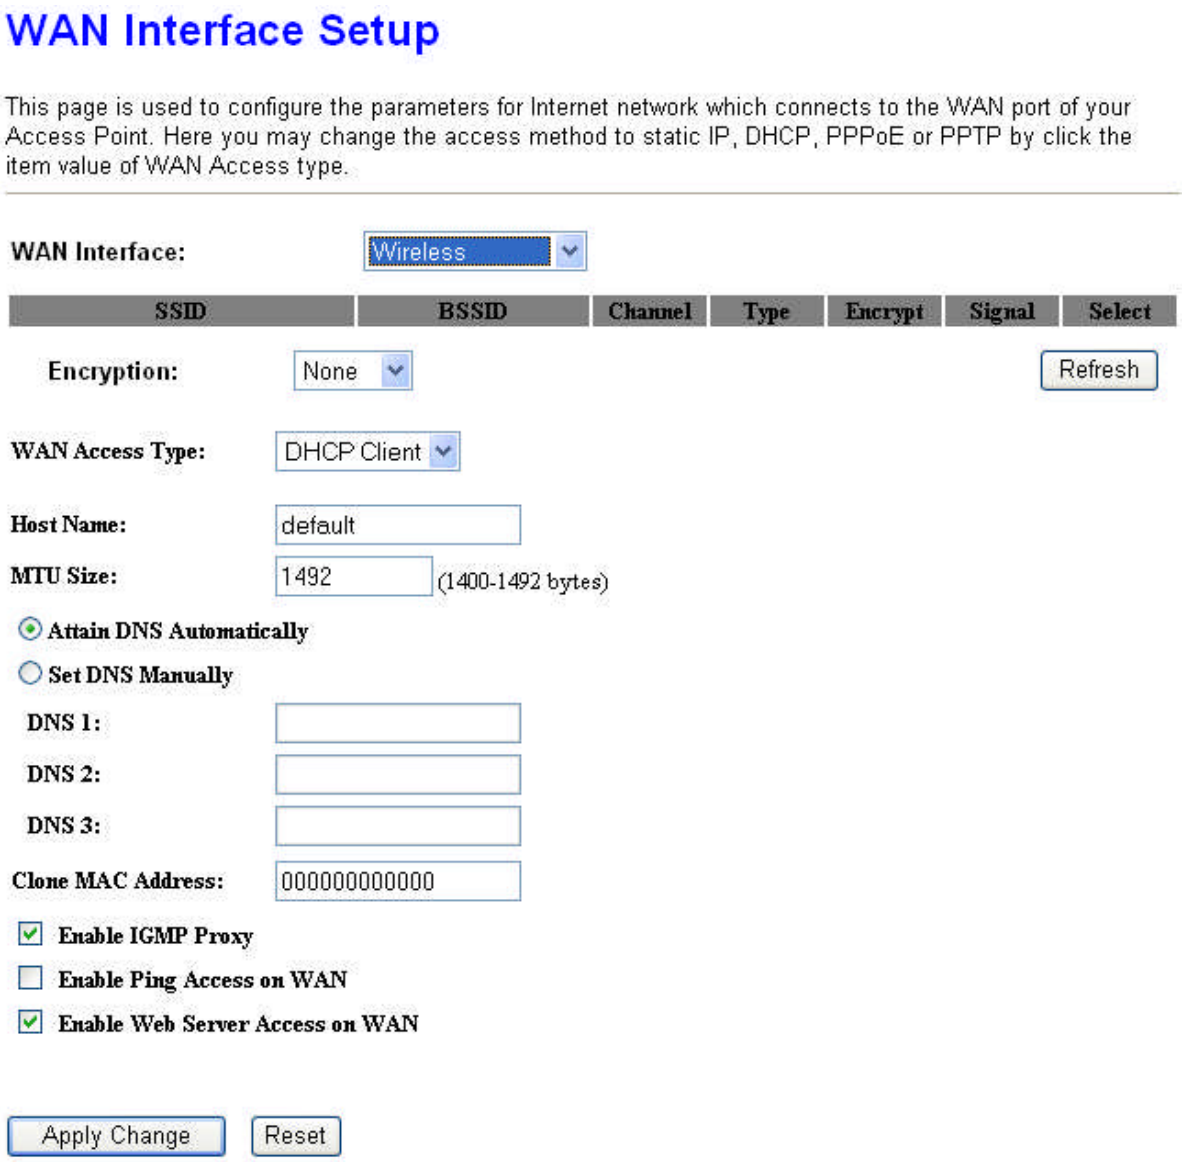

5.1.1.5 WAN Access Type – Static IP

If you applied for a **Static IP** connection type from ISP, please follow the steps to set up your WAN connection.

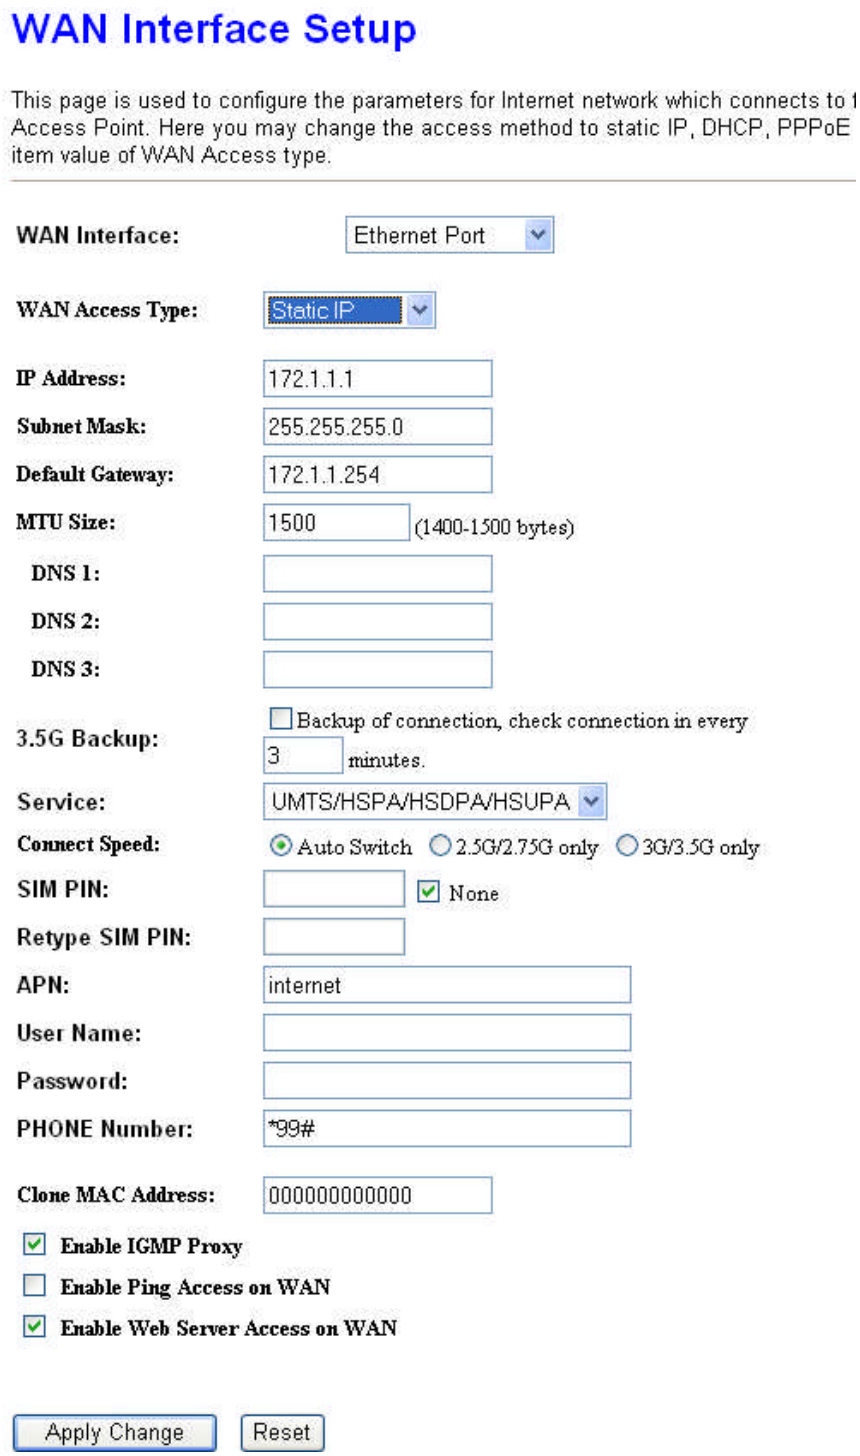

1. IP Address

Input your IP Address supplied by ISP. If you don't know, please check with your ISP.

2. Subnet Mask

Input Subnet Mask, normally it is **255.255.255.0**.

3. Default Gateway

Input ISP Default Gateway Address. If you don't know, please check with your ISP.

4. MTU Size

MTU stands for Maximum Transmission Unit. For Static IP connection, the default MTU should be provided by computer operating systems (OS). Advanced users can set the MTU manually for increasing the internet performance. The largest number allowed by Ethernet at the network layer is 1500 byte

5. DNS

If ISP provides you DNS information, please select **Attain DNS automatically,** otherwise select **Set DNS Manually** and input the DNS information into the blank.

6. 3.5G Backup

The default interval between the two connection detection is 3 minutes, and the range is from 1 to 60 minutes. Once Internet connection is disconnected, the system automatically connects Internet via 3.5G adapter. If 3.5G signal is not available, it starts to search downward for 3/2.75/2.5G signals until none existed. User needs manual switch through the GUI setting page to recover the original connection.

7. Service

Please select 3.5G service type.

8. Connect Speed

Please select 3.5G service speed.

9. Clone MAC Address

Copy the MAC address from the device you had registered to your ISP if your ISP asks for the specific MAC Address.

10. Enable IGMP Proxy

The **Internet Group Management Protocol (IGMP)** is a communication protocol used to manage the membership of Internet Protocol multicast groups. IGMP is used by IP hosts and adjacent multicast routers to establish multicast group memberships. You can choose to enable **IGMP Proxy** to provide service.

11. Enable Ping Access on WAN

Select **Enable Ping Access on WAN**, will make WAN IP address response to any ping request from Internet users. It is a common way for hacker to ping public WAN IP address, to see is there any WAN IP address available.

12. Enable Web Server Access on WAN

This option is to enable Web Server Access function on WAN.

13. Apply Changes & Reset

Click on **Apply Changes** to save the setting data. Or you may click on Reset to clear all the input data.

5.1.1.6 WAN Access Type – Dynamic IP

If your WAN access type is **Dynamic IP**, please complete the settings as following instructions.

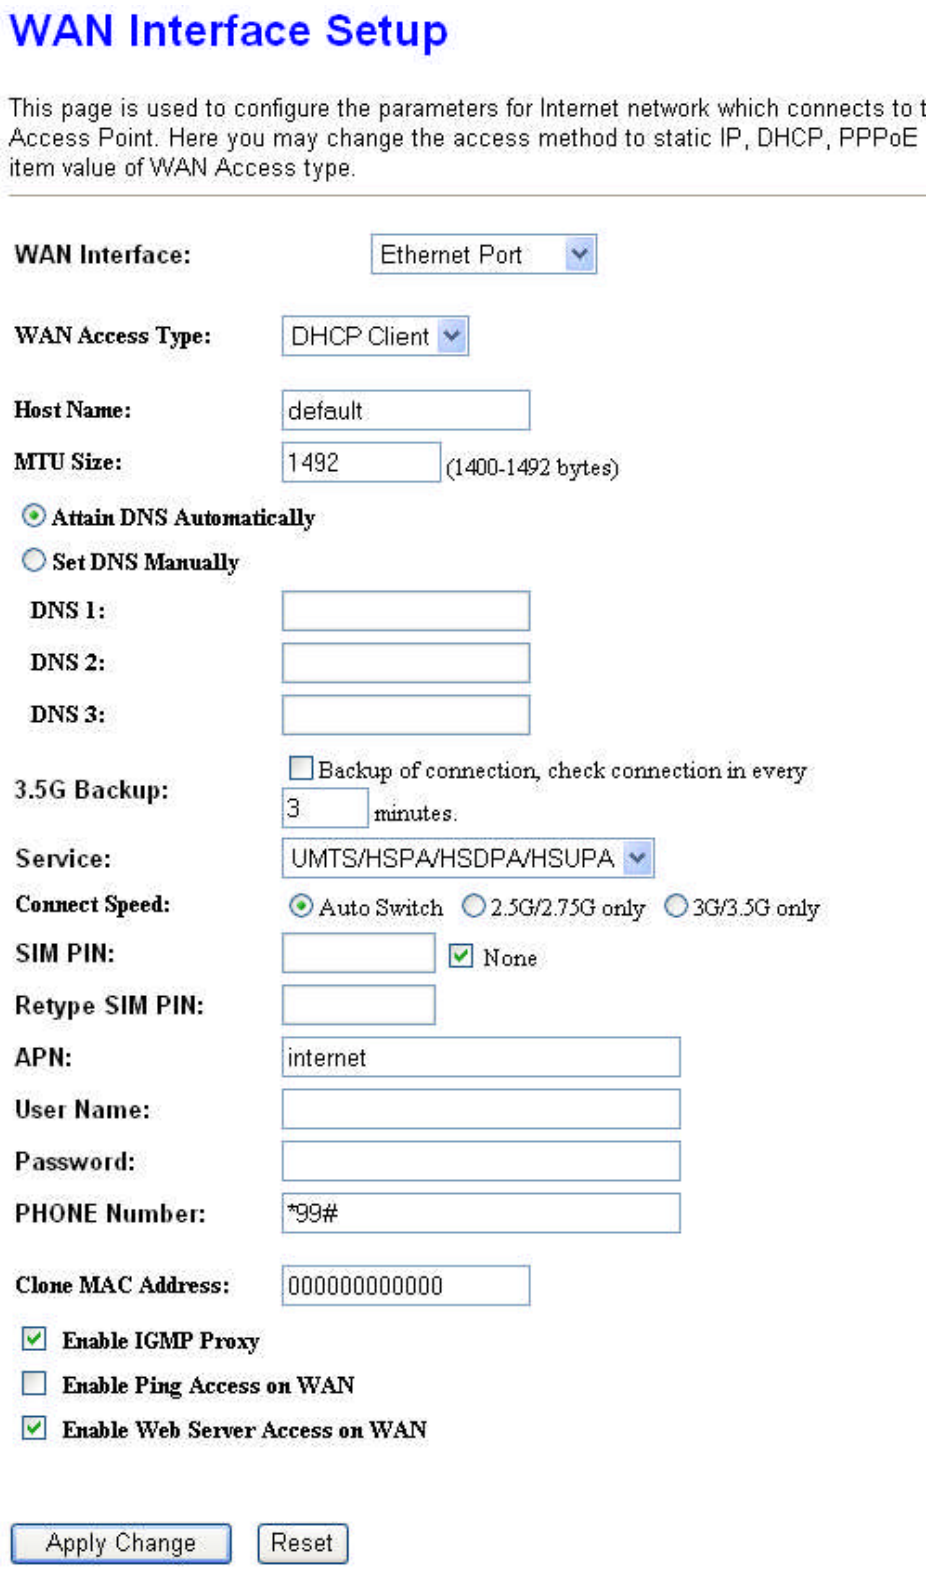

1. Host Name

The host name is optional; but if your ISP requires you to input a specific host name, please put it in, for example, default applied from ISP. Generally, Cable Modem will provide the hostname information.

2. MTU Size

MTU stands for Maximum Transmission Unit. For Static IP connection, the default MTU should be provided by computer operating systems (OS). Advanced users can set the MTU manually for increasing the internet performance. The largest number is 1492 byte

3. DNS

If ISP provides you DNS information, please select **Attain DNS automatically,** otherwise select **Set DNS Manually** and input the DNS information into the blank.

4. 3.5G Backup

The default interval between the two connection detection is 3 minutes, and the range is from 1 to 60 minutes. Once Internet connection is disconnected, the system automatically connects Internet via 3.5G adapter. If 3.5G signal is not available, it starts to search downward for 3/2.75/2.5G signals until none existed. User needs manual switch through the GUI setting page to recover the original connection.

5. Service

Please 3.5G service type.

6. Connect Speed

Please select 3.5G service speed.

7. Clone MAC Address

Copy the MAC address from the device you had registered to your ISP if your ISP asks for the specific MAC Address.

8. Enable IGMP Proxy

The **Internet Group Management Protocol (IGMP)** is a communication protocol used to manage the membership of Internet Protocol multicast groups. IGMP is used by IP hosts and adjacent multicast routers to establish multicast group memberships. You can choose to enable **IGMP Proxy** to provide service.

9. Enable Ping Access on WAN

Select **Enable Ping Access on WAN**, will make WAN IP address response to any ping

request from Internet users. It is a common way for hacker to ping public WAN IP address, to see is there any WAN IP address available.

10. Enable Web Server Access on WAN

This option is to enable Web Server Access function on WAN.

11. Apply Changes & Reset

Click on **Apply Changes** to save the setting data. Or you may click on **Reset** to clear all the input data.

5.1.1.7 WAN Access Type – PPPoE

If you applied for a **PPPoE** connection type from ISP, please follow the steps to set up your WAN connection.

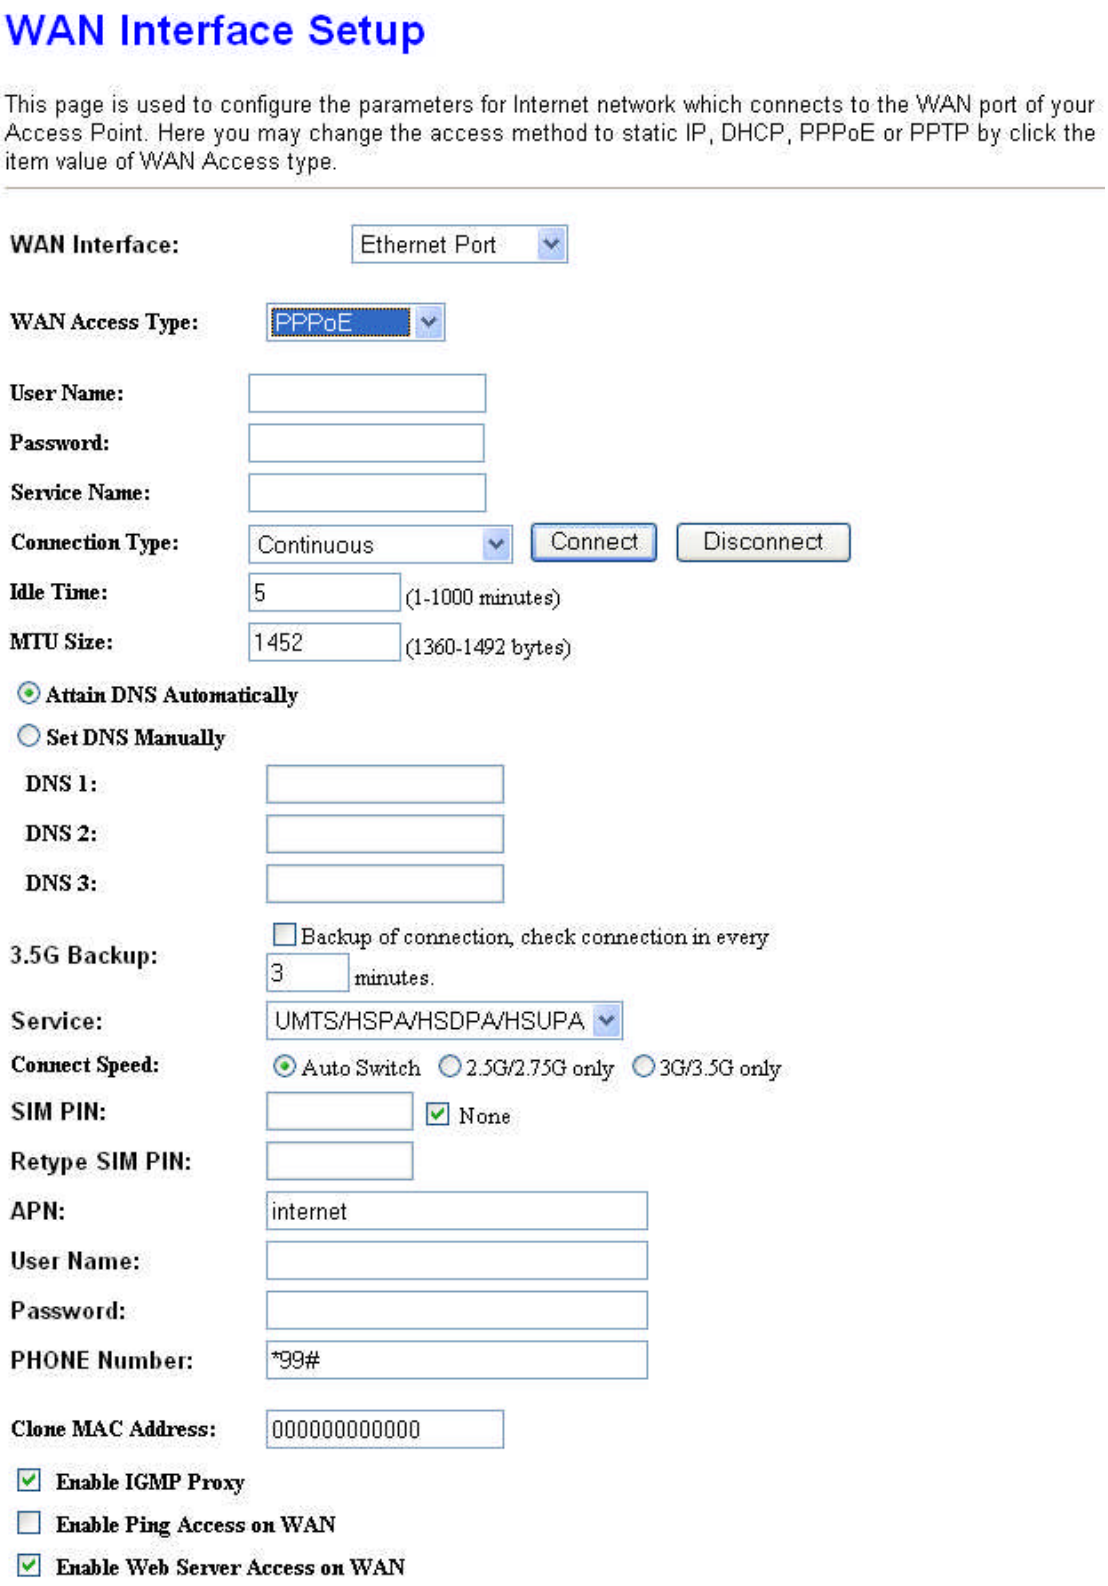

1. User Name

Input your user name supplied by ISP. If you don't know, please check with your ISP.

2. Password

Input your Password supplied by ISP.

3. Service Name

Input the service name supplied by ISP.

4. Connection Type

It has three types: **Continuous, Connect on Demand,** and **Manual.**

5. Idle Time

It is the time of inactivity before disconnecting your PPPoE session. Enter an Idle Time (in minutes) to define a maximum period of time for which the Internet connect is maintained during inactivity. If the connection is inactive for longer than the defined Idle Time, then the connection will be dropped. Either set this to zero or enable Auto-reconnect to disable this feature.

6. MTU Size

MTU stands for Maximum Transmission Unit. For PPPoE connection, the default MTU should be provided by computer operating systems (OS). Advanced users can set the MTU manually for increasing the internet performance. The largest number allowed by Ethernet at the network layer is 1492 byte

7. DNS

If ISP provides you DNS information, please select **Attain DNS automatically,** otherwise select **Set DNS Manually** and input the DNS information into the blank.

8. 3.5G Backup

The default interval between the two connection detection is 3 minutes, and the range is from 1 to 60 minutes. Once Internet connection is disconnected, the system automatically connects Internet via 3.5G adapter. If 3.5G signal is not available, it starts to search downward for 3/2.75/2.5G signals until none existed. User needs manual switch through the GUI setting page to recover the original connection.

9. Service

Please select 3.5G service type.

10. Connect Speed

Please select 3.5G service speed.

11. Clone MAC Address

Copy the MAC address from the device you had registered to your ISP if your ISP asks for the specific MAC Address.

12. Enable IGMP Proxy

The **Internet Group Management Protocol (IGMP)** is a communications protocol used to manage the membership of Internet Protocol multicast groups. IGMP is used by IP hosts and adjacent multicast routers to establish multicast group memberships. You can choose to enable **IGMP Proxy** to provide service.

13. Enable Ping Access on WAN

Select **Enable Ping Access on WAN**, will make WAN IP address response to any ping request from Internet users. It is a common way for hacker to ping public WAN IP address, to see is there any WAN IP address available.

14. Enable Web Server Access on WAN

This option is to enable **Web Server Access** function on WAN.

15. Apply Changes & Reset

Click on **Apply Changes** to save the setting data. Or you may click on **Reset** to clear all the input data.

5.1.1.8 WAN Access Type – PPTP

If you have applied for a **PPTP** connection type from ISP, please follow the steps to set up your WAN connection.

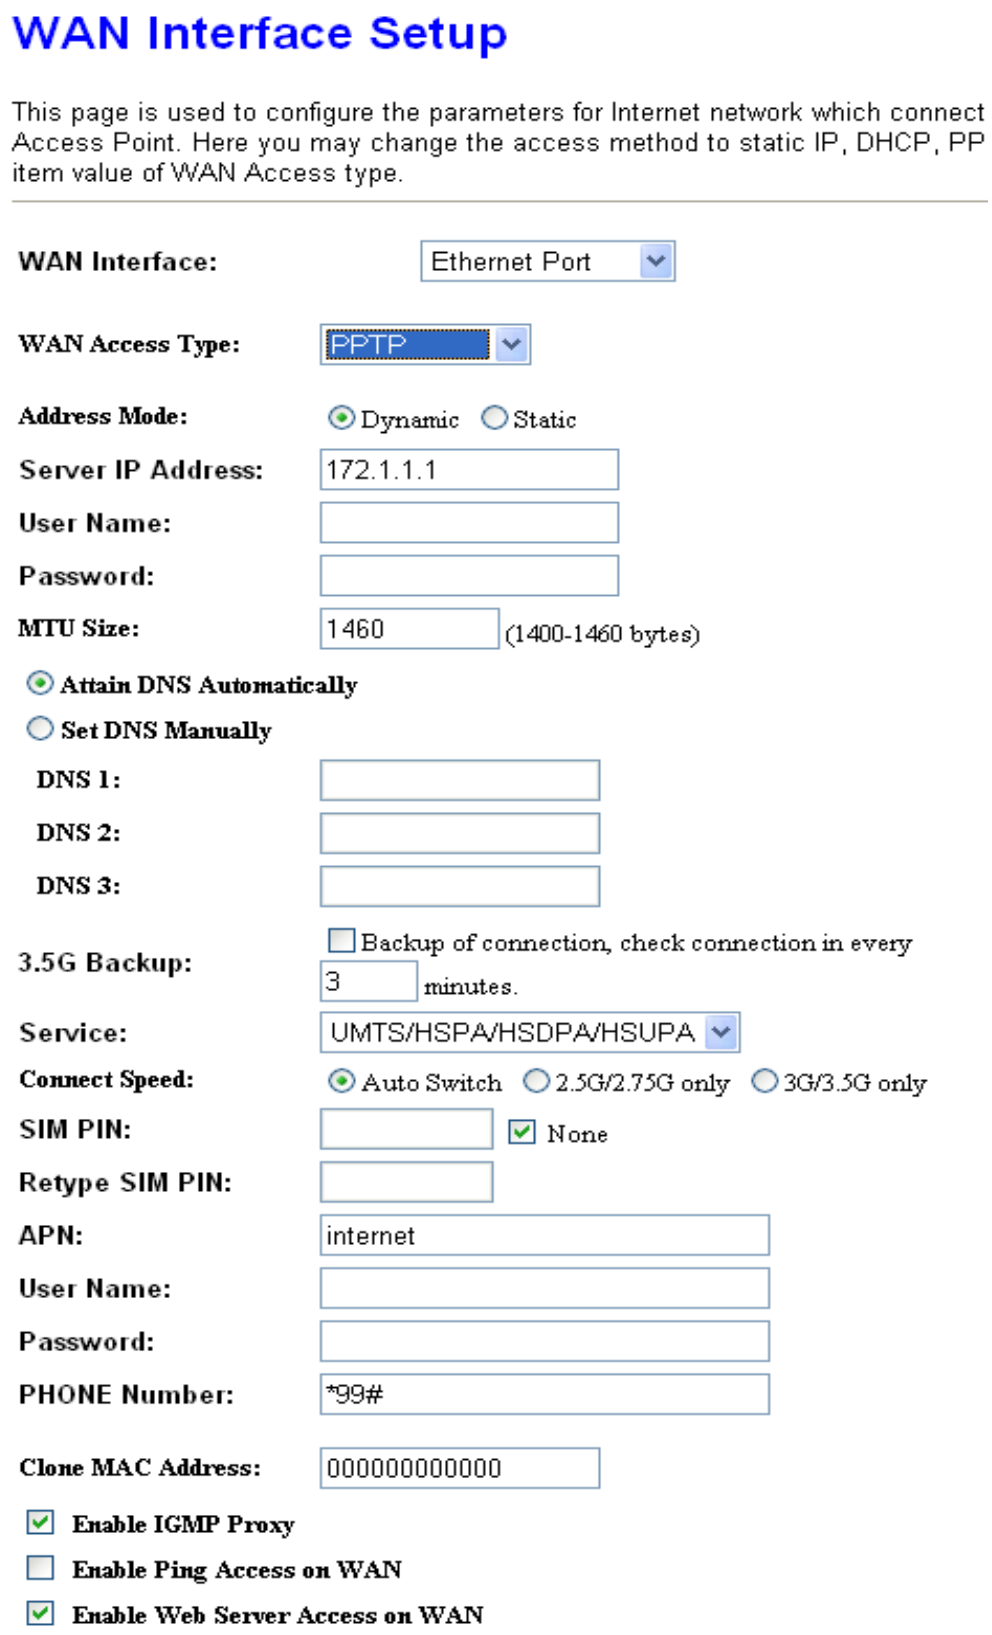

1. IP Address

Input your IP Address supplied by ISP. If you don't know, please check with your ISP.

2. Subnet Mask

Input Subnet Mask, normally it is **255.255.255.0.**

3. Server IP Address

Input your Server IP Address supplied by ISP. If you don't know, please check with your ISP.

4. User Name

Input the PPTP Account supplied by ISP, for example. If you don't know, please check with your ISP.

5. Password

Input the Password supplied by ISP.

6. MTU Size

MTU stands for Maximum Transmission Unit. For PPPoE connection, the default MTU should be provided by computer operating systems (OS). Advanced users can set the MTU manually for increasing the internet performance. The largest number allowed is 1460 byte

7. Request MPPE Encryption

Microsoft Point-to-Point Encryption (MPPE) encrypts data in Point-to-Point Protocol (PPP)-based dial-up connections or Point-to-Point Tunneling Protocol (PPTP) virtual private network (VPN) connections. 128-bit key (strong), 56-bit key, and 40-bit key (standard) MPPE encryption schemes are supported. MPPE provides data security for the PPTP connection that is between the VPN client and the VPN server.

8. DNS

If ISP provides you DNS information, please select **Attain DNS automatically**, otherwise select **Set DNS Manually** and input the DNS information into the blank.

9. 3.5G Backup

The default interval between the two connection detection is 3 minutes, and the range is from 1 to 60 minutes. Once Internet connection is disconnected, the system automatically connects Internet via 3.5G adapter. If 3.5G signal is not available, it starts to search downward for 3/2.75/2.5G signals until none existed. User needs manual switch through the GUI setting page to recover the original connection.

10. Service

Please select 3.5G service type.

11. Connect Speed

Please select 3.5G service speed.

12. Clone MAC Address

Copy the MAC address from the device you had registered to your ISP if your ISP asks for the specific MAC Address.

13. Enable IGMP Proxy

The **Internet Group Management Protocol (IGMP)** is a communications protocol used to manage the membership of Internet Protocol multicast groups. IGMP is used by IP hosts and adjacent multicast routers to establish multicast group memberships. You can choose to enable **IGMP Proxy** to provide service.

14. Enable Ping Access on WAN

Select **Enable Ping Access on WAN**, will make WAN IP address response to any ping request from Internet users. It is a common way for hacker to ping public WAN IP address, to see is there any WAN IP address available.

15. Enable Web Server Access on WAN

This option is to enable Web Server Access function on WAN.

16. Apply Changes & Reset

Click on Apply Changes to save the setting data. Or you may click on Reset to clear all the input data.

5.1.1.9 WAN Access Type – L2TP

If you have applied for a **L2TP** connection type from ISP, please follow the steps to set up your WAN connection.

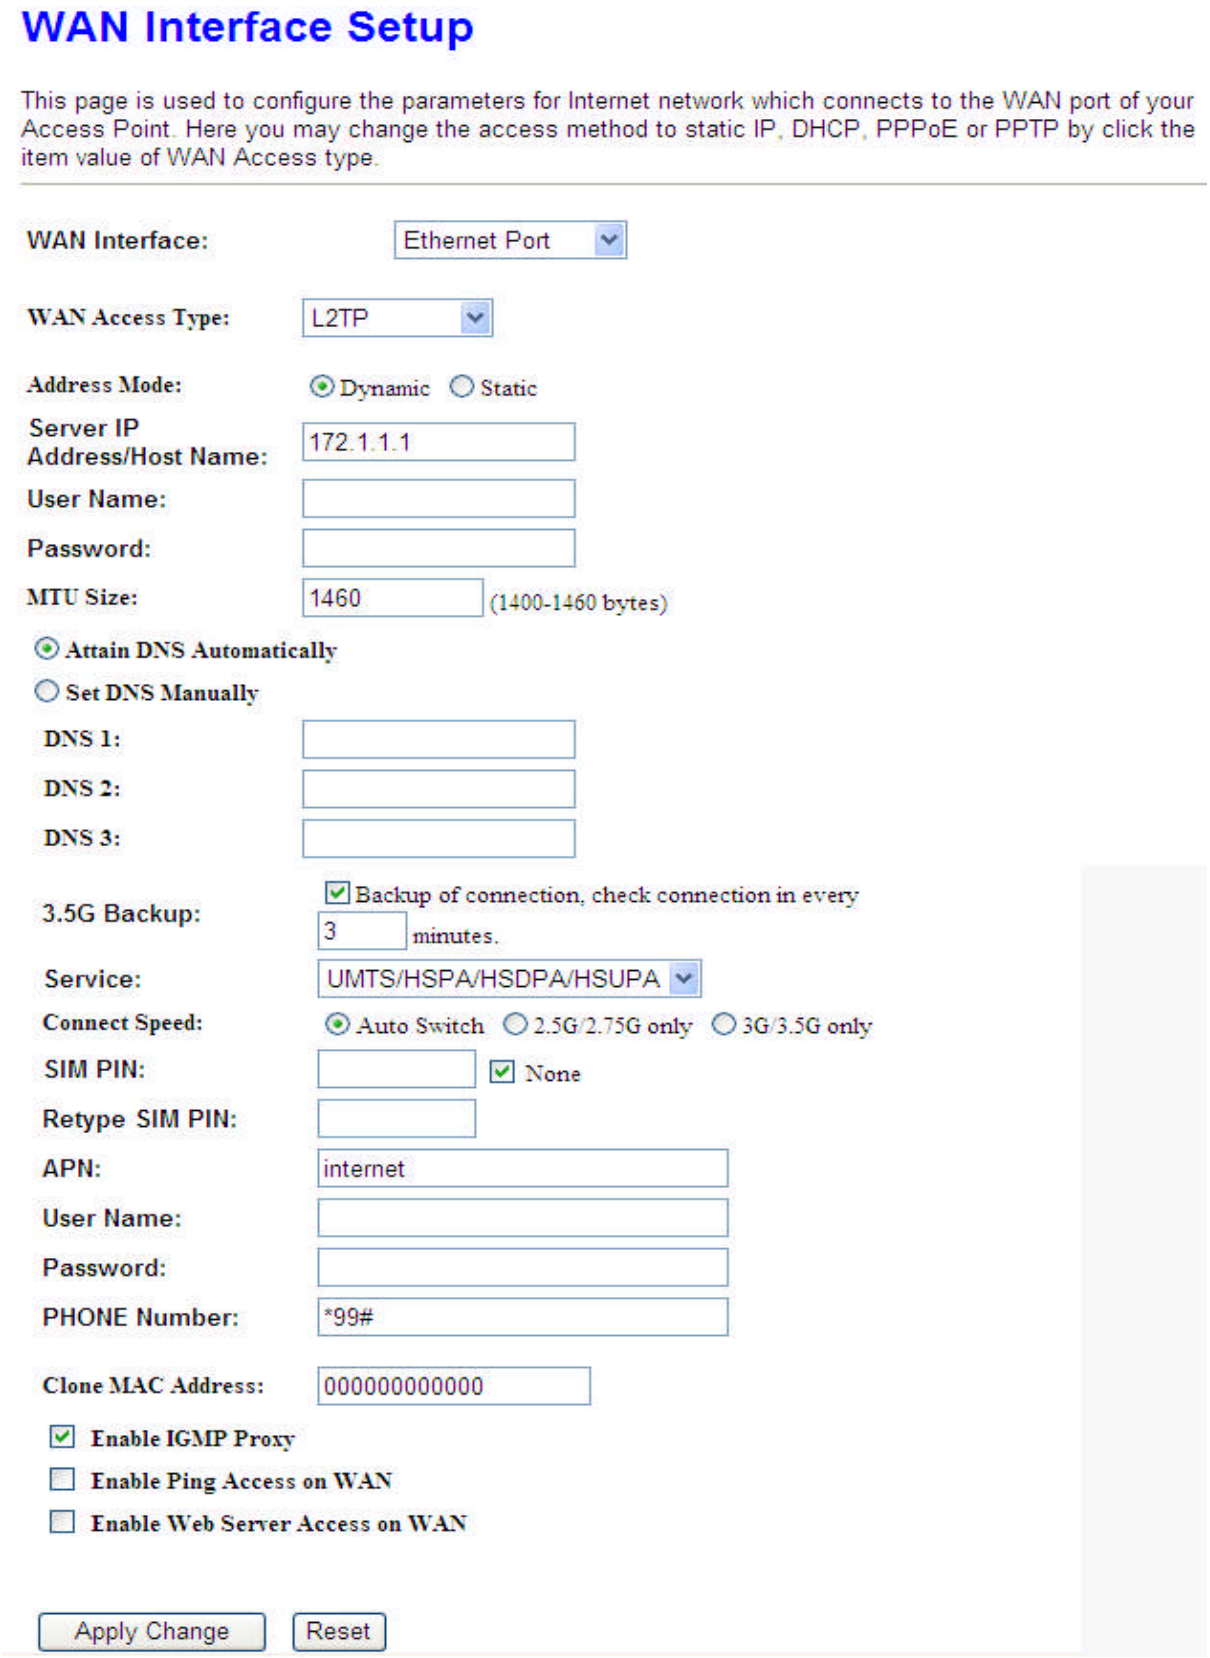

1. Server IP Address

Input your Server IP Address supplied by ISP. If you don't know, please check with your ISP.

2. User Name

Input the L2TP Account.

3. Password

Input the Password.

4. MTU Size

MTU stands for Maximum Transmission Unit. For PPPoE connection, the default MTU should be provided by computer operating systems (OS). Advanced users can set the MTU manually for increasing the internet performance. The largest number allowed is 1460 byte

5. DNS

If ISP provides you DNS information, please select **Attain DNS automatically**, otherwise select **Set DNS Manually** and input the DNS information into the blank.

6. 3.5G Backup

The default interval between the two connection detection is 3 minutes, and the range is from 1 to 60 minutes. Once Internet connection is disconnected, the system automatically connects Internet via 3.5G adapter. If 3.5G signal is not available, it starts to search downward for 3/2.75/2.5G signals until none existed. User needs manual switch through the GUI setting page to recover the original connection.

7. Service

Please select 3.5G service type.

8. Connect Speed

Please select 3.5G service speed.

9. Clone MAC Address

Copy the MAC address from the device you had registered to your ISP if your ISP asks for the specific MAC Address.

10. Enable IGMP Proxy

The **Internet Group Management Protocol (IGMP)** is a communications protocol used to manage the membership of Internet Protocol multicast groups. IGMP is used by IP hosts and

adjacent multicast routers to establish multicast group memberships. You can choose to enable **IGMP Proxy** to provide service.

11. Enable Ping Access on WAN

Select **Enable Ping Access on WAN**, will make WAN IP address response to any ping request from Internet users. It is a common way for hacker to ping public WAN IP address, to see is there any WAN IP address available.

12. Enable Web Server Access on WAN

This option is to enable Web Server Access function on WAN.

13. Apply Changes & Reset

Click on Apply Changes to save the setting data. Or you may click on Reset to clear all the input data.

5.1.2 LAN Interface Setup

Use this page to set up the local IP address and subnet mask for your router. Please select **LAN Interface Setup** under the **IP Config** menu and follow the instructions below to enter the LAN setting page to configure the settings you want.

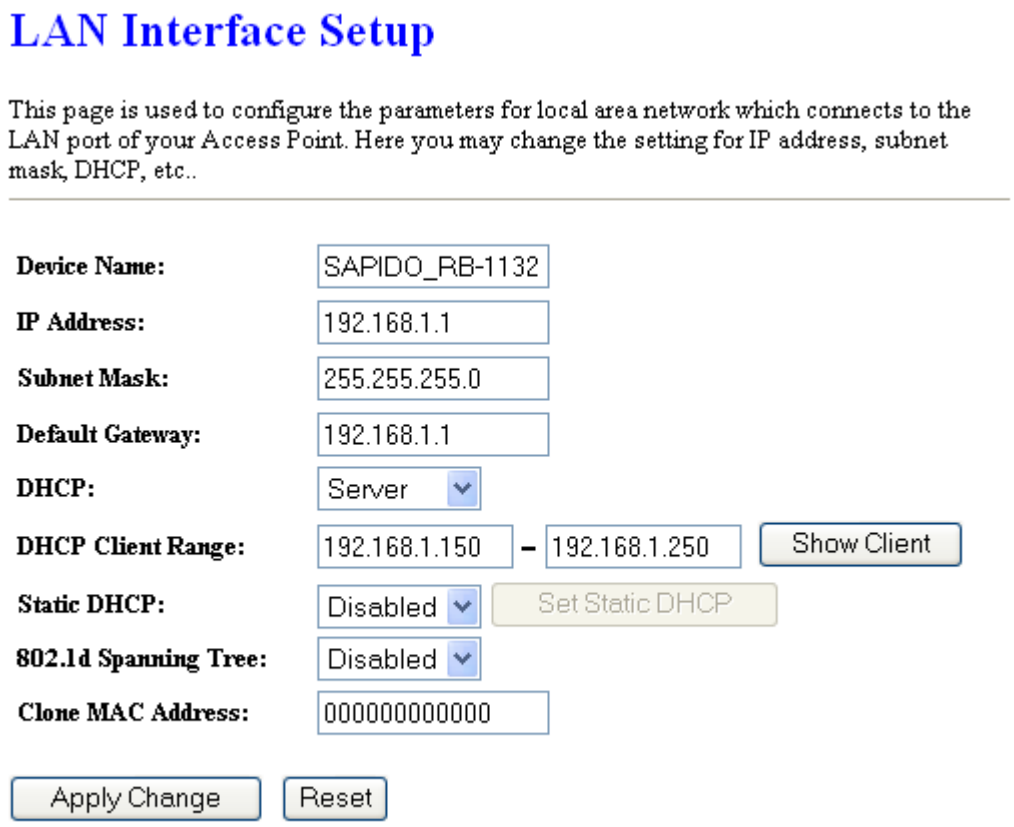

1. IP Address

The default value of LAN IP address is **192.168.1.1** for this router.

2. Subnet Mask

Input Subnet Mask, normally it is **255.255.255.0**.

3. Default Gateway

Input ISP Default Gateway Address. If you don't know, please check with your ISP.

4. DHCP

Enable or disable DHCP services. The DHCP server will automatically allocate an unused IP address from the IP address pool to the requesting computer if enabled.

5. DHCP Client Range

Define the DHCP client range and then the DHCP server will assign an IP to the requesting computer from this range. The **Show Client** will display every assigned IP address, MAC address, and expired time. The default range is 192.168.1.100 - 192.168.1.200.

6. 802.1d Spanning Tree

IEEE 802.1d Spanning Tree Protocol (STP) is a link layer network protocol that ensures a loop-free topology for any bridged LAN. The main purpose of STP is to ensure that you do not create loops when you have redundant paths in your network. Loops are deadly to a network.

7. Clone MAC Address

Copy the MAC address from the device you had registered to your ISP if your ISP asks for the specific MAC Address.

8. Apply Changes & Reset

Click on **Apply Changes** to save the setting data. Or you may click on **Reset** to clear all the input data.

5.1.3 Dynamic DNS Setting

Dynamic DNS allows you to make an assumed name as a dynamic IP address to a static hostname. Please configure the dynamic DNS below. Please select DDNS under the IP Config menu, and follow the instructions below to enter the DDNS setting page to configure the settings you want.

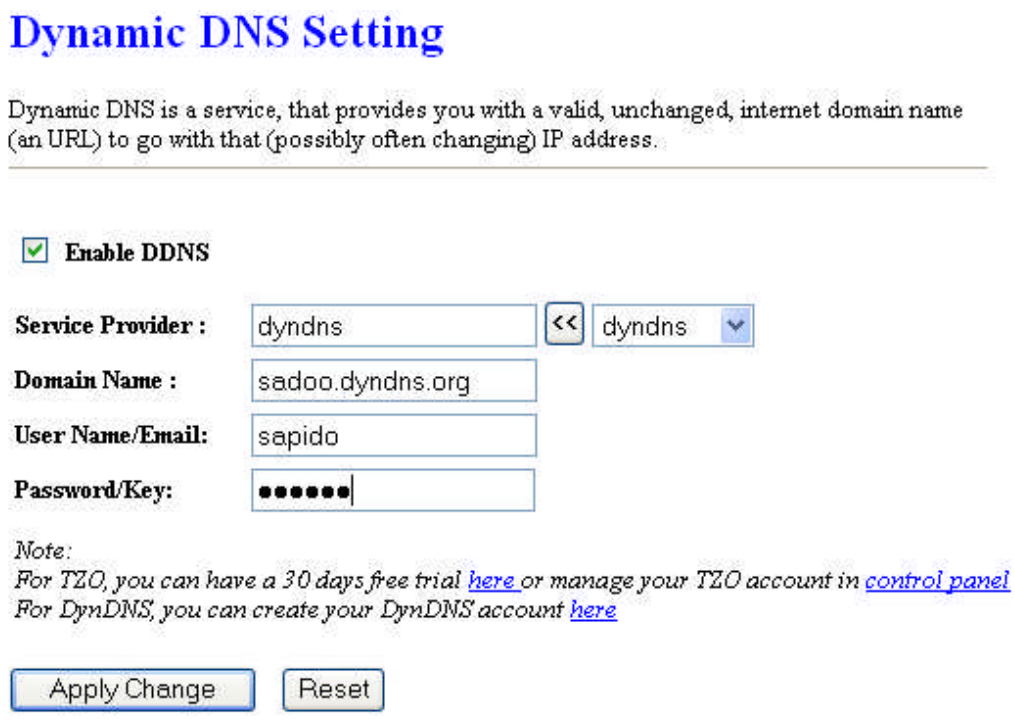
Dynamic DNS Setting
Dynamic DNS is a service, that provides you with a valid, unchanged, internet domain name (an URL) to go with that (possibly often changing) IP address.
Enable DDNS
Service Provider :
dyndns
<<
dyndns
Domain Name :
sadoo.dyndns.org
User Name/Email:
sapido
Password/Key:
Note:
For TZO, you can have a 30 days free trial here or manage your TZO account in control panel
For DynDNS, you can create your DynDNS account here
Apply Change
Reset

1. Enable / Disable DDNS

Select enable to use DDNS function. Each time your IP address to WAN is changed, and the information will be updated to DDNS service provider automatically.

2. Service Provider

Choose correct Service Provider from drop-down list, here including DynDNS, TZO, ChangeIP, Eurodns, OVH, NO-IP, ODS, Regfish embedded in N+ Mini Router.

3. Domain Name

This field represents the host name you register to Dynamic-DNS service and expect to export to the world.

4. User Name /Email

User name is used as an identity to login Dynamic-DNS service.

5. Password /Key

Password is applied to login Dynamic-DNS service.

6. Apply & Cancel

Click on **Apply** button to continue. Click on **Cancel** button to clear the setting on this page.

5.2 Wireless Setup

N+ Mini Broadband Router enables fastest 300 Mbps IEEE802.11n wireless transmissions and keeps compatibility with existing IEEE 802.11g devices. N+ Mini Broadband Router complies with IEEE 802.11b/g standard. Please select **Wireless** under the main menu.

5.2.1 Wireless Basic Settings

Follow the instructions to configure the **Wireless** settings.

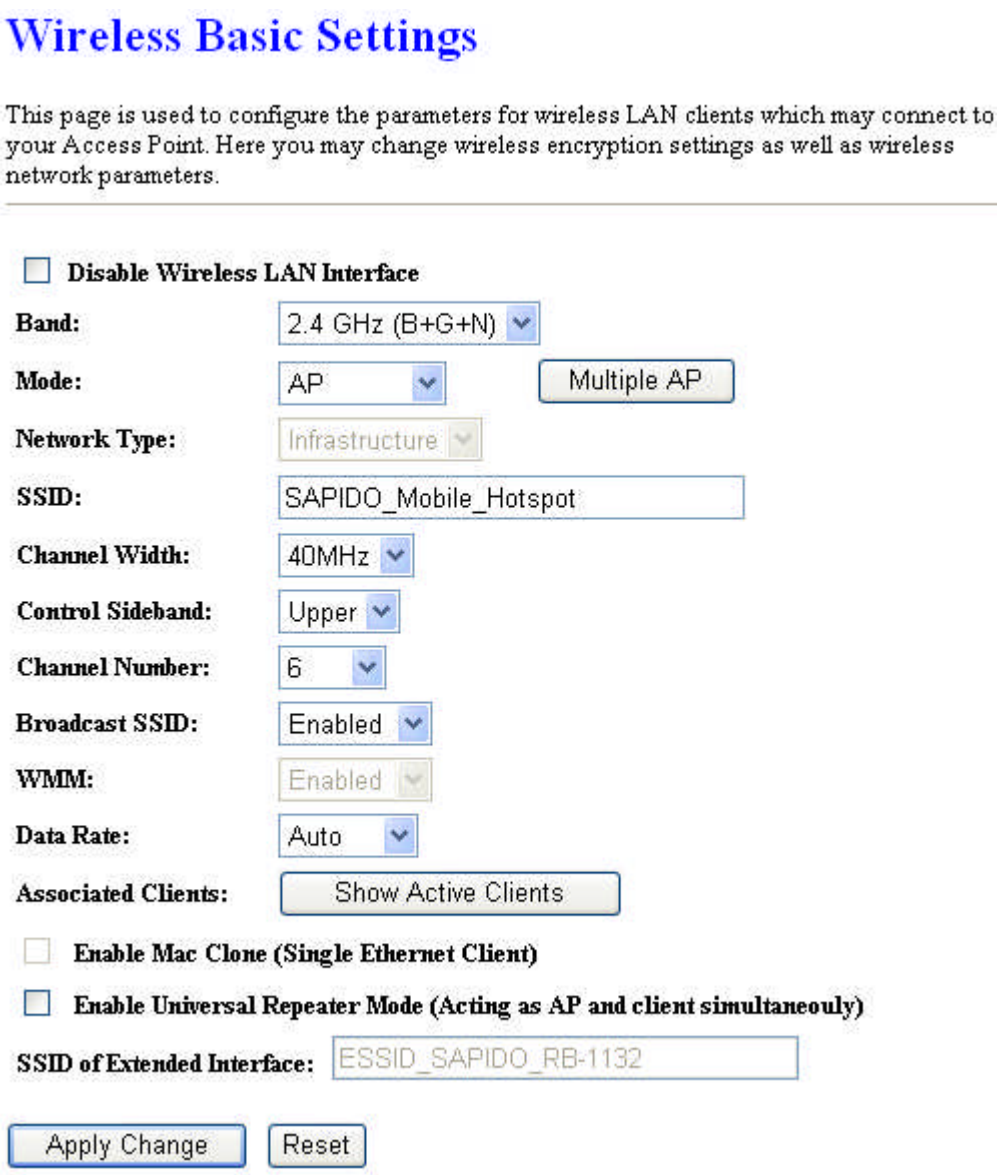

1. Disable Wireless LAN Interface

Select **Disable Wireless LAN Interface** to turn off the wireless function.

2. Band

This field indicates the 802.11x interface mode. For example, "**2.4GHz(G)**" prevents the 802.11b clients from accessing the router. "**2.4GHz(B+G)**" allows both 802.11b and 802.11g clients to access the router. There are 6 options, 2.4 GHz (B/G/N/B+G/G+N/B+G+N) from the drop down list.

3. Mode

Select **AP, WDS,** or **AP+WDS** to allow or disallow the wireless operation.

Multiple APs

Click Multiple APs to set up 4 different SSIDs to deploy a shared WLAN. Users can add or limit the properties for each SSID, increasing the flexibility and efficiency of the network.

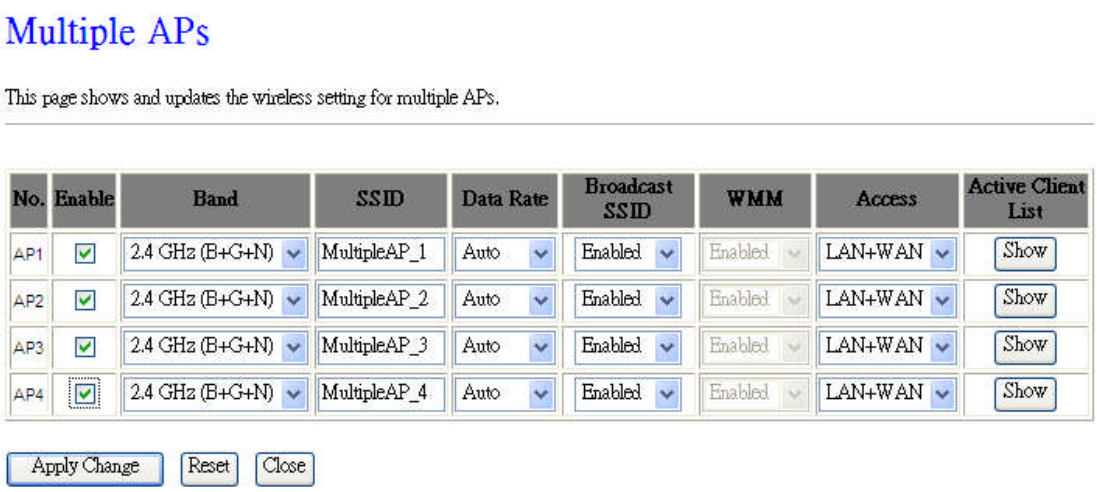
Multiple APs
This page shows and updates the wireless setting for multiple APs.
No. Enable Band SSID Data Rate Broadcast SSID WMM Access Active Client List
AP1 2.4 GHz (B+G+N) MultipleAP_1 Auto Enabled Enabled LAN+WAN Show
AP2 2.4 GHz (B+G+N) MultipleAP_2 Auto Enabled Enabled LAN+WAN Show
AP3 2.4 GHz (B+G+N) MultipleAP_3 Auto Enabled Enabled LAN+WAN Show
AP4 2.4 GHz (B+G+N) MultipleAP_4 Auto Enabled Enabled LAN+WAN Show
Apply Change
Reset
Close

(1.) **Enable:** check it for enable or not.

(2.) **Band:** select the frequency from the drop down list.

(3.) **SSID:** please enter different SSID in each class.

(4.) **Data Rate:** please select the data transmission rate.

(5.) **Access:** defined the access type.

a. LAN+WAN: the client can access to the Internet and connect to 3.5G Mobile router's GUI to setup.

b. WAN: the client can only access to the Internet.

(6.) **Active Client List:** display the properties of the client which is connecting successfully.

(7.) **Apply Changes:** Please click **Apply Changes** to initiate or click **Reset** to cancel.

4. Network Type：

Please select "**Infrastructure**" or "**Ad hoc**." The default is "**Infrastructure**." The selection is disabled when wireless mode is selected to AP.

5. SSID：

Please input your wireless network name. Default is "11N_Broadband_Router".

6. Channel Width

Please select “**20MHZ**” or “**40MHZ**” channel width to change the transmission channels.

7. ControlSideband

Setting the Sideband "**Upper**" or "**lower.**”

8. Channel Number

Please select your wireless network channel. There are Auto, 2~11.

9. Broadcast SSID

Enable or disable the SSID broadcast function. Disable this feature can provide more security of your WLAN.

10. Data Rate

Rate at which data can be communicated (bps); auto, 1M, 2M, 5.5M, 11M, 6M, 9M, 12M, 18M, 24M, 36M, 48M or 54M to be selected from the drop-down list.

11. Associated Clients

Check the WiFi ISP connectors and the connecting status.

12. Enable Mac Clone (Single Ethernet Client)

Copy the MAC Address for identity of some ISPs.

13. Enable Universal Repeater Mode (Acting as AP and Client simultaneously)

Enable **Universal Repeater Mode**, N+ Mini Router will act as a wireless AP and AP client at the same time, and able to link to another AP.. It uses AP client function to connect to a Root AP (any AP) and uses AP function to service all wireless stations within its coverage. All the stations within the coverage of N+ Mini Router can be bridged to the Root AP. It can help user to extend the coverage of wireless network.

- **How to Enable URM (Universal Repeater Mode)**

  User could enable URM in wireless basic setting page as shown in following figures.

  Step 1. Get back to menu “**Network Config**” and write down the SSID, channel and security.

  Step 2. Setting the same SSID, channel and security you got form “Network Config”

and Click on **Apply Change** to save the setting

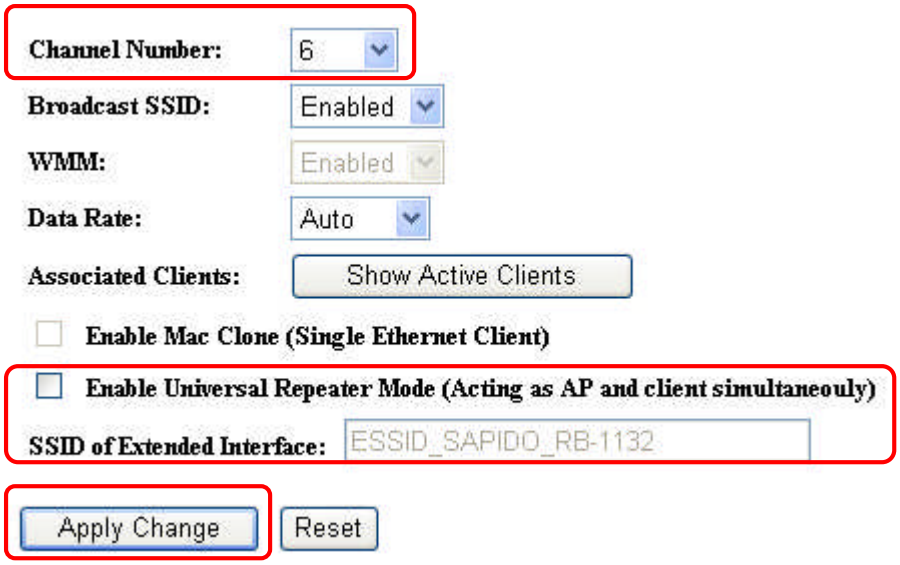
Channel Number: 6
Broadcast SSID: Enabled
WMM: Enabled
Data Rate: Auto
Associated Clients: Show Active Clients
Enable Mac Clone (Single Ethernet Client)
Enable Universal Repeater Mode (Acting as AP and client simultaneouly)
SSID of Extended Interface: ESSID_SAPIDO_RB-1132
Apply Change
Reset

Note: The DHCP server should be disabled under menu "**LAN Interface Setup**" and then the URM could be enabled.

Step 3. Check the AP connectors and the Wireless connecting status.

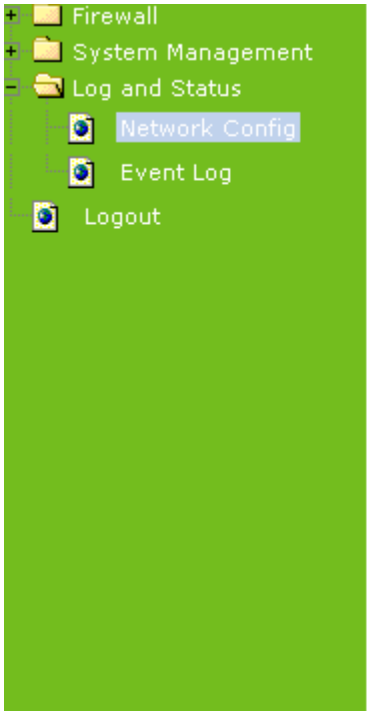

System	
Uptime	0day:0h:12m:12s
Firmware Version	Ver1.0.7
WirelessConfiguration	
Mode	AP
Band	2.4 GHz (B+G+N)
SSID	SAPIDO_Mobile_Hotspot
Channel Number	6
Encryption	WEP 64bits
MAC Address	00:d0:41:bc:97:30
Associated Clients	0
WirelessRepeater Interface Configuration	
Mode	Infrastructure Client
ESSID	ESSID_SAPIDO_RB-1132
Encryption	Disabled
MAC Address	00:00:00:00:00:00
State	Scanning

14. SSID of Extended Interface

When mode is set to "AP" and Universal Repeater Mode is enabled, user should input SSID of another AP (the upper level device) in the field of **SSID of Extended Interface**.

15. Apply Changes & Reset

Click on “**Apply Change**” to save the setting data. Or you may click on “**Reset**” to clear all the input data.

5.2.2 Wireless Advanced Settings

Please follow the instructions to configure the **Wireless** settings.

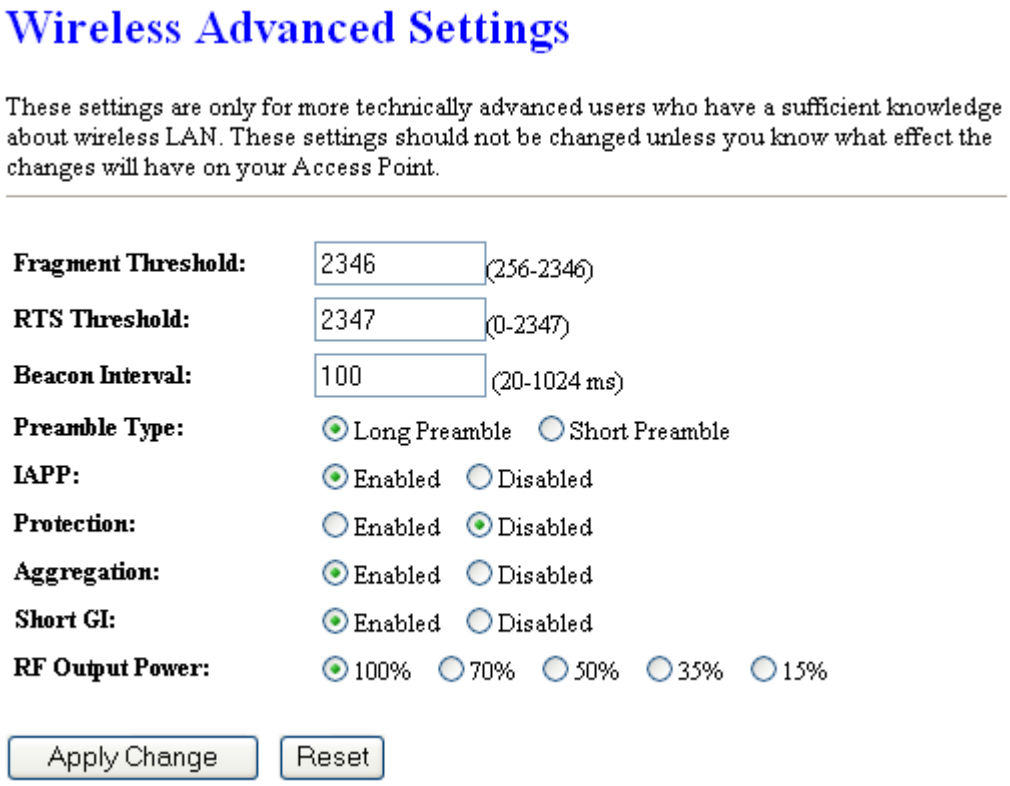
Wireless Advanced Settings
These settings are only for more technically advanced users who have a sufficient knowledge about wireless LAN. These settings should not be changed unless you know what effect the changes will have on your Access Point.
Fragment Threshold: 2346 (256-2346)
RTS Threshold: 2347 (0-2347)
Beacon Interval: 100 (20-1024 ms)
Preamble Type: Long Preamble Short Preamble
IAPP: Enabled Disabled
Protection: Enabled Disabled
Aggregation: Enabled Disabled
Short GI: Enabled Disabled
RF Output Power: 100% 70% 50% 35% 15%
Apply Change
Reset

1. Fragment Threshold

To identify the maximum length of packet, the overflow packet length wil be fragmentized. The allowed range is 256-2364, and default length is 2346 bytes.

2. RTS Threshold

This value should remain at its default setting of 2347. The range is 0~2347. Should you encounter inconsistent data flow, only minor modifications are recommended. If a network packet is smaller than the present RTS threshold size, the RTS/CTS mechanism will not be enabled. The router sends Request to Send (RTS) frames to a particular receiving station and negotiates the sending of a data frame. After receiving an RTS, the wireless station

responds with a Clear to Send (CTS) frame to acknowledge the right to begin transmission. Fill the range from 0 to 2347 into this blank.

3. Beacon Interval

Beacons are packets sent by an access point to synchronize a wireless network. Specify a beacon interval value. The allowed setting range is 20-1024 ms.

4. Preamble Type

The preamble (also called “a header”) is a section of data at the head of a packet that contains information that wireless devices need when they send and receive packets. Short preambles improve throughput performance, but some wireless devices require long preambles. Select the suitable preamble as short or long preamble.

5. IAPP

Inter Access Point Protocol. Allow seamless roaming between Access Points in your wireless network. Coupled with superior RF performance

6. Protection

Select to enable the wireless protection or not.

7. Aggregation

Data aggregation can reduce the amount of data routed through the network, and increasing throughput.

8. Short GI

Enabling the Short Guard Interval increases the wireless transmission.

9. RF Output Power

User can adjust the RF output power to get the best wireless connection. There are 5 power types available: 100%, 70%, 50%, 35%, and 15%.

10. Apply Changes & Reset

Click on “Apply Changes” to save the setting data. Or you may click on “Reset” to clear all the input data.

5.2.3 Wireless Security Setup

4 encryption types can be selected here, please follow the instructions below for each.

Wireless Security Setup
This page allows you setup the wireless security. Turn on WEP or WPA by using Encryption Keys could prevent any unauthorized access to your wireless network.
Select SSID:
Root AP - SAPIDO_Mobile_Hotspot
Apply Change
Reset
Encryption:
None
802.1x Authentication:

1. Encryption – WEP

Enabling WEP can protect your data from eavesdroppers. If you do not need this feature, select "**None**" to skip the following setting. N+ Mini Router supports both 64-bit and 128-bit encryption using the Wired Equivalent Privacy (WEP) algorithm. Select the type of encryption you want to use (64 or 128 bit) and configure one to four WEP Keys. The "1280bit" method is more secure than the "64-bit".

- **802.1x Authentication**

Enable 802.1x Authentication so that a wireless node must be authenticated before it can gain access to other LAN resources.

Key Length: For 64bits WEP key, either 5 ASCII characters or 10 hexadecimal digitals leading by 0x can be entered. For 128bits WEP key, either 13 ASCII characters or 26 hexadecimal digits leading by 0x can be entered.

Note: 128 bits WEP is most secure, but has more encryption/decryption overhead. Note that all wireless devices must support the same WEP encryption bit size and have the same key. Four keys can be entered here, but only one key can be selected at a time. The keys can be entered in ASCII or Hexadecimal. Select the item from drop-down list you wish to use.

Encryption Key: At most four keys can be set. A WEP key is either 10 or 26 hexadecimal digits (0~9, a~f, and A~F) based on whether you select 64 bit or 128 bit in the WEP drop-down list.

2. Encryption – WPA (WPA, WPA2 & WPA2 Mixed)

The WPA, WPA2 & WPA2 Mixed encrypt each frame transmitted from the radio using the pre-shared key (PSK) which entered from this panel or a key got dynamically through 802.1x.

- **WPA Authentication Mode**

Enterprise (RADIUS): Please input the port, IP address, and password of authentication RADIUS Server.

Personal (Pre-Shared Key): Pre-Shared Key type is coding in ASCII, and the length is between 8 to 63 characters. If the coding is in Hex, the key length is 64 characters.

3. Apply Changes & Reset

Click on **Apply Change** to save the setting data. Or you may click on **Reset** to clear all the input data.

5.2.4 Wireless Access Control

With the MAC address, you may allow or disallow the access to your AP.

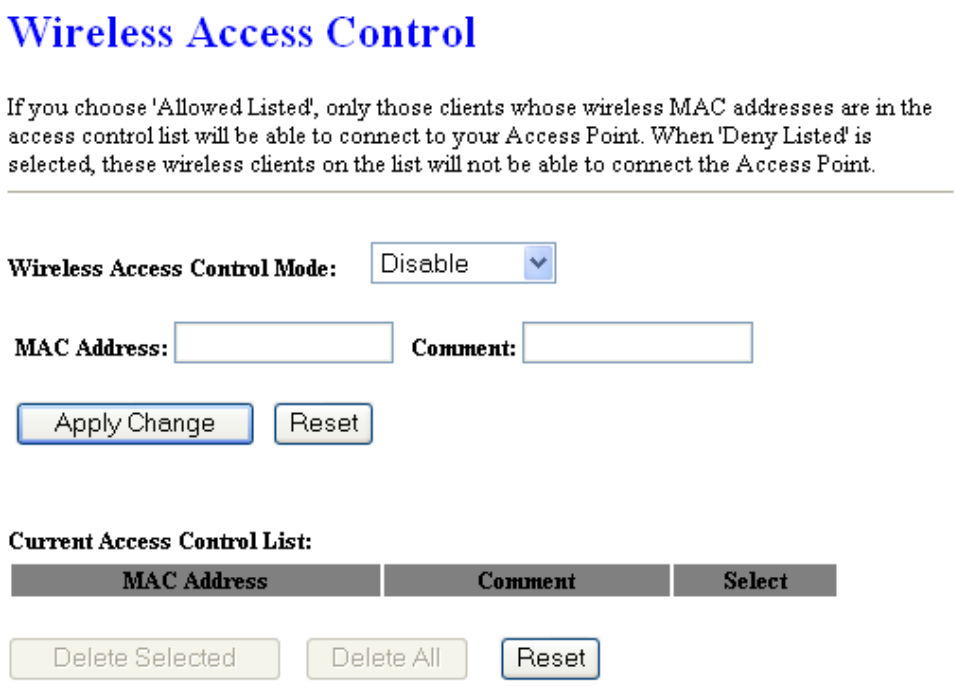
Wireless Access Control
If you choose 'Allowed Listed', only those clients whose wireless MAC addresses are in the access control list will be able to connect to your Access Point. When 'Deny Listed' is selected, these wireless clients on the list will not be able to connect the Access Point.
Wireless Access Control Mode:
Disable
MAC Address:
Comment:
Apply Change
Reset
Current Access Control List:
MAC Address
Comment
Select
Delete Selected
Delete All
Reset

1. Wireless Access Control Mode

"**Allowed Listed**" means only the MAC address listed on the allowed list can access to your wireless network.

"Deny Listed" means the listed MAC Address are not allowed to link to your wireless network.

"**Disable**" for function disuse.

2. MAC Address

Please input the allowed or denied MAC address, for example, 001122334455.

3. Comment

You may input the comments for the set MAC Address.

4. Apply Changes & Reset

Click on “Apply Change” to save the setting data. Or you may click on “Reset” to clear all the input data.

5. Current Access Control List

In this list, all the MAC info you input will be displayed.

6. Delete Selected and Delete All

Click on “**Delete Selected**” to erase the selected MAC address. Click on “**Delete All**” to erase all the entered MAC Address.

5.2.5 WDS Settings

WDS (Wireless Distribution System) is a Wireless Access Point mode that enables wireless bridging in which only WDS APs communicate with each other (without allowing for wireless clients or stations to access them), and/or wireless repeating in which APs communicate both with each other and with wireless stations (at the expense of half the throughput).

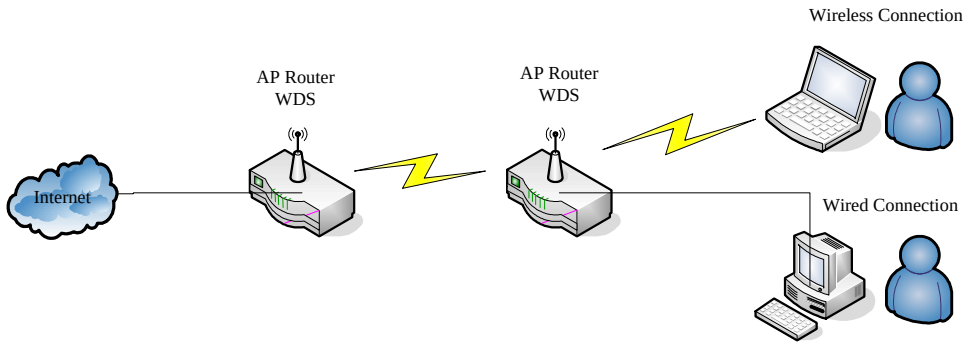

Please follow the instructions to setup WDS connections.

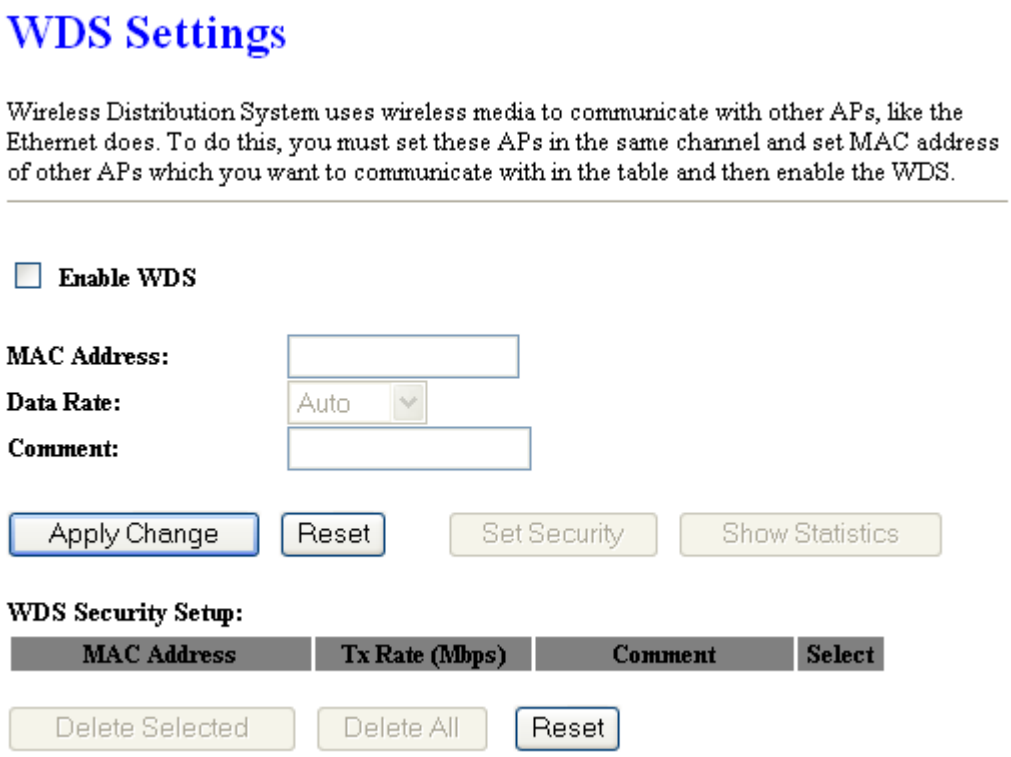
WDS Settings
Wireless Distribution System uses wireless media to communicate with other APs, like the Ethernet does. To do this, you must set these APs in the same channel and set MAC address of other APs which you want to communicate with in the table and then enable the WDS.
Enable WDS
MAC Address:
Data Rate:
Auto
Comment:
Apply Change
Reset
Set Security
Show Statistics
WDS Security Setup:
MAC Address
Tx Rate (Mbps)
Comment
Select
Delete Selected
Delete All
Reset

Step 1. Check the MAC address and Channel number of the device you want to setup WDS with N+ Mini Broadband Router.

System	
Uptime	0day:0h:18m:21s
Firmware Version	Ver1.0.7
WirelessConfiguration	
Mode	AP
Band	2.4 GHz (B+G+N)
SSID	SAPIDO_Mobile_Hotspot
Channel Number	6
Encryption	WEP 64bits
MAC Address	00:d0:41:bc:97:30
Associated Clients	0
LAN Configuration	
Attain IP Protocol	Fixed IP
IP Address	192.168.1.1
Subnet Mask	255.255.255.0
Default Gateway	192.168.1.1
DHCP Server	Enabled
MAC Address	00:d0:41:bc:97:30

Step 2. Get back to the menu "**Wireless Basic Settings**" of N+ Mini Router. Select **AP+WDS** mode, and then select the Channel Number. Click **Apply Changes** to save the setting data.

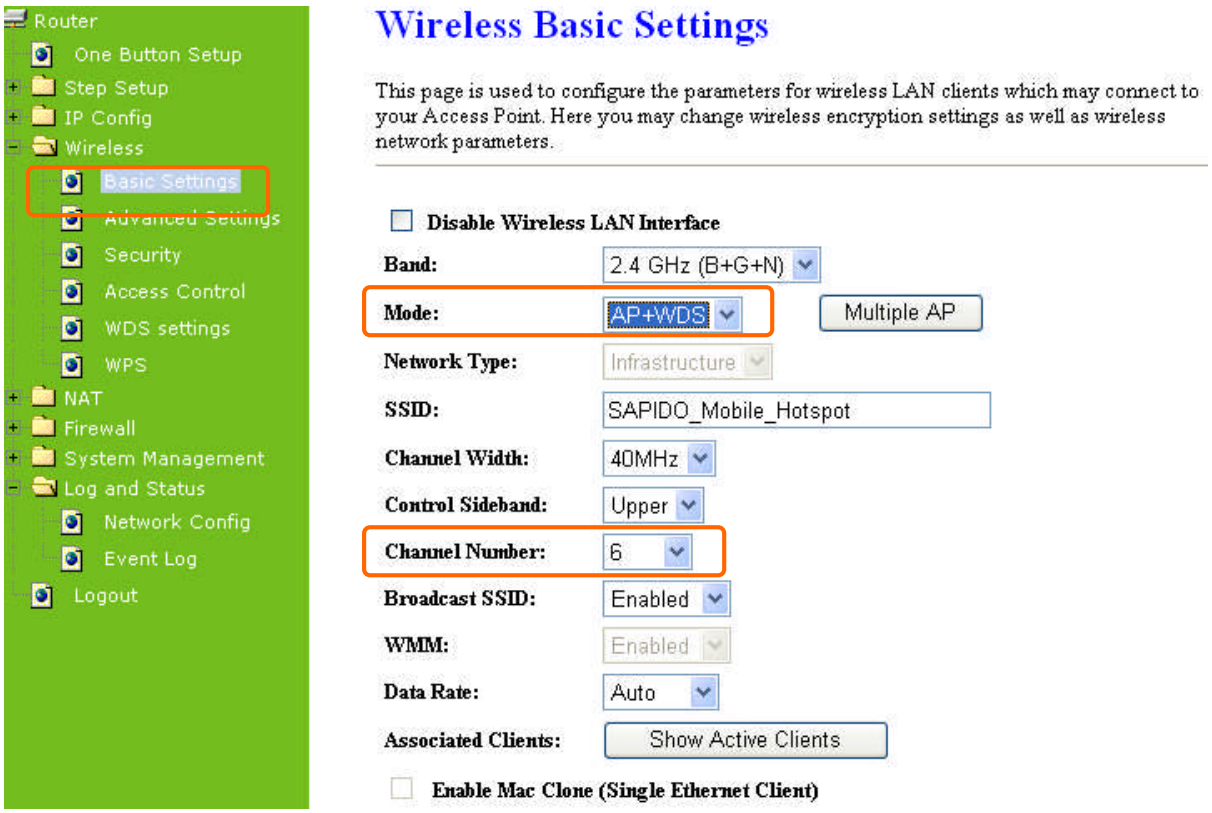

Step 3. Enter the WDS Settings page, select Enable WDS, and then input the MAC address of the paired device. Click **Apply Changes** to save the setting data.

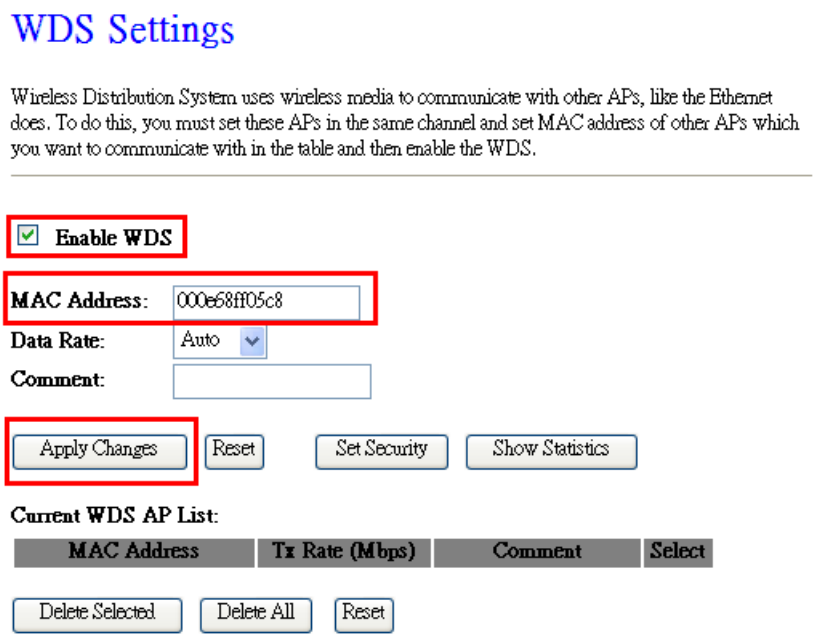
WDS Settings
Wireless Distribution System uses wireless media to communicate with other APs, like the Ethernet does. To do this, you must set these APs in the same channel and set MAC address of other APs which you want to communicate with in the table and then enable the WDS.
Enable WDS
MAC Address: 000e68ff05c8
Data Rate: Auto
Comment:
Apply Changes
Reset
Set Security
Show Statistics
Current WDS AP List:
MAC Address
Tx Rate (Mbps)
Comment
Select
Delete Selected
Delete All
Reset

Step 4. When the time counts down to 0, you will see the MAC address of the paired device displaying on **Current WDS AP List.**

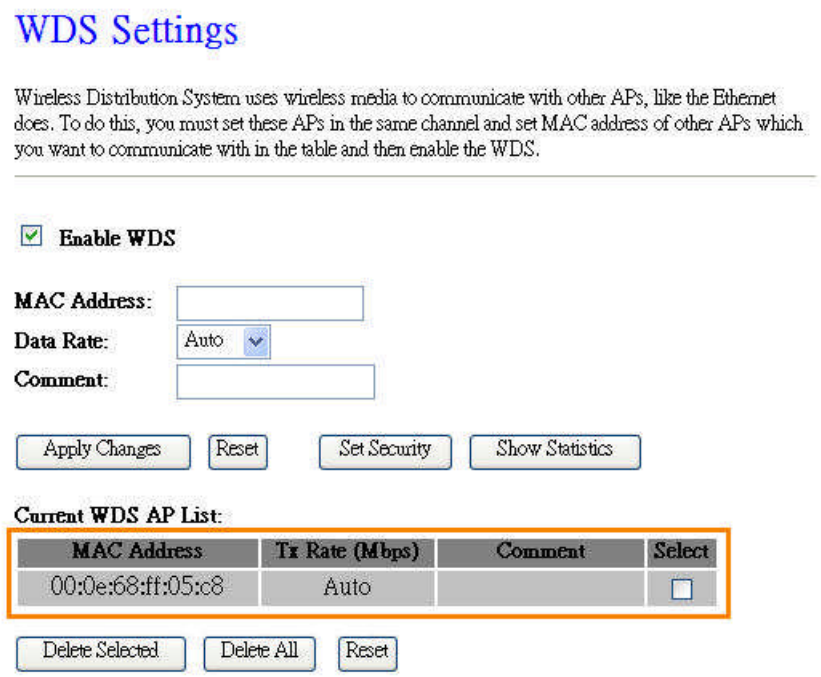
WDS Settings
Wireless Distribution System uses wireless media to communicate with other APs, like the Ethernet does. To do this, you must set these APs in the same channel and set MAC address of other APs which you want to communicate with in the table and then enable the WDS.
Enable WDS
MAC Address:
Data Rate:
Auto
Comment:
Apply Changes
Reset
Set Security
Show Statistics
Current WDS AP List:
MAC Address
Tx Rate (Mbps)
Comment
Select
00:0e:68:ff:05:c8
Auto
Delete Selected
Delete All
Reset

Step 5. Head back to LAN Interface, disable DHCP option, and then click Apply Changes to save the setting data.

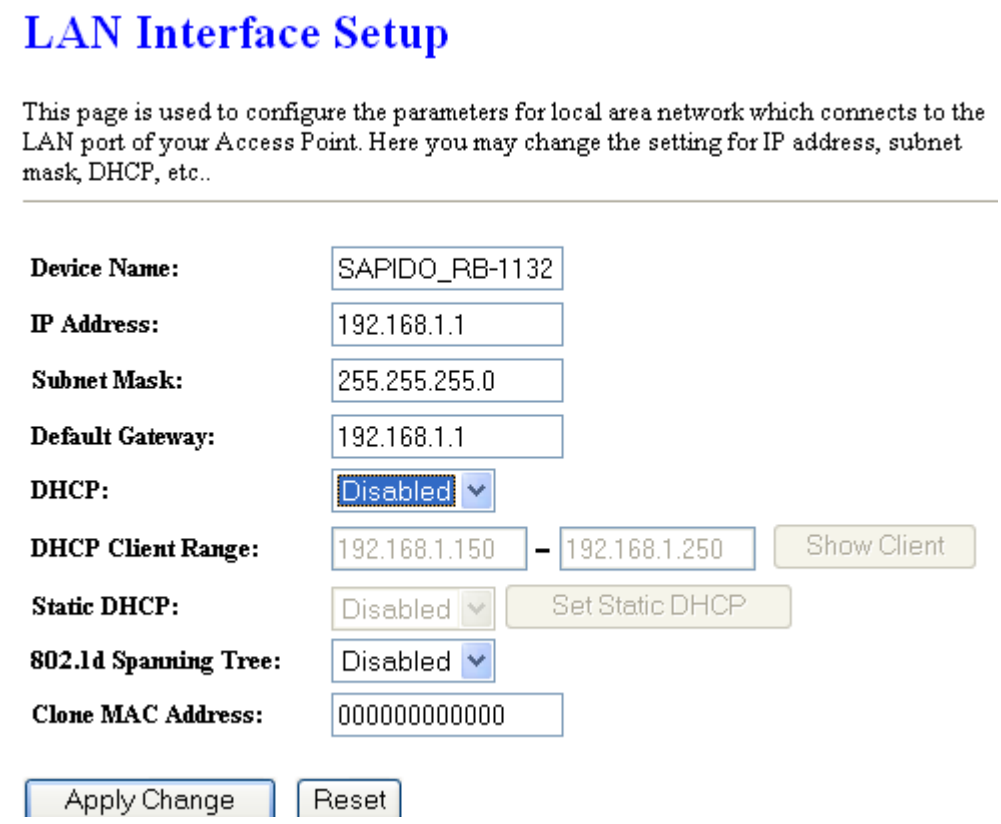

Step 6. Doing the same way to setup the MAC address in the paired device. Launch the UT to the menu "**WDS settings**" of the paired device, and input router's MAC address. Click **Apply Changes** to save the setting data.

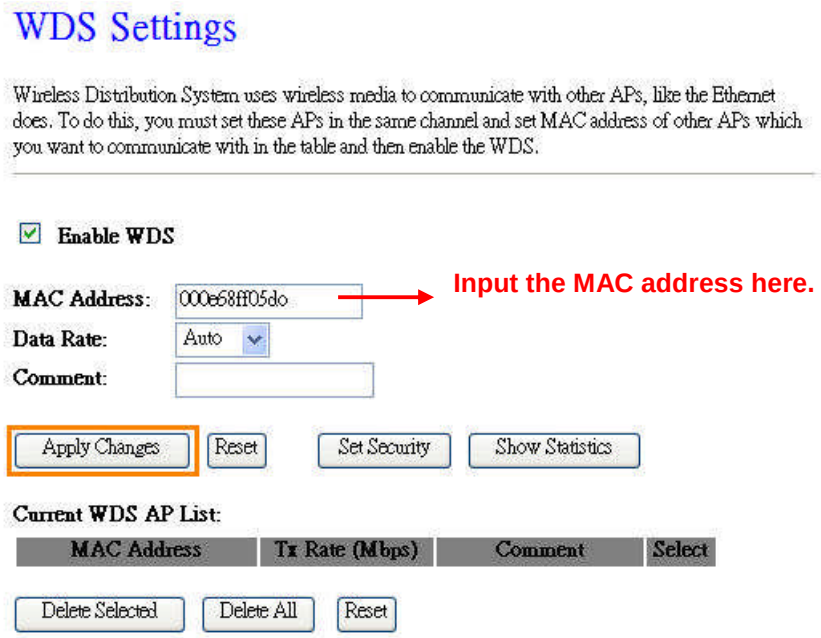
WDS Settings
Wireless Distribution System uses wireless media to communicate with other APs, like the Ethernet does. To do this, you must set these APs in the same channel and set MAC address of other APs which you want to communicate with in the table and then enable the WDS.
Enable WDS
MAC Address:
000e68ff05do
Input the MAC address here.
Data Rate:
Auto
Comment:
Apply Changes
Reset
Set Security
Show Statistics
Current WDS AP List:
MAC Address
Tx Rate (Mbps)
Comment
Select
Delete Selected
Delete All
Reset

Step 7. After initiating the paired device, please check Local Area Connections. Click Supports to check out the IP address which is assigned by the paired device.

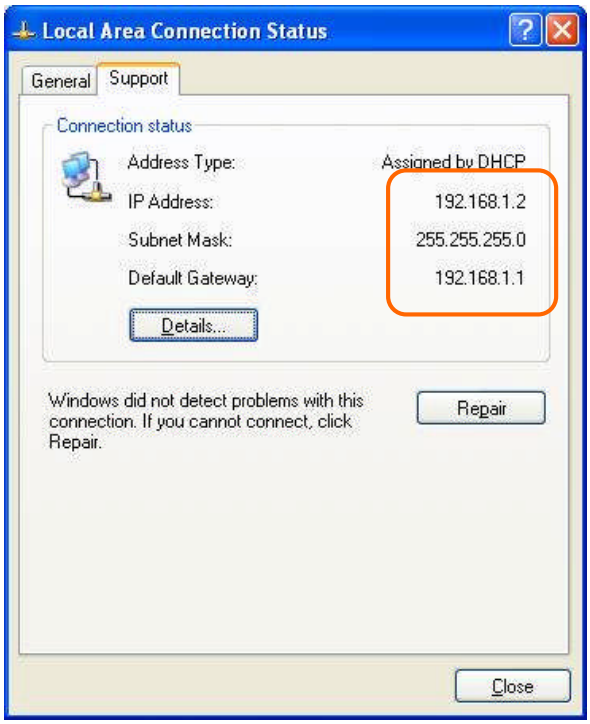

Step 8. You can input http://192.168.9.9 in IE browser to enter the GUI page of the paired device and make sure the connection.

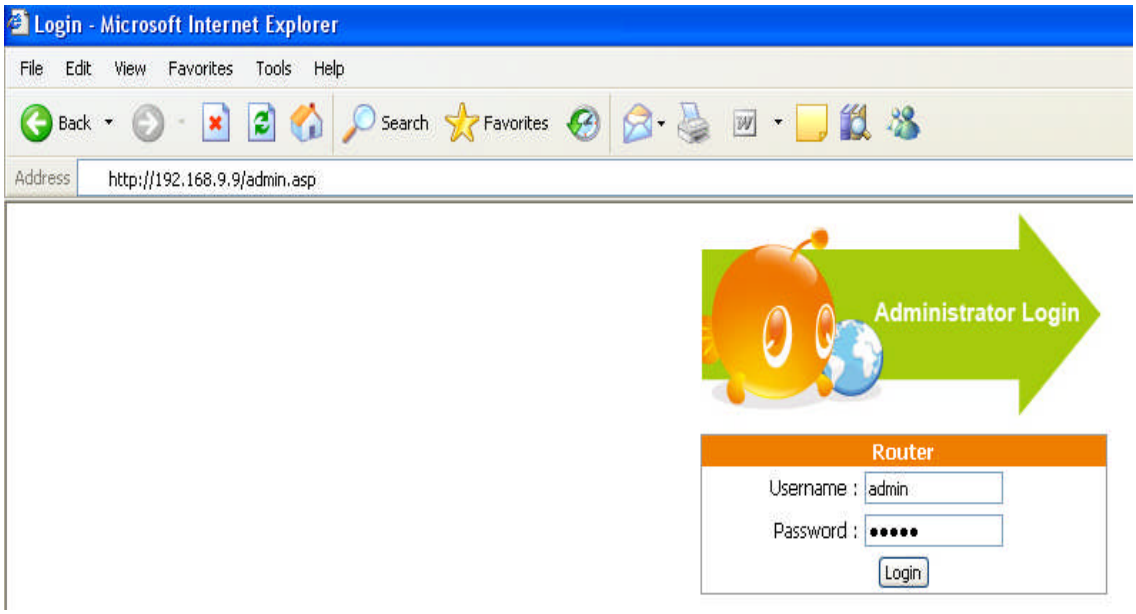

5.2.6 WPS

Wi-Fi Protected Setup (WPS) is an easy way to establish a secured wireless network between N+ Mini Broabband Router and wireless card. Users do not need to manually entering a creative, yet predictable security key on both Wi-Fi devices to prevent unwanted access to their wireless network. With WPS, it can automatically configure a wireless network with a network name (SSID) and strong WPA data encryption and authentication.

WPS can be enabled by 2 methods:

1. **PBC (Push button configuration) Method,** in which the user simply has to push a button, either an actual or a virtual one, on both WPS devices to connect.
2. **PIN (Personal Identification Number) Method,** in which a PIN has to be taken either from a sticker label or from the web interface of the WPS device. This PIN will then be entered in the AP or client WPS device to connect.

Please follow instructions below to enable the WPS function.

- **Start PBC:**

Press the **WPS button** from N+ Mini Broadband Router or click **Start PBC** from menu "**Wi-Fi Protected Setup**", and waiting for the WPS wireless card setting.

or

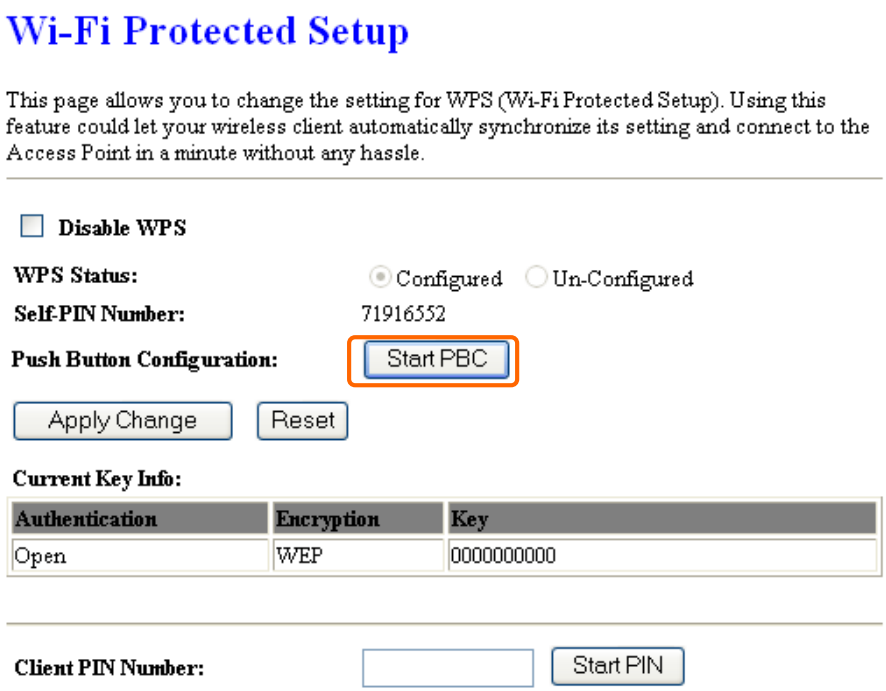

(1.) Open the "**Wireless Utility**" of your wireless card, and click its "**PBC**" button, to start auto pairing.

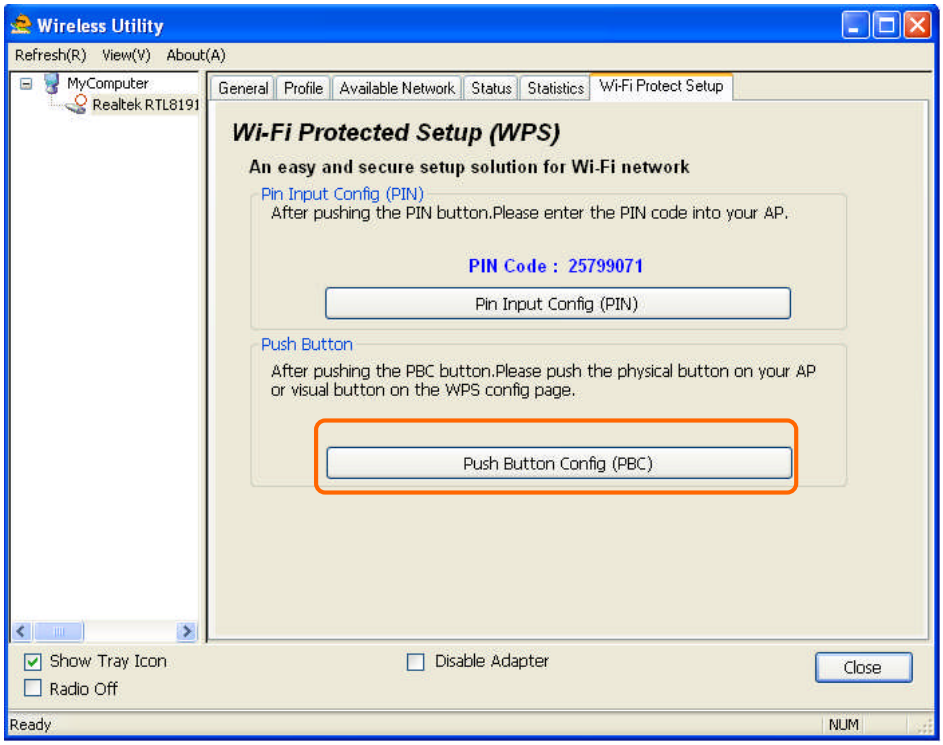

(2.) While scanning is successful, the information of the wireless card appears in the windows below.

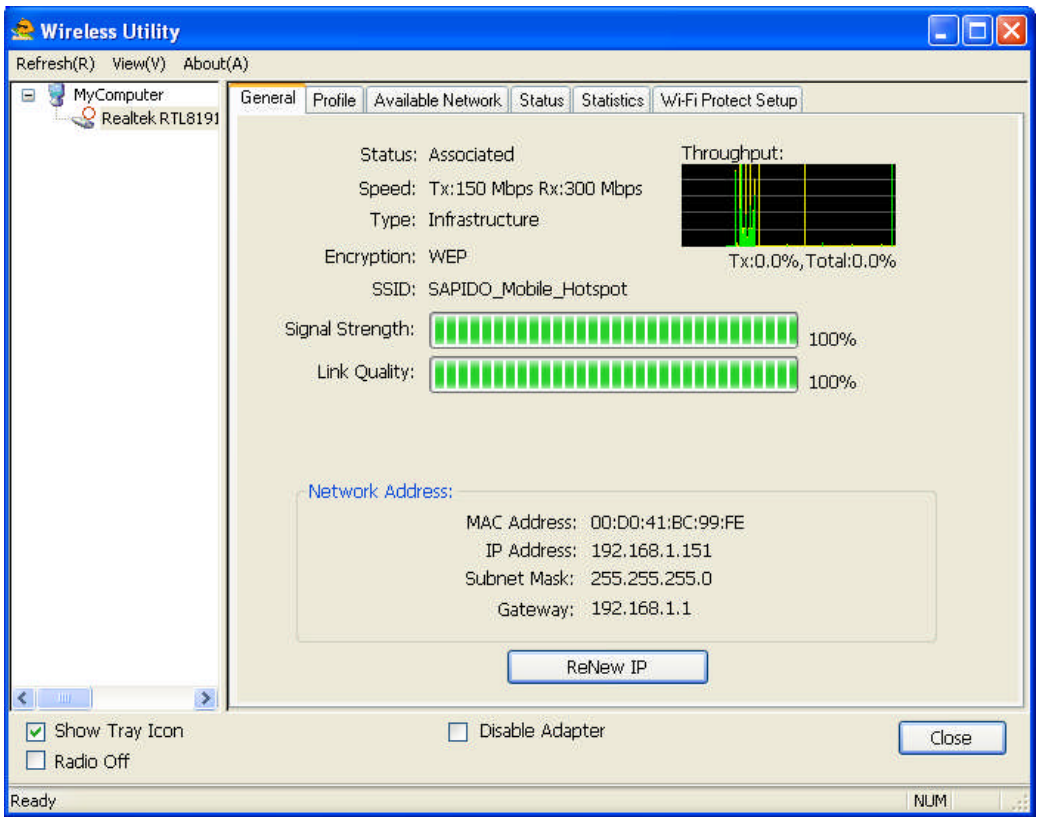

- **Start PIN:**

(1.) Open the "**Wireless Utility**" of your wireless card. Follow its PIN instruction to get a new PIN number. Write it down.

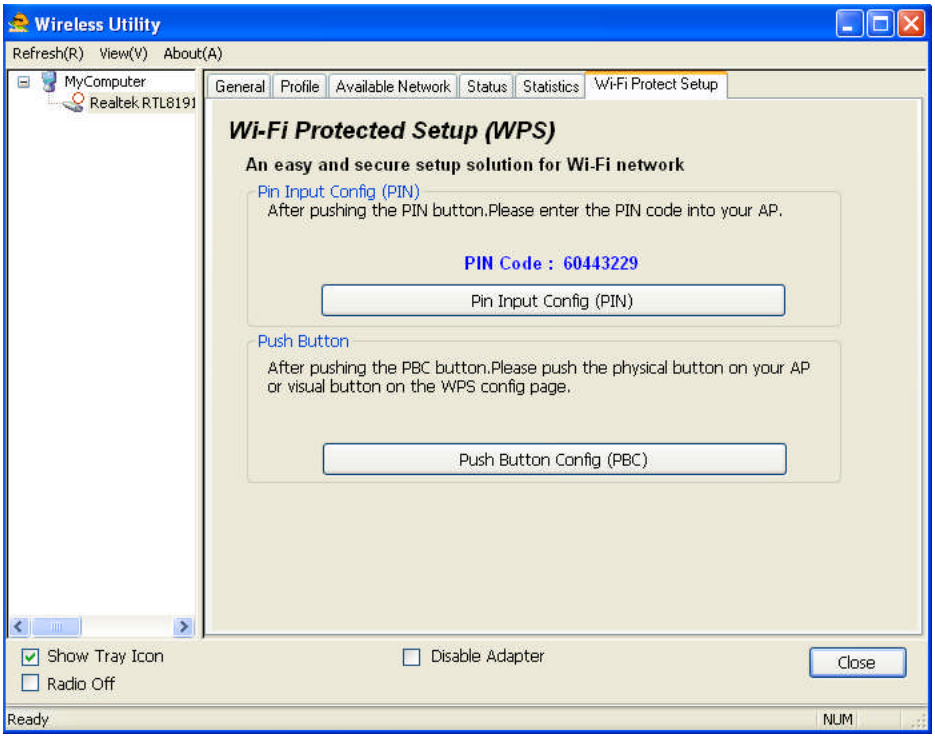

(2.) Open menu "**Wi-Fi Protected Setup**" of N+ Mini Router, input the PIN number from the wireless card then click **Start PIN**.

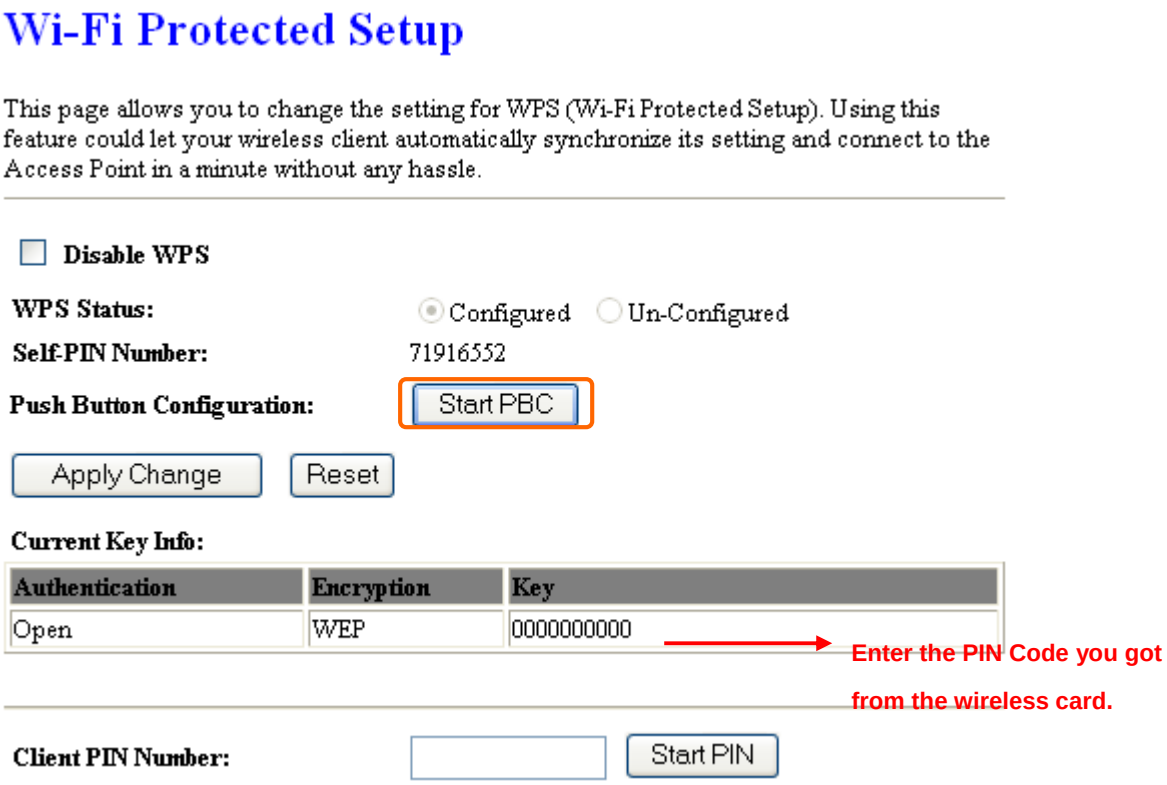

(3.) Back to **"Wireless Utility"** and press the **"Start PIN"** button to complete the auto-paring process.

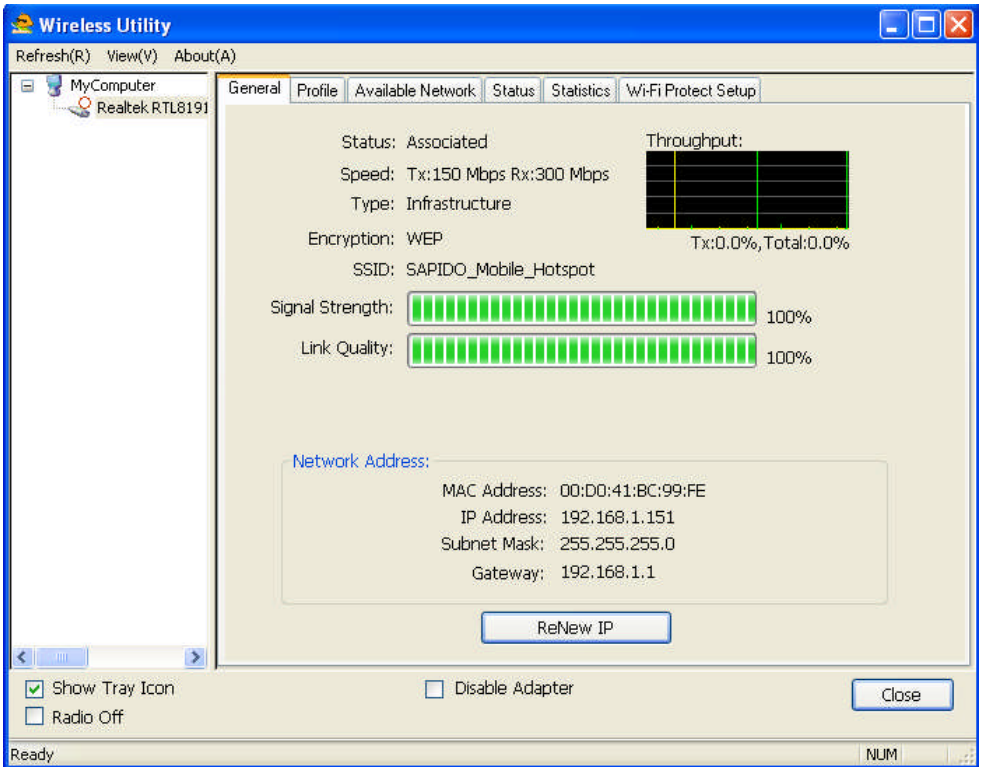

5.3 NAT

NAT is a method of mapping one or more IP addresses and/or services ports into different specified services, where NAT stands for Network Address Translation. It allows the internal IP addresses of many computers on a Local Area Network (LAN) to be translated to one public address, saving users' cost. It also plays a security role by obscuring the true IP addresses of important machines from potential hackers on the Internet. For convenience, we called a router having the NAT facility as a NAT-enabled router.

5.3.1 Visual Server

To offer services, like WWW, FTP, provided by a server in your local network accessible for outside users, you should specify a local IP address to the server. Then, add the IP address and network protocol type, port number, and name of the service in the following list. Based on the list, the gateway will forward service request from outside users to the corresponding local server.

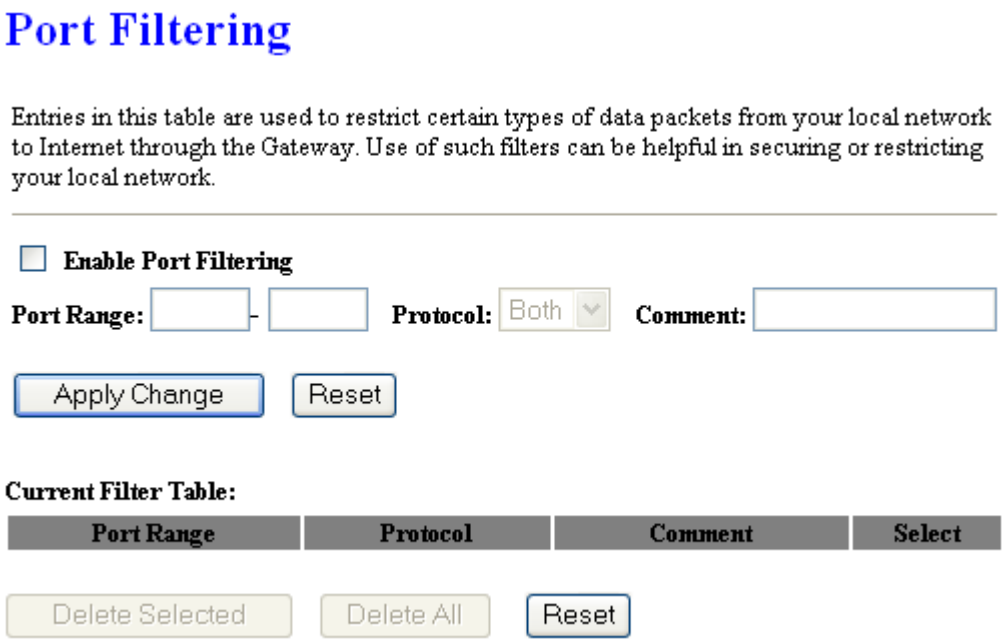

1. Enable Port Forwarding

Enable Port Forwarding to allow an external user to reach a port within a private LAN.

2. IP Address

Specify the private IP address of the internal host offering the service.

3. Protocol

Specify the transport layer protocol (TCP or UDP).

4. Port Range

Enter the Start and End ports in the range you'd like to forward. If you're just forwarding 1 port, set them both equal. For example 80-80 or 20-22。

5. Comment

You can add comments for this port forwarding rule.

6. Apply Changes & Reset

Click on **Apply Changes** to save the setting data. Or you may click on **Reset** to clear all the input data.

7. Current Port Forwarding Table

It will display all port forwarding regulation you made.

8. Delete Selected & Delete All

Click **Delete Selected** will delete the selected item. Click **Delete All** will delete all items in this table.

9. Reset

You can click **Reset** to cancel.

- **Port Forwarding**

  The following figure shows the ip forwarding configuration of your web on a local area network. The web server is located on 192.168.1.100, forwarding port is 80, and type is TCP+UDP.

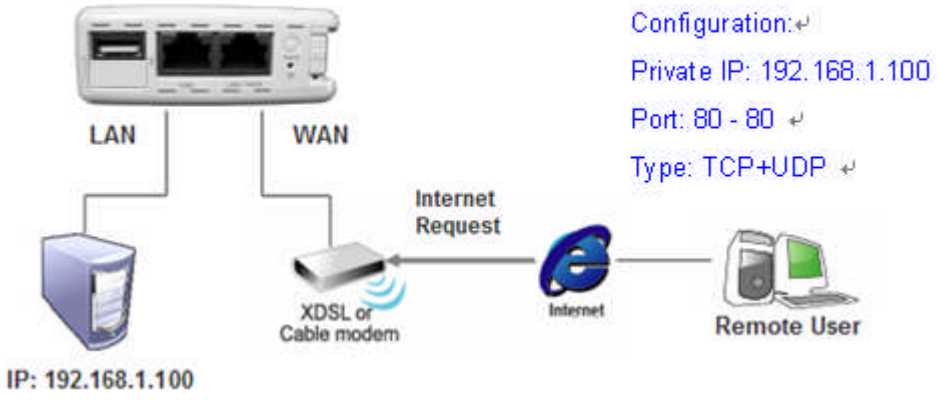

5.3.2 Visual DMZ

Virtual DMZ allows you to expose one computer to Internet, so that all inbound packets will be redirected to the computer you set. It is useful while you run some applications that use uncertain incoming ports. Please use it carefully.

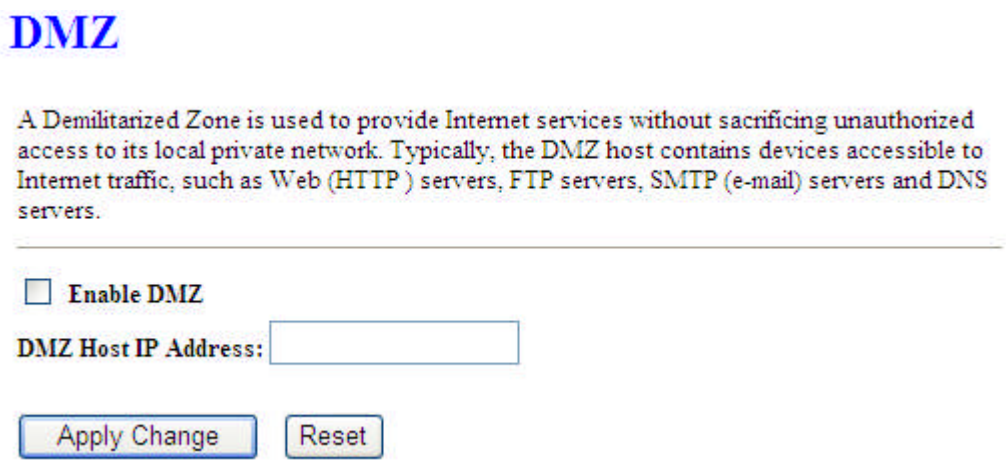
DMZ
A Demilitarized Zone is used to provide Internet services without sacrificing unauthorized access to its local private network. Typically, the DMZ host contains devices accessible to Internet traffic, such as Web (HTTP) servers, FTP servers, SMTP (e-mail) servers and DNS servers.
Enable DMZ
DMZ Host IP Address:
Apply Change
Reset

1. Enable DMZ

Check **Enable** to apply Virtual DMZ for the Router.

2. DMZ Host IP Address

This field stands for the destination IP address that you like to redirect the matched packet to.

3. Apply Changes & Reset

Click on **Apply Changes** to save the setting data. Or you may click on **Reset** to clear all the input data.

5.4 Firewall

The Firewall function helps to protect your local network against attacks from outside. It also provides a way of restricting users on the local network from accessing the Internet. Additionally, it can filter out specific packets to trigger the router to place an outgoing connection.

5.4.1 Port Filtering

This function allows users to filter and manage specific ports; to limit the use of certain applications to transmit through a specific port. Port filtering helps users to improve the security of your network.

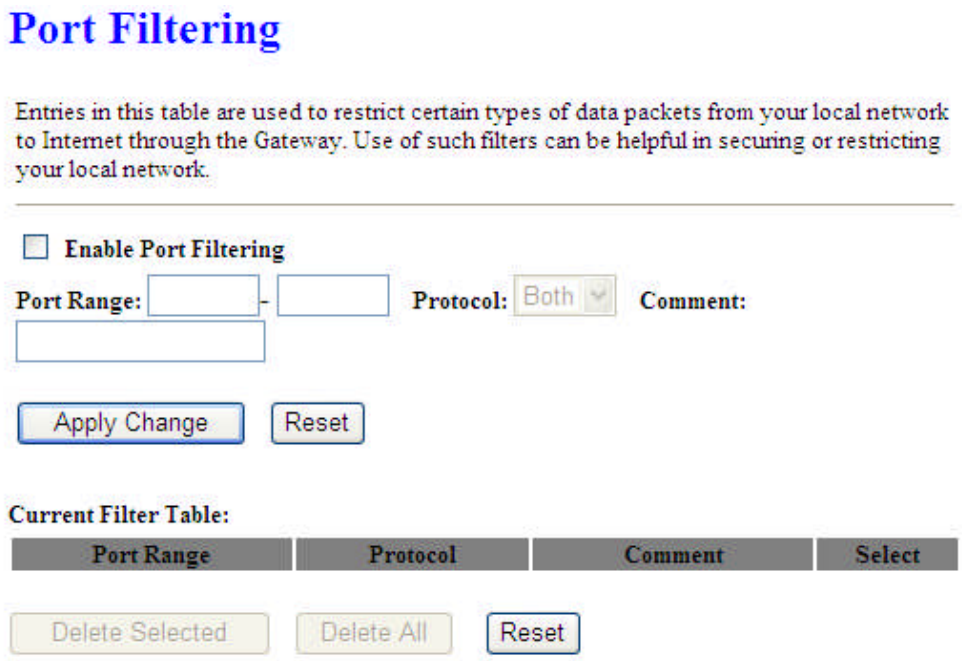

1. Enable Port Filtering

Check **Enable Port Filtering** to start the service.

2. Port Range

Enter the Start and End ports in the range you'd like them to be filtered.

3. Protocol

Please select the protocol type of the port.

4. Comment

You can add comments for this Port Filtering rule.

5. Apply Changes & Reset

Click on **Apply Changes** to save the setting data. Or you may click on **Reset** to clear all the input data.

6. Current Filter Table

It will display all ports that are filtering now.

7. Delete Selected & Delete All

Click **Delete Selected** will delete the selected item. Click **Delete All** will delete all items in this table.

8. Reset

You can click **Reset** to cancel.

- **Port Filtering**

  The following figure shows a user limits some applications to use the 80 port.

  *All clients inside the local area network can't open the 80 port through this router.

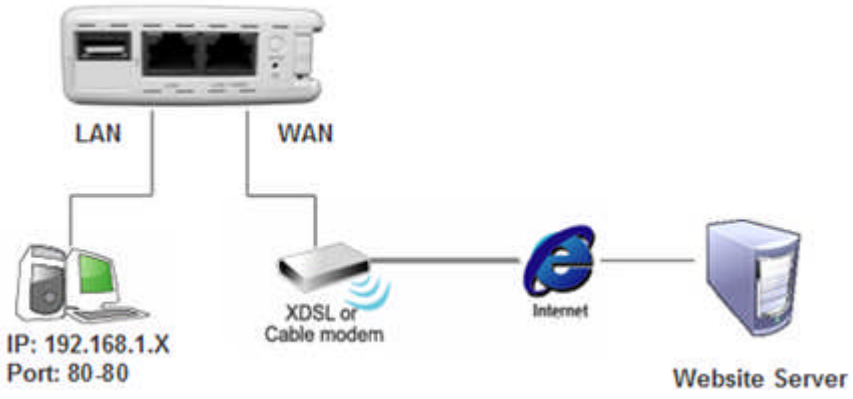

5.4.2 IP Filtering

Use IP Filter to deny LAN IP addresses from accessing the Internet. You can deny specific port numbers or all ports for the specific IP address.

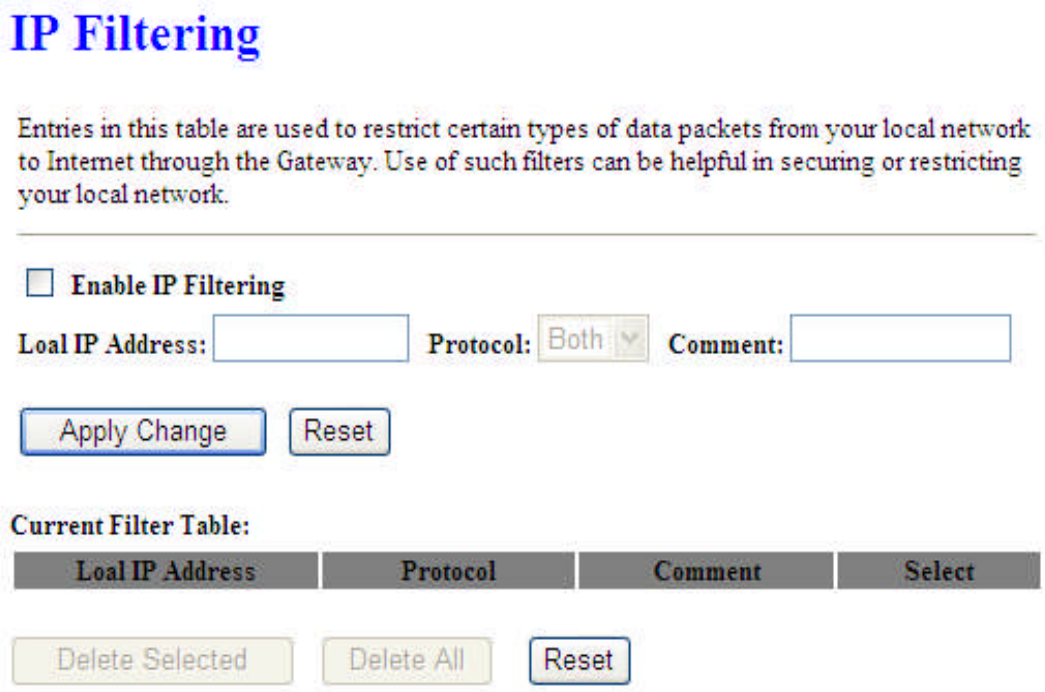

1. Enable IP Filtering

Check enable or disable to apply IP Filter function.

2. Local IP Address

Please enter the IP address that needs to be filtered.

3. Protocol

Please select the protocol type of the IP address.

4. Comment

You can add comments for this regulation.

5. Apply Changes & Reset

Click on **Apply Changes** to save the setting data. Or you may click on **Reset** to clear all the input data.

6. Current Filter Table

It will display all IP addresses that are filtering now.

7. Delete Selected & Delete All

Click **Delete Selected** will delete the selected item. Click **Delete All** will delete all items in this table.

8. Reset

You can click **Reset** to cancel.

5.4.3 MAC Filtering

Use MAC filters to deny LAN computers by their MAC addresses from accessing the Internet. You can manually add a MAC address that is currently connected to N+ Mini Router.

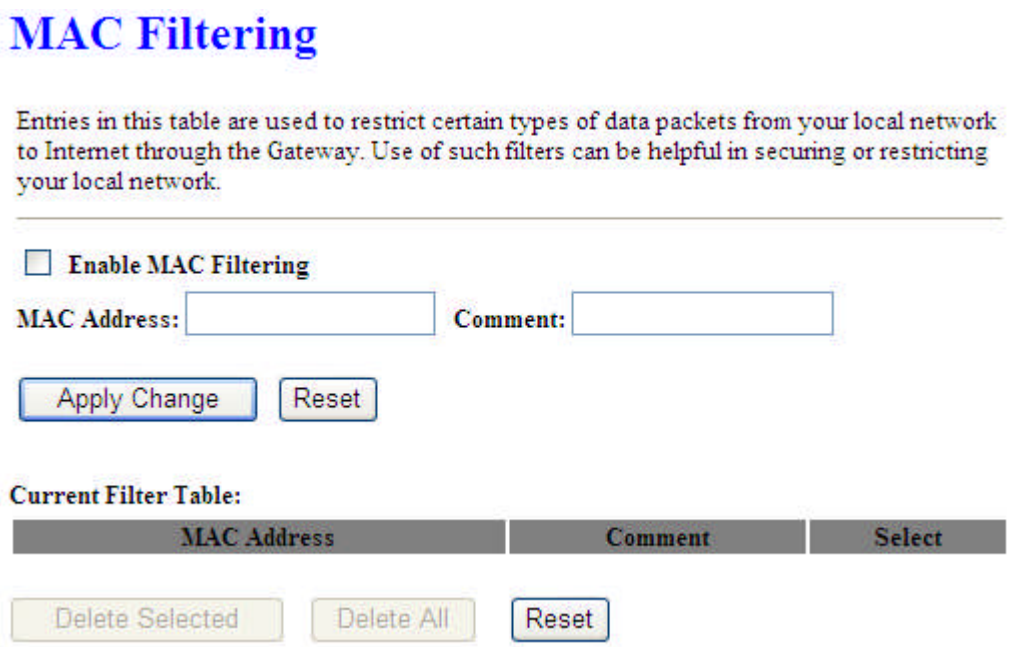
MAC Filtering
Entries in this table are used to restrict certain types of data packets from your local network to Internet through the Gateway. Use of such filters can be helpful in securing or restricting your local network.
Enable MAC Filtering
MAC Address:
Comment:
Apply Change
Reset
Current Filter Table:
MAC Address
Comment
Select
Delete Selected
Delete All
Reset

1. Enable MAC Filtering

Check enable or disable to apply MAC Filter function.

2. MAC Address

Enter the MAC address manually that you want to filter.

3. Comment

You can add comments for this MAC Filtering rule.

4. Apply Changes & Reset

Click on **Apply Changes** to save the setting data. Or you may click on **Reset** to clear all the input data.

5. Current Filter Table

It will display all MAC addresses that are filtering now.

6. Delete Selected & Delete All

Click **Delete Selected** will delete the selected item. Click **Delete All** will delete all items in this table.

7. Reset

You can click **Reset** to cancel.

5.4.4 URL Filtering

Keyword based URL (Uniform Resource Locator) filtering allows you to define one or more keywords that should not appear in URL's. Any URL containing one or more of these keywords will be blocked. This is a policy independent feature i.e. it cannot be associated to ACL rules. This feature can be independently enabled / disabled, but works only if firewall is enabled.

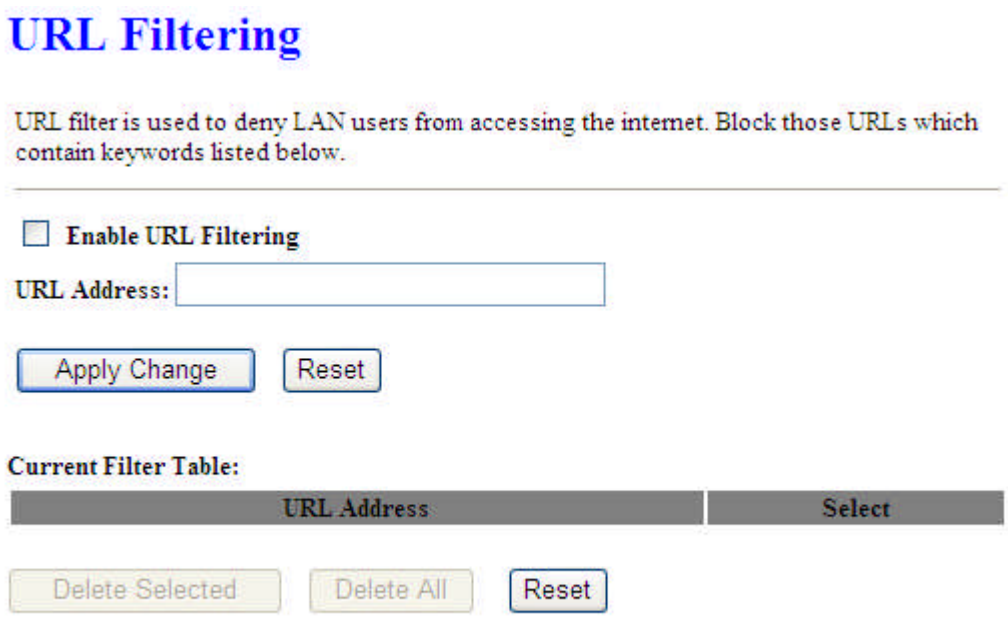

1. Enable URL Filtering

Check enable or disable to apply URL filter function.

2. URL Address

Enter the URL address into this blank to apply filter blocking, example: “www.yahoo.com.

3. Apply Change & Reset

Click on **Apply Change** to save the setting data. Or you may click on **Reset** to clear all the input data.

4. Current Filter table

Shows all filtered URL information.

5. Delete Selected & Delete All

Click **Delete Selected** will delete the selected item. Click **Delete All** will delete all items in this table.

6. Reset

You can click **Reset** to cancel.

Note: URL Filtering cannot work when the Visual Server is enabled. Please disable Visual Server before activate filter.

5.5 System Management

N+ Mini Router provides system management including password changing, firmware upgrade, time setting, user's account setting and other detail settings. Following is detail explanation for each.

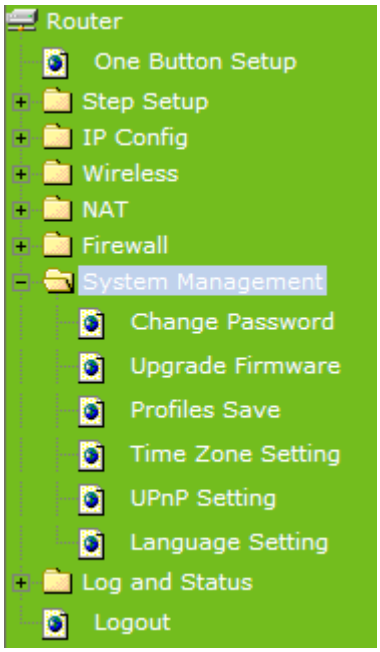

5.5.1 Change Password

Users can set or change their password in this section.

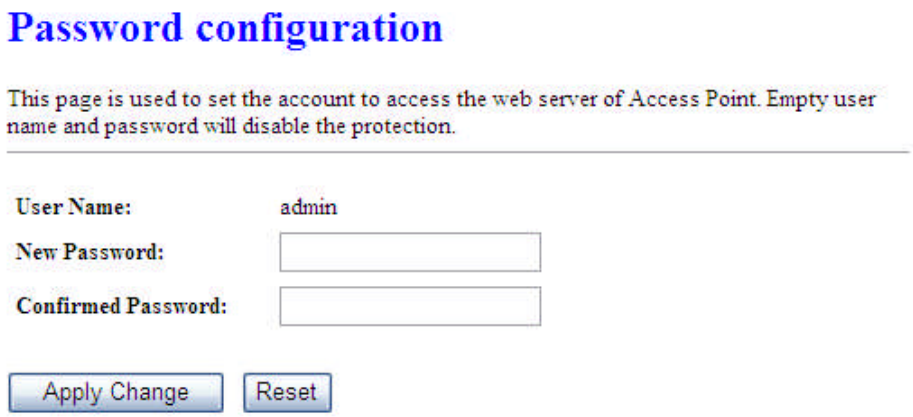
Password configuration
This page is used to set the account to access the web server of Access Point. Empty user name and password will disable the protection.
User Name:
admin
New Password:
Confirmed Password:
Apply Change
Reset

1. New Password

Enter the new password you want to change.

2. New Password (Confirm)

Enter the new password again for confirming.

3. Apply & Cancel

Click **Apply** to continue or **Cancel** to clear the settings on this page.

Note: 1. Only the password can be changed, the user name for administrator is **admin** and not to be changed.
2. If you forget administrator's password, please reset 3.5G plus WLAN Mobile Server Router to default setting by pressing the "**Reset**" button on the rear panel over 5 seconds. And the password will return to **admin**.

5.5.2 Upgrade Firmware

There is certain risk while upgrading firmware. Upgrading firmware is not recommended unless the significant faulty is found. You can upgrade the firmware of N+ Mini Router on this page. Make sure the firmware you want to use is on the local hard drive of the computer. Click **Upgrade Firmware** to proceed.

Firmware Upgrade
This page allows you upgrade the Access Point firmware to new version. Please note,do not power off the device during the upload because it may crash the system.
Select File:
Browse...
Upload
Reset

1. Update Firmware

Click on **Browse…** button to search your local hard drive and locate the firmware to be used for update.

2. Upload & Reset:

Click **Upload** to upgrade the firmware or **Reset** to restore to factory default Settings

Note: 1. To prevent the firmware upgrading interrupted by other wireless signals and caused failure. We recommend using wired connection to do the upgrading.
2. Before upgrading the firmware, please remove any USB device which connected with this router.
3. The firmware upgrade will not remove your previous settings.

- **Reset button:**

On the back of this router, there is a reset button. If you can not login the administrator page by forgetting your password; or the router has problem you can't solve. You can push the reset button for 5 seconds with a stick. The router will reboot and all settings will be restored to factory default settings. If the problem still exists, you can visit our web site to see if there is

any firmware for download to solve the problem.

5.5.3 Save / Reload Settings

To back up the current configuration setting or load the backup data, also you can restore N+ Mini Broadband Router to default setting by this function.

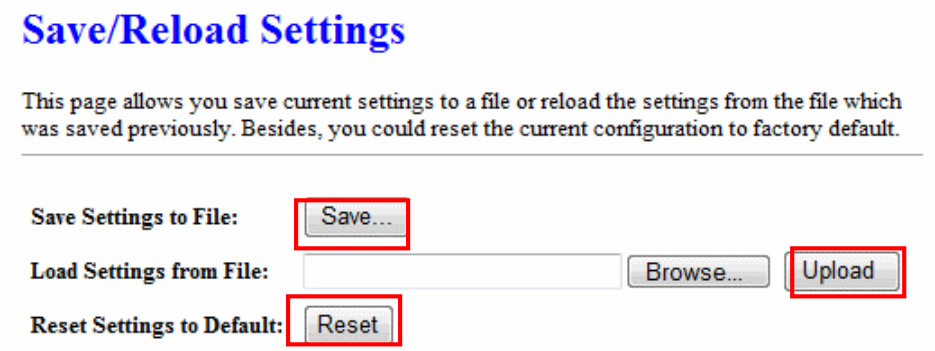
Save/Reload Settings
This page allows you save current settings to a file or reload the settings from the file which was saved previously. Besides, you could reset the current configuration to factory default.
Save Settings to File:
Save...
Load Settings from File:
Browse...
Upload
Reset Settings to Default:
Reset

1. Save Settings To File

Step 1. Click on **Save** button for saving the configuration setting into assigned location.

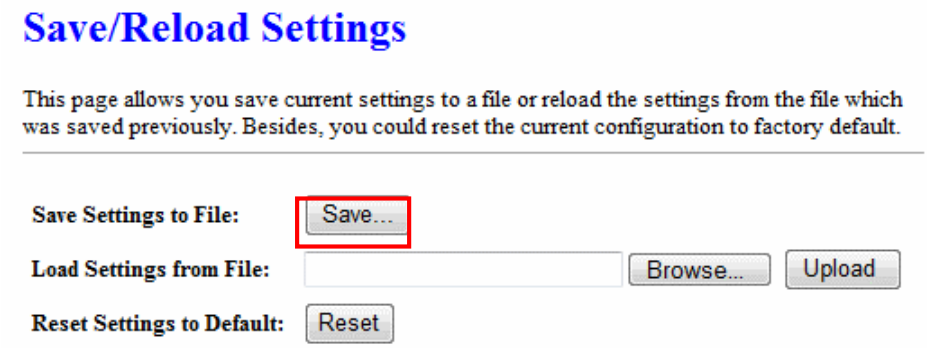
Save/Reload Settings
This page allows you save current settings to a file or reload the settings from the file which was saved previously. Besides, you could reset the current configuration to factory default.
Save Settings to File:
Save...
Load Settings from File:
Browse...
Upload
Reset Settings to Default:
Reset

A pop window will show up and ask to save **config.dat** file.

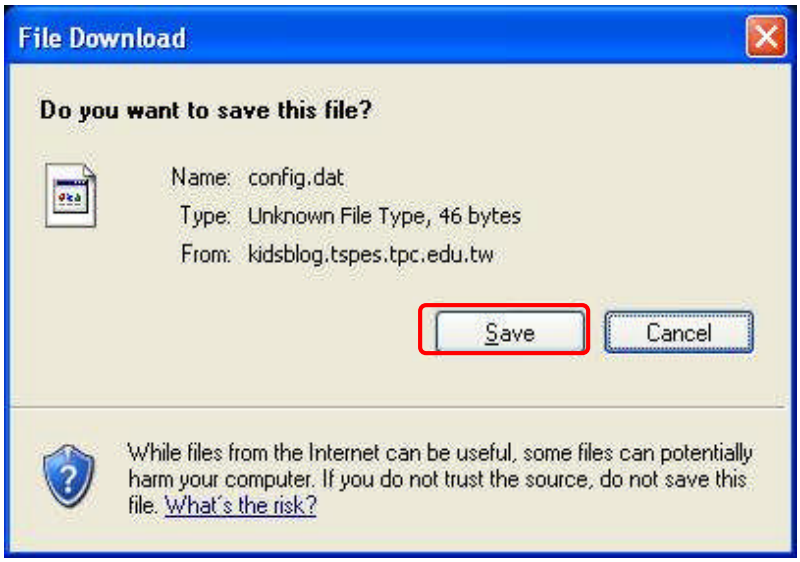
File Download
Do you want to save this file?
Name: config.dat
Type: Unknown File Type, 46 bytes
From: kidsblog.tspes.tpc.edu.tw
Save
Cancel
While files from the Internet can be useful, some files can potentially harm your computer. If you do not trust the source, do not save this file. What's the risk?

Step 2. Please select the location, for example: the desktop.

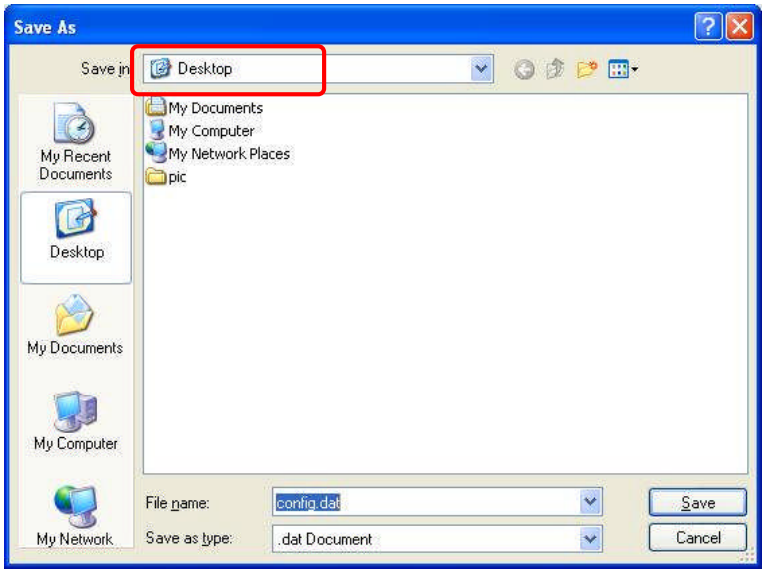

Step 3. The file you just saved will appear on the desktop.

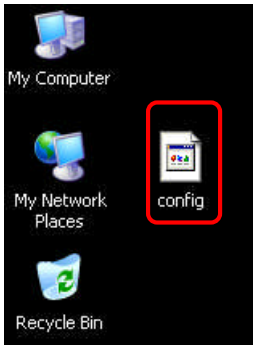

2. Load Settings From File

Step 1. Click on "**Browse…**" button for searching the saving configuration from hard drive, and then click on Upload button to load all the settings into the router.

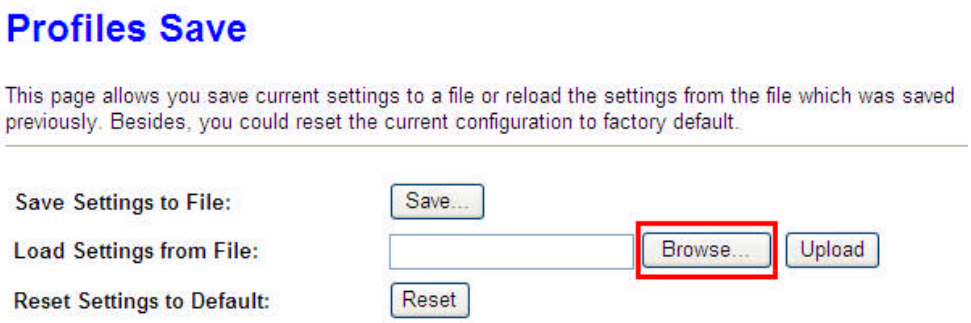
Profiles Save
This page allows you save current settings to a file or reload the settings from the file which was saved previously. Besides, you could reset the current configuration to factory default.
Save Settings to File:
Save...
Load Settings from File:
Browse...
Upload
Reset Settings to Default:
Reset

Step 2. Select the **config.dat** file.

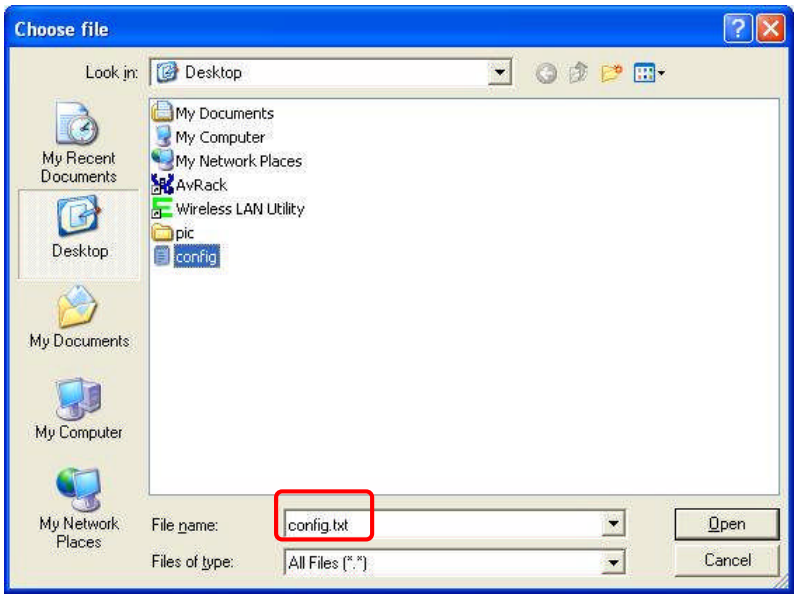

Step 3. Click **Upload** to retrieve.

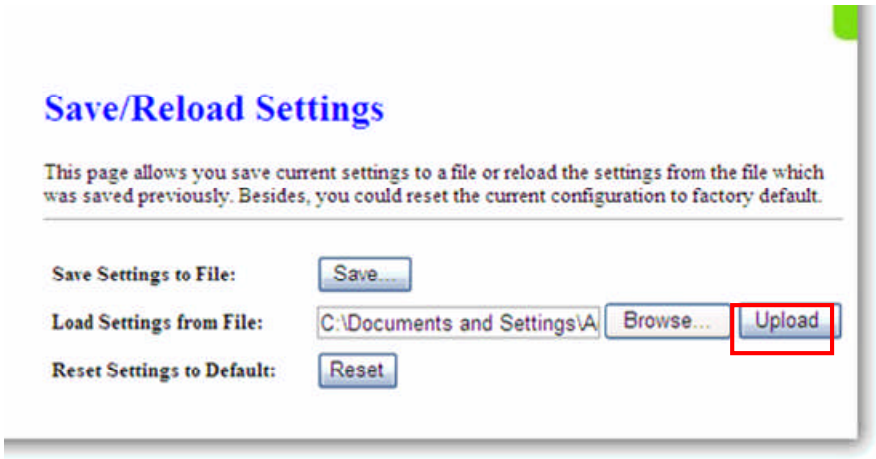
Save/Reload Settings
This page allows you save current settings to a file or reload the settings from the file which was saved previously. Besides, you could reset the current configuration to factory default.
Save Settings to File:
Save...
Load Settings from File:
C:\Documents and Settings\A
Browse...
Upload
Reset Settings to Default:
Reset

Step 4. When you see the screen below, the updating is completed. Please click OK to return to the main menu.

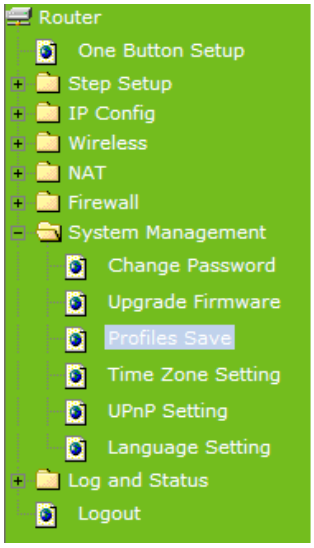

Change setting successfully!

System is configuring, after 64 seconds system will return to the previous page.

3. Reset Setting to Default

After you have tried other methods for troubleshooting your network, you may choose to restore N+ Mini Router to the factory default settings.

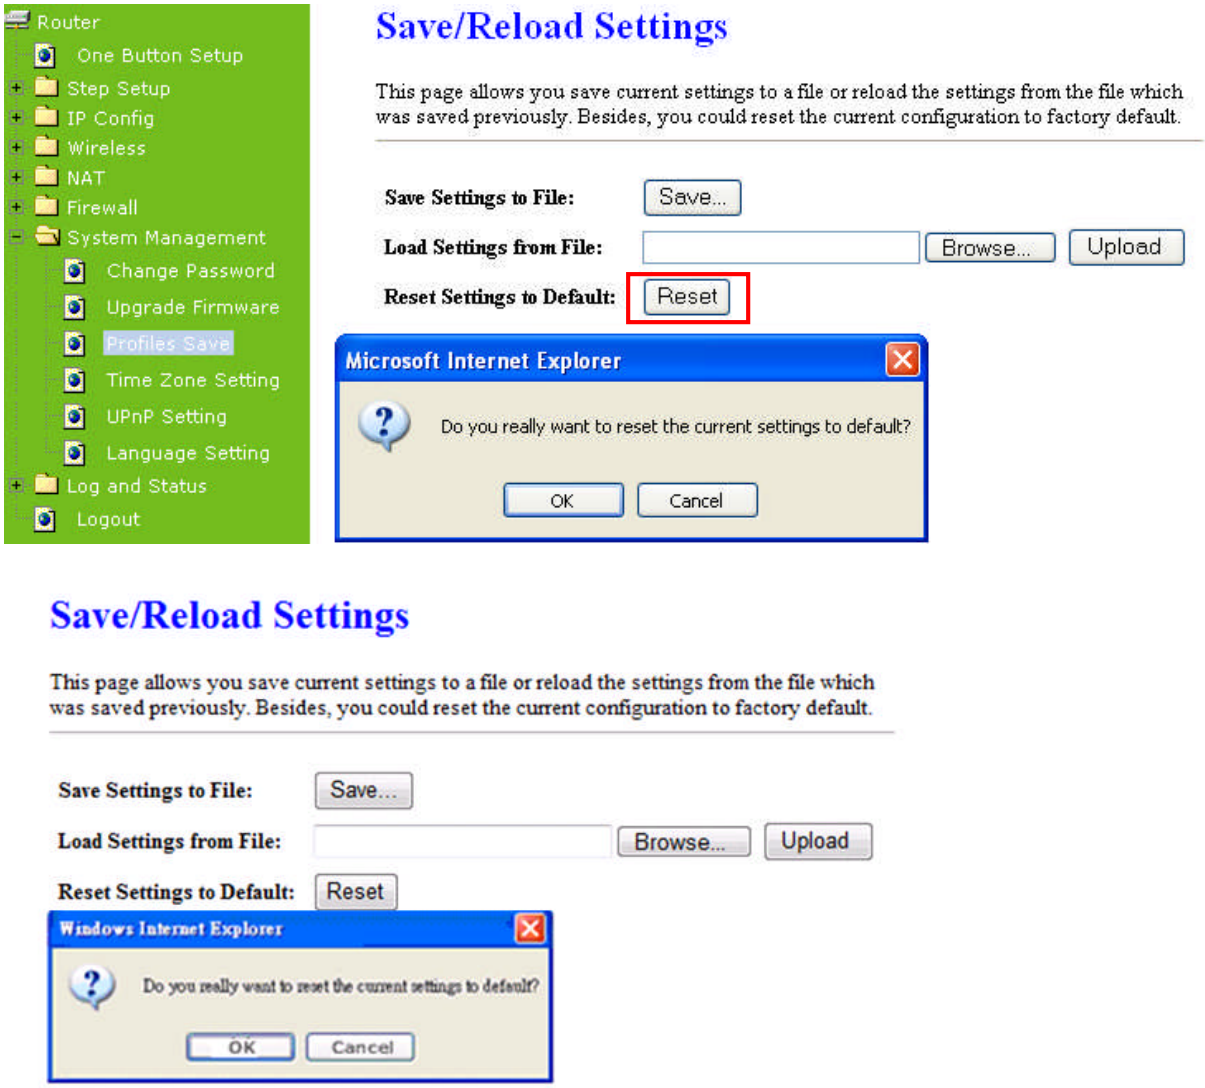

Save/Reload Settings
This page allows you save current settings to a file or reload the settings from the file which was saved previously. Besides, you could reset the current configuration to factory default.
Save Settings to File:
Save...
Load Settings from File:
Browse...
Upload
Reset Settings to Default:
Reset
Windows Internet Explorer
Do you really want to reset the current settings to default?
OK
Cancel

When you see the screen below, the resetting is completed. Please click **OK** and return to the main menu.

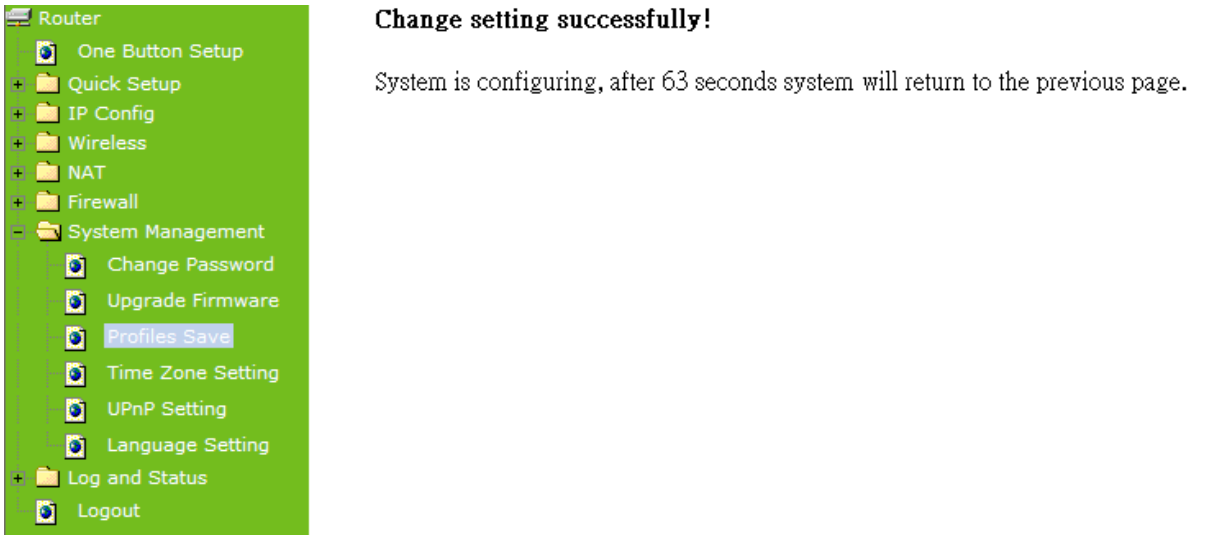

5.5.4 Time Zone Setting

The System time is the time used by N+ Mini Router for scheduling services. You can manually set the time or connect to a NTP (Network Time Protocol) server. If a NTP server is set, you will only need to set the time zone. If you manually set the time, you may also set Daylight Saving dates and the system time will automatically adjust on those dates.

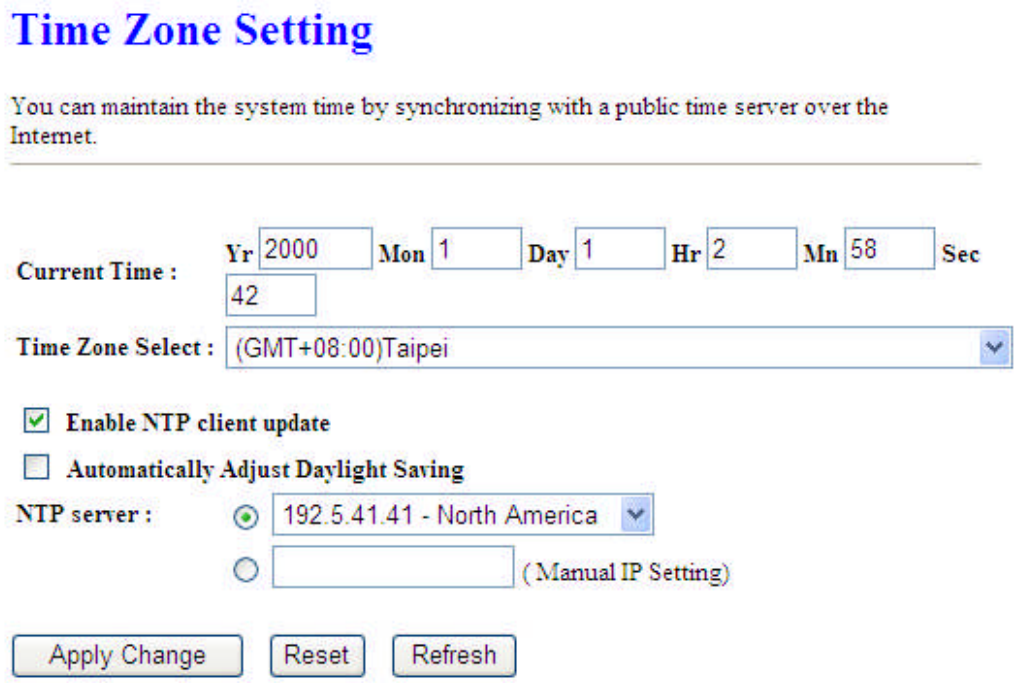
Time Zone Setting
You can maintain the system time by synchronizing with a public time server over the Internet.
Current Time :
Yr 2000 Mon 1 Day 1 Hr 2 Mn 58 Sec 42
Time Zone Select :
(GMT+08:00)Taipei
Enable NTP client update
Automatically Adjust Daylight Saving
NTP server :
192.5.41.41 - North America
(Manual IP Setting)
Apply Change
Reset
Refresh

1. Current Time

Users can input the time manually.

2. Time Zone Select

Select your time zone location from the drop-down list.

3. Enable NTP client update

Check to enable NTP client update.

4. Automatically Adjust Daylight Saving

If you are in daylight saving time area, please enable this item.

5. NTP server

Please select the NTP server from the pull-down list, or you can enter the NTP server IP address manually.

6. Apply Changes & Reset & Refresh

Please click on **Apply Changes** to save the setting data. Or you may click on **Reset** to clear all the input data. Or you may click on **Refresh** to update the system time on the screen.

7. NTP Server Type & Default NTP Server

Choose **"General Time Server" and select** the NTP Server from the drop-down list or choose "Customized Time Server" and enter the server by manual.

5.5.5 UPnP Setting

UPnP (Univsersal Plug and Play) allows users to connect their UPnP-enabled broadband router, printer server and other devices right to the network with zero-configuration, meaning easier setup for installing the device on the network. The automatic discovery feature enables the device to obtain an IP address, present and describe itself to other devices and PCs on the network without having to install drivers, but to configure and use those devices.

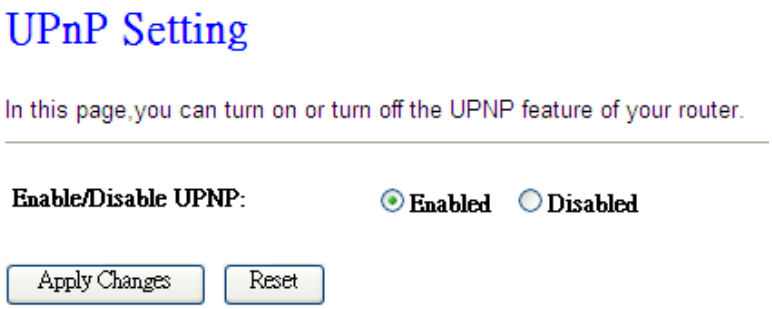

After enabling UPNP, click **My Network Places,** and user can open the web GUI by just clicking on the **Internet Gateway Device** icon.

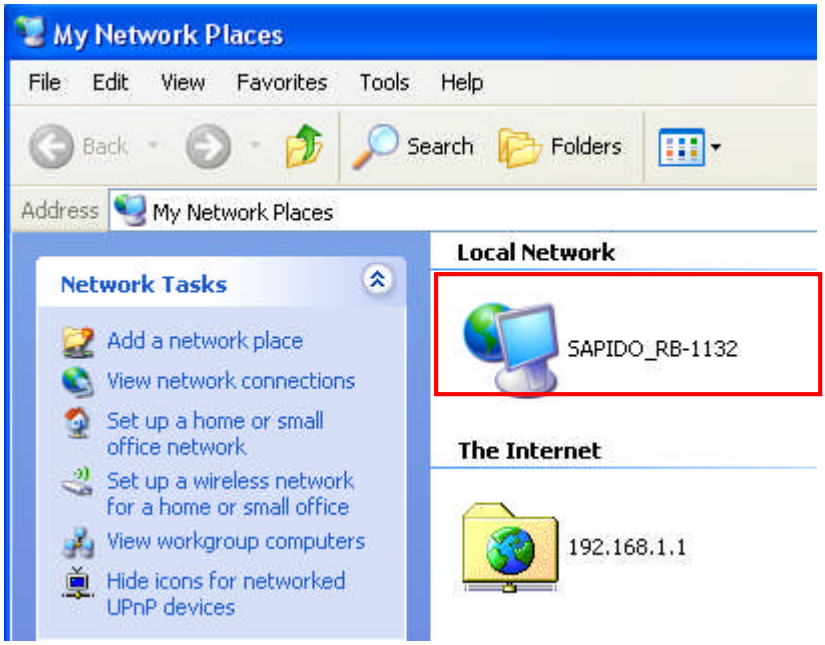

5.5.6 Language Setting

N+ Mini Broadband Router provides a user friendly interface in 12 languages. You can create your own language interface by following steps.

Step 1. Select Language: Select your preferred language from the drop down list, for example, Spanish, and then click **Apply Change**.

Step 2. When you see the screen with message in your selected language, the Language setup is completed.

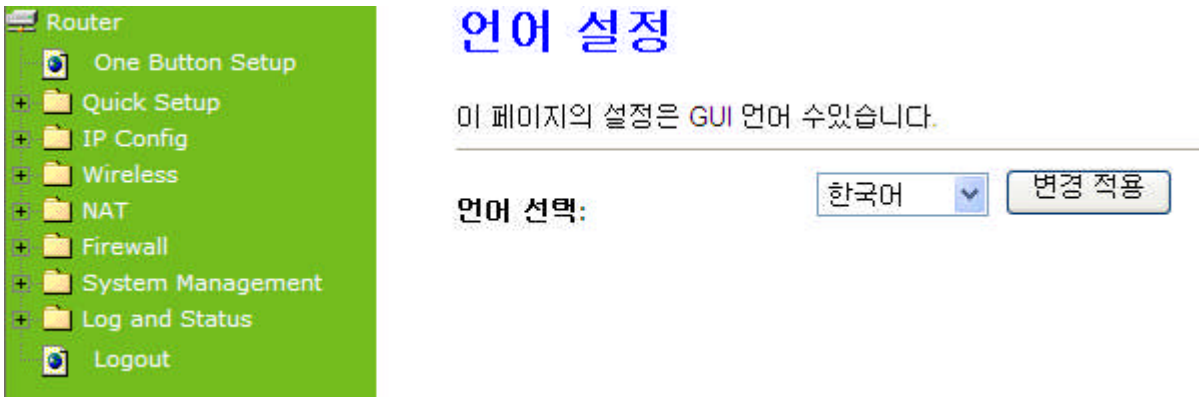

Note: In order to prevent the incomplete translation, you can press “CTRL+F5” to force reload of the page.

5.6 Log & Status

N+ Mini Broadband Router provides the log list and connection status for user to check.

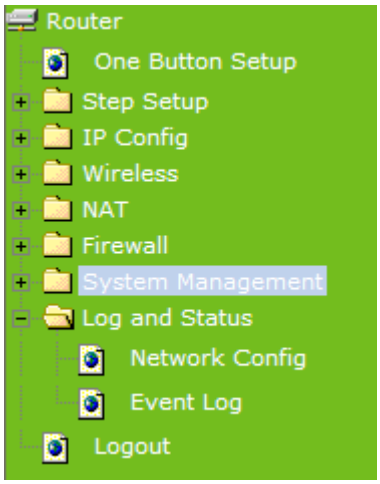

5.6.1 Network Config

Network Configuration shows the firmware version and the connection status of LAN, WAN and Wireless.

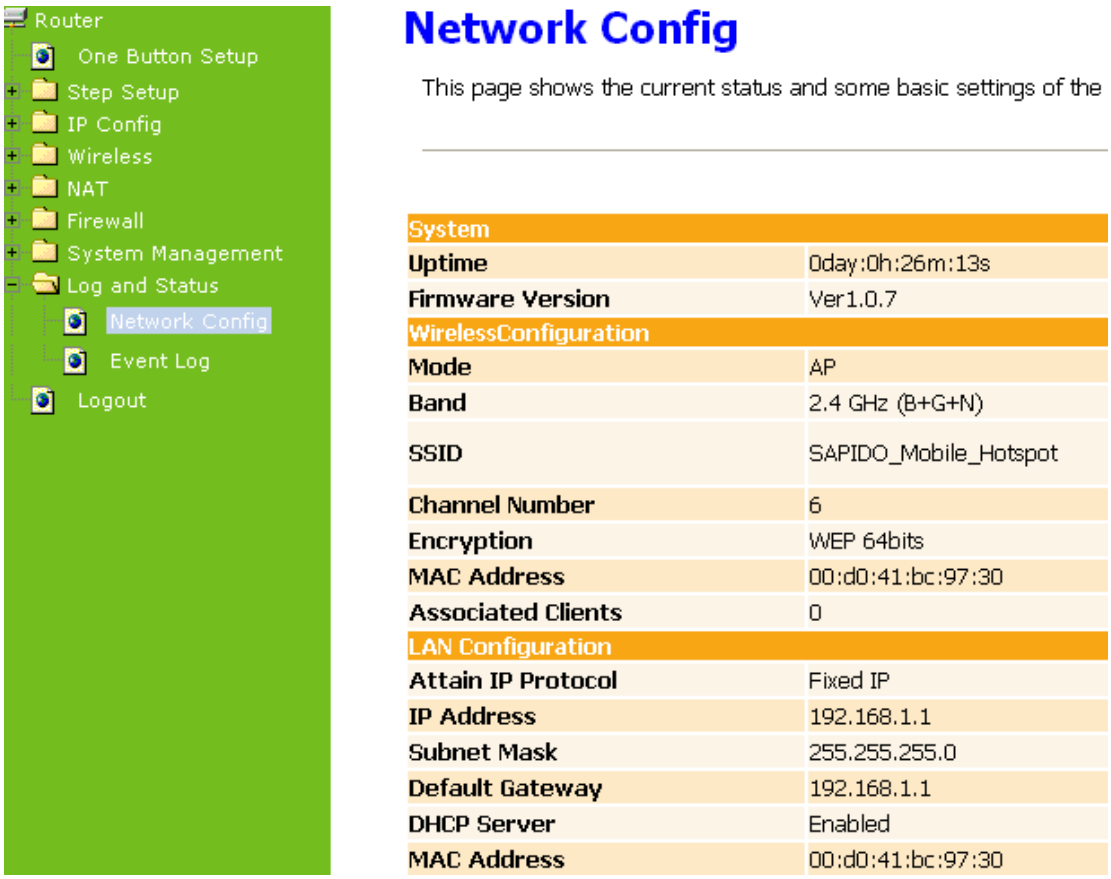

5.6.2 Event Log

N+ Mini Broadband Router provides system logs for review.

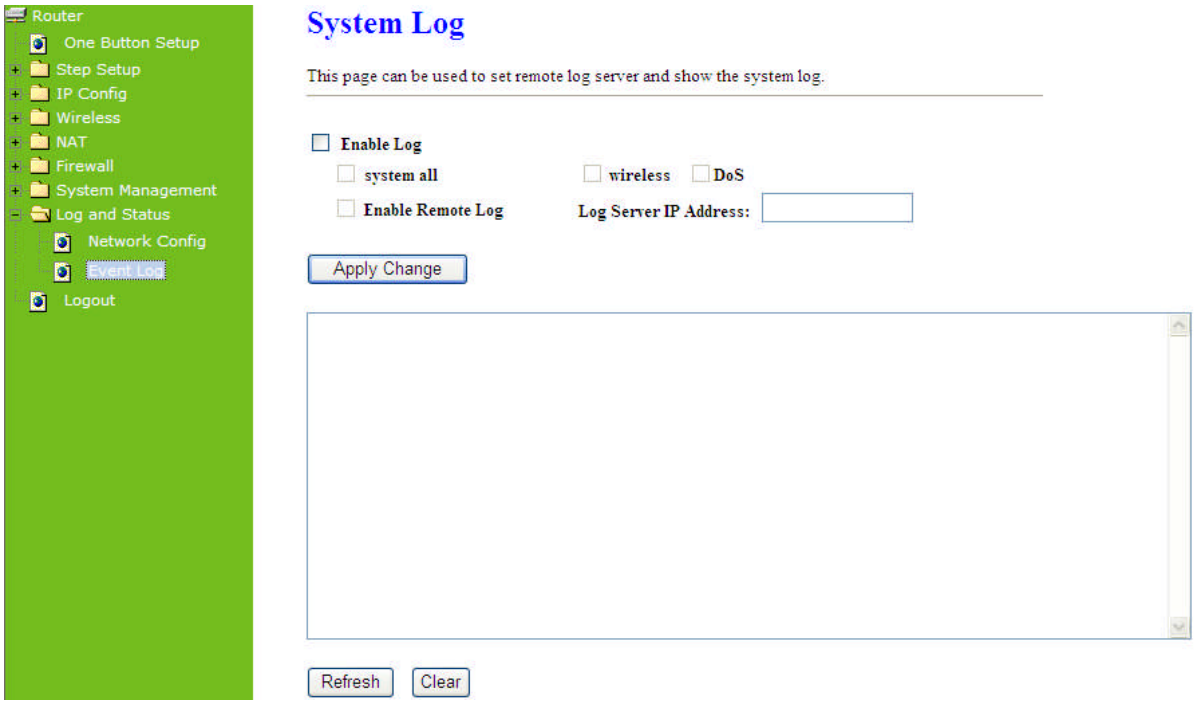

1. Enable Log

Select Enable Log to record the system log

2. system all, wireless & DoS

Select **Wireless, DoS** or **system all** to record

3. Enable Remote Log

You may choose to enable the remote event log or not.

4. Log Server IP Address

Please input the log server IP Address.

5. Apply Changes & Refresh & Clear

Click on **Apply Changes** to save the setting data. Click on **Refresh** to renew the system time, or on **Clear** to clear all the record.

- After clicking **Apply Changes** to record the event log, it will be shown as the example below.

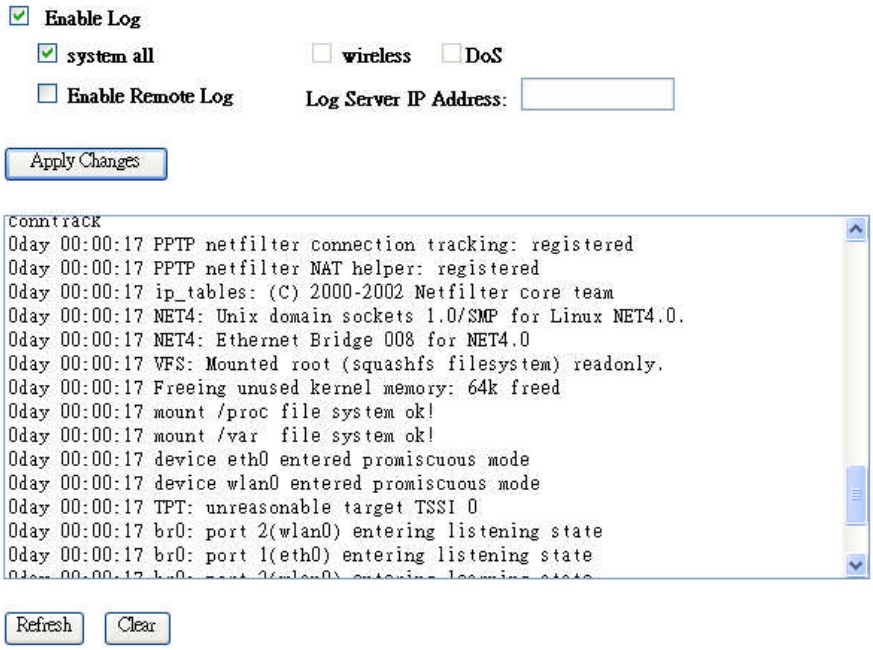
Enable Log
system all
wireless
DoS
Enable Remote Log
Log Server IP Address:
Apply Changes
Conntrack
0day 00:00:17 PPTP netfilter connection tracking: registered
0day 00:00:17 PPTP netfilter NAT helper: registered
0day 00:00:17 ip_tables: (C) 2000-2002 Netfilter core team
0day 00:00:17 NET4: Unix domain sockets 1.0/SMP for Linux NET4.0.
0day 00:00:17 NET4: Ethernet Bridge 008 for NET4.0
0day 00:00:17 VFS: Mounted root (squashfs filesystem) readonly.
0day 00:00:17 Freeing unused kernel memory: 64k freed
0day 00:00:17 mount /proc file system ok!
0day 00:00:17 mount /var file system ok!
0day 00:00:17 device eth0 entered promiscuous mode
0day 00:00:17 device wlan0 entered promiscuous mode
0day 00:00:17 TPT: unreasonable target TSSI 0
0day 00:00:17 br0: port 2(wlan0) entering listening state
0day 00:00:17 br0: port 1(eth0) entering listening state
Refresh
Clear

5.7 Logout

Click **Logout** on the bottom menu to exit and go back to GUI login home page.

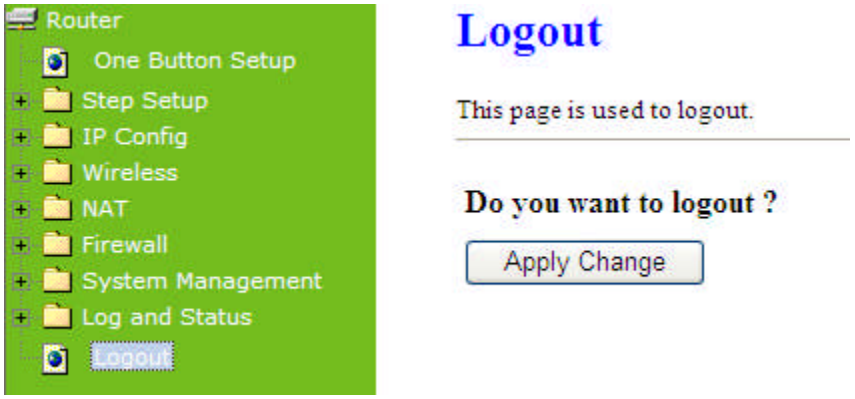

Chapter 6 Advance Configuration for AP Mode

6.1 IP Configuration

This function allows you to add routing rules into N+ Mini Broadband Router, including LAN and Site Survey.

6.1.1 LAN Setup

Use this page to set up the local IP address and subnet mask for your router. Please select **LAN** under the **IP Config** menu and follow the instructions below to enter the LAN setting page to configure the settings you want.

6.1.2 LAN Interface Setup

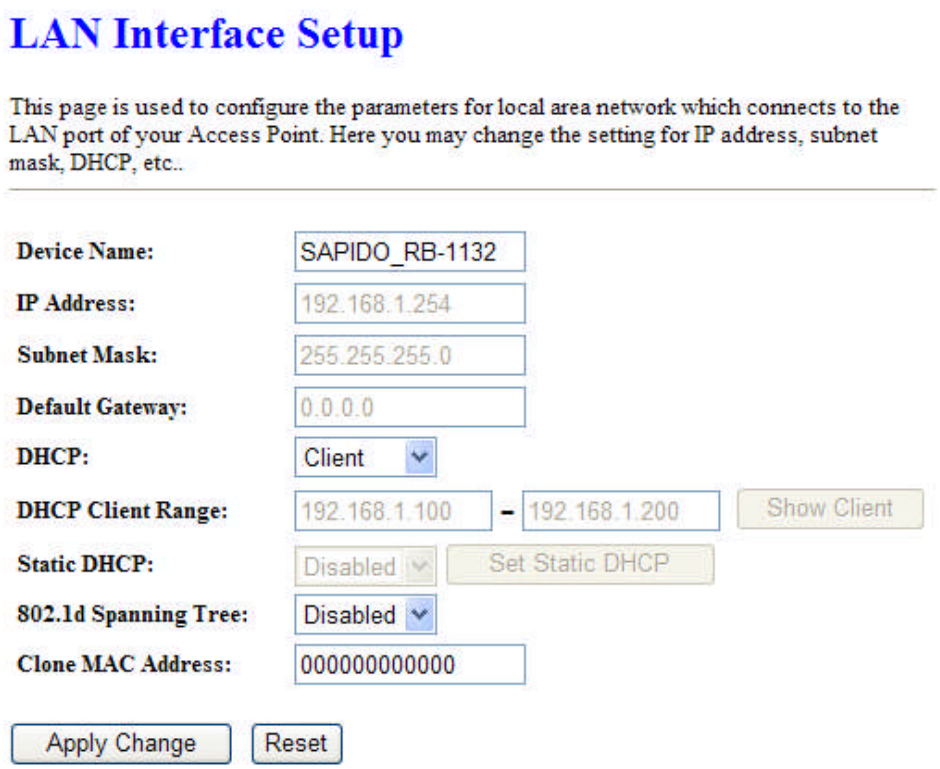

1. IP Address

The default value of LAN IP address is **192.168.1.254** for this router.

2. Subnet Mask

Input Subnet Mask, normally it is **255.255.255.0**.

3. Default Gateway

Input ISP Default Gateway Address. If you don't know, please check with your ISP.

4. DHCP

Enable or disable DHCP services. The DHCP server will automatically allocate an unused IP address from the IP address pool to the requesting computer if enabled.

5. DHCP Client Range

Define the DHCP client range and then the DHCP server will assign an IP to the requesting computer from this range. The **Show Client** will display every assigned IP address, MAC address, and expired time. The default range is 192.168.1.100 - 192.168.1.200.

6. 802.1d Spanning Tree

IEEE 802.1d Spanning Tree Protocol (STP) is a link layer network protocol that ensures a loop-free topology for any bridged LAN. The main purpose of STP is to ensure that you do not

create loops when you have redundant paths in your network. Loops are deadly to a network.

7. Clone MAC Address

Copy the MAC address from the device you had registered to your ISP if your ISP asks for the specific MAC Address.

8. Apply Changes & Reset

Click on **Apply Changes** to save the setting data. Or you may click on **Reset** to clear all the input data.

6.2 Wireless Setup

Please select **Wireless** under the main menu.

6.2.1 Wireless Basic Settings

Follow the instructions to configure the **Wireless** settings.

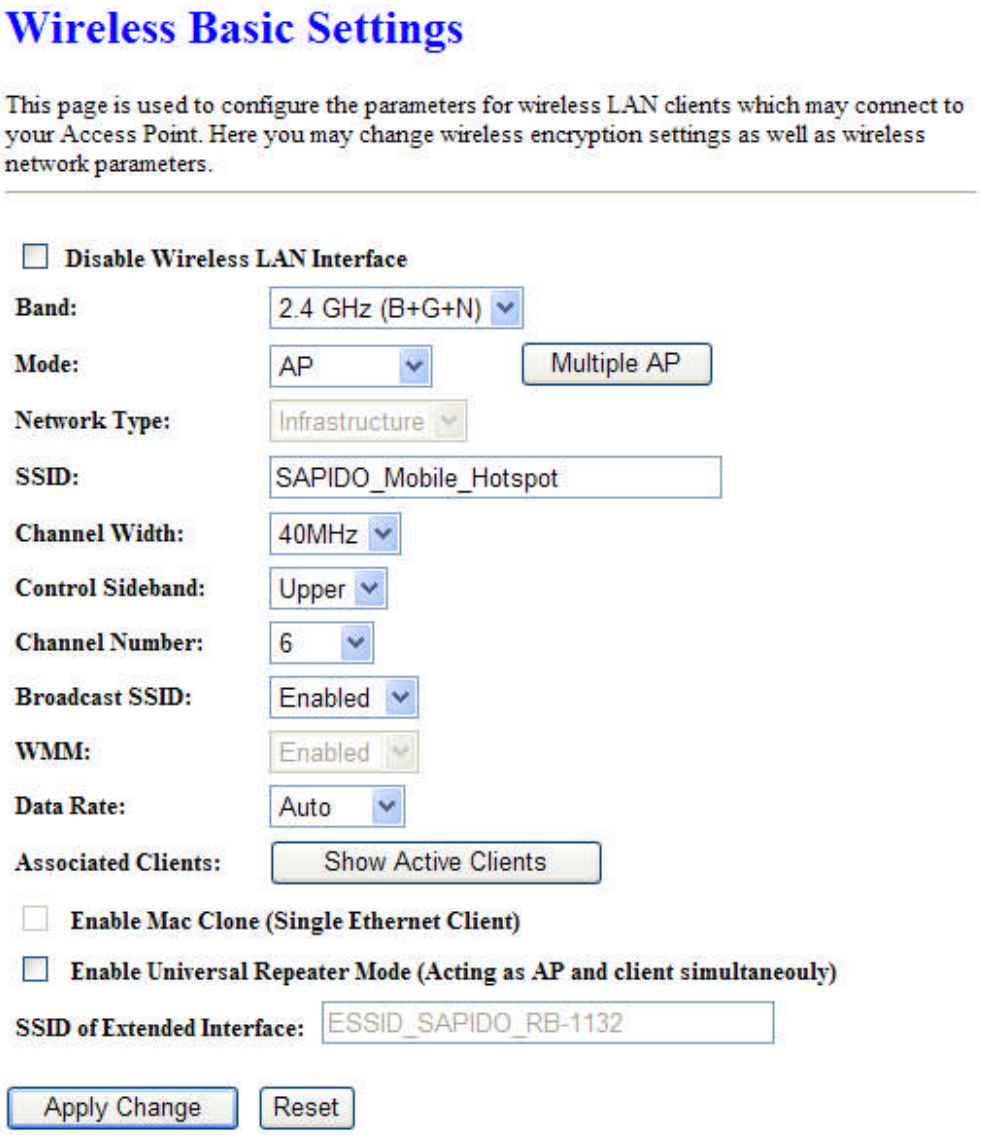

1. Disable Wireless LAN Interface

Select **Disable Wireless LAN Interface** to turn off the wireless function.

2. Band

This field indicates the 802.11x interface mode. For example, "**2.4GHz(G)**" prevents the 802.11b clients from accessing the router. "**2.4GHz(B+G)**" allows both 802.11b and 802.11g clients to access the router. There are 6 options, 2.4 GHz (B/G/N/B+G/G+N/B+G+N) from the drop down list.

3. Mode

Select **AP, WDS,** or **AP+WDS** to allow or disallow the wireless operation.

- **Multiple APs**

Click Multiple APs to set up 4 different SSIDs to deploy a shared WLAN. Users can add or limit the properties for each SSID, increasing the flexibility and efficiency of the network.

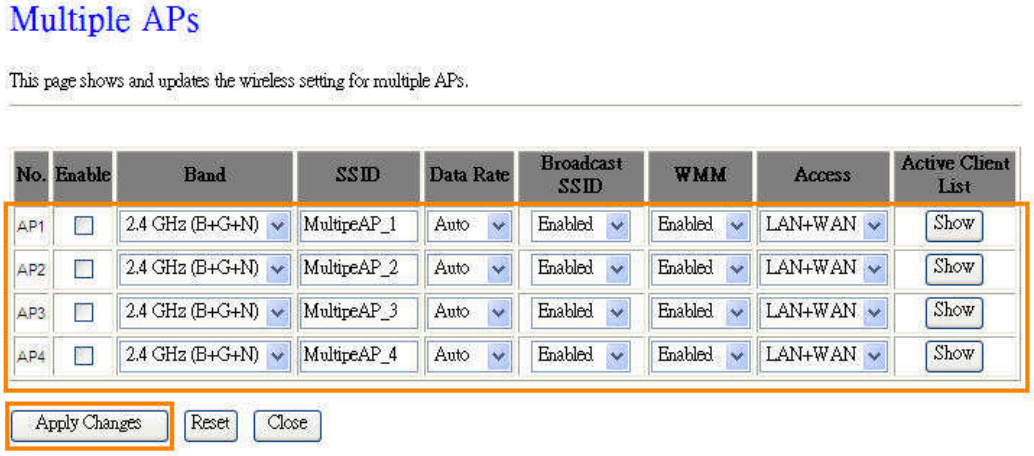

(1.) **Enable:** check it for enable or not.

(2.) **Band**: select the frequency from the drop down list.

(3.) **SSID:** please enter different SSID in each class.

(4.) **Data Rate:** please select the data transmission rate.

(5.) **Access:** defined the access type.

a. LAN+WAN: the client can access to the Internet and connect to 3.5G Mobile Router's GUI to setup.

b. WAN: the client can only access to the Internet.

(6.) **Active Client List:** display the properties of the client which is connecting successfully.

(7.) **Apply Changes:** Please click **Apply Change** to initiate or click **Reset** to cancel.

4. Network Type：

Please select "**Infrastructure**" or "**Ad hoc**." The default is "**Infrastructure**." The selection is disabled when wireless mode is selected to AP.

5. SSID：

Please input your wireless network name. Default is **“SAPIDO_Mobile_Hotspot”**.

6. Channel Width

Please select “**20MHZ**” or “**40MHZ**” channel width to change the transmission channels.

7. ControlSideband

Setting the Sideband "**Upper**" or "**Lower.**”

8. Channel Number

Please select your wireless network channel. There are Auto, 2~11.

9. Broadcast SSID

Enable or disable the SSID broadcast function. Disable this feature can provide more security of your WLAN.

10. Data Rate

Rate at which data can be communicated (bps); auto, 1M, 2M, 5.5M, 11M, 6M, 9M, 12M, 18M, 24M, 36M, 48M or 54M to be selected from the drop-down list.

11. Associated Clients

Check the WiFi ISP connectors and the connecting status.

12. Enable Mac Clone (Single Ethernet Client)

Copy the MAC Address for identity of some ISPs.

13. Enable Universal Repeater Mode (Acting as AP and Client simultaneously)

Enable **Universal Repeater Mode**, N+ Mini Router will act as a wireless AP and AP client at the same time, and able to link to another AP.. It uses AP client function to connect to a Root AP (any AP) and uses AP function to service all wireless stations within its coverage. All the stations within the coverage of N+ Mini Router can be bridged to the Root AP. It can help user to extend the coverage of wireless network.

- **How to Enable URM (Universal Repeater Mode)**

  User could enable URM in wireless basic setting page as shown in following figures.

  Step 1. Get back to menu “**Network Config**” and write down the SSID, channel and security.

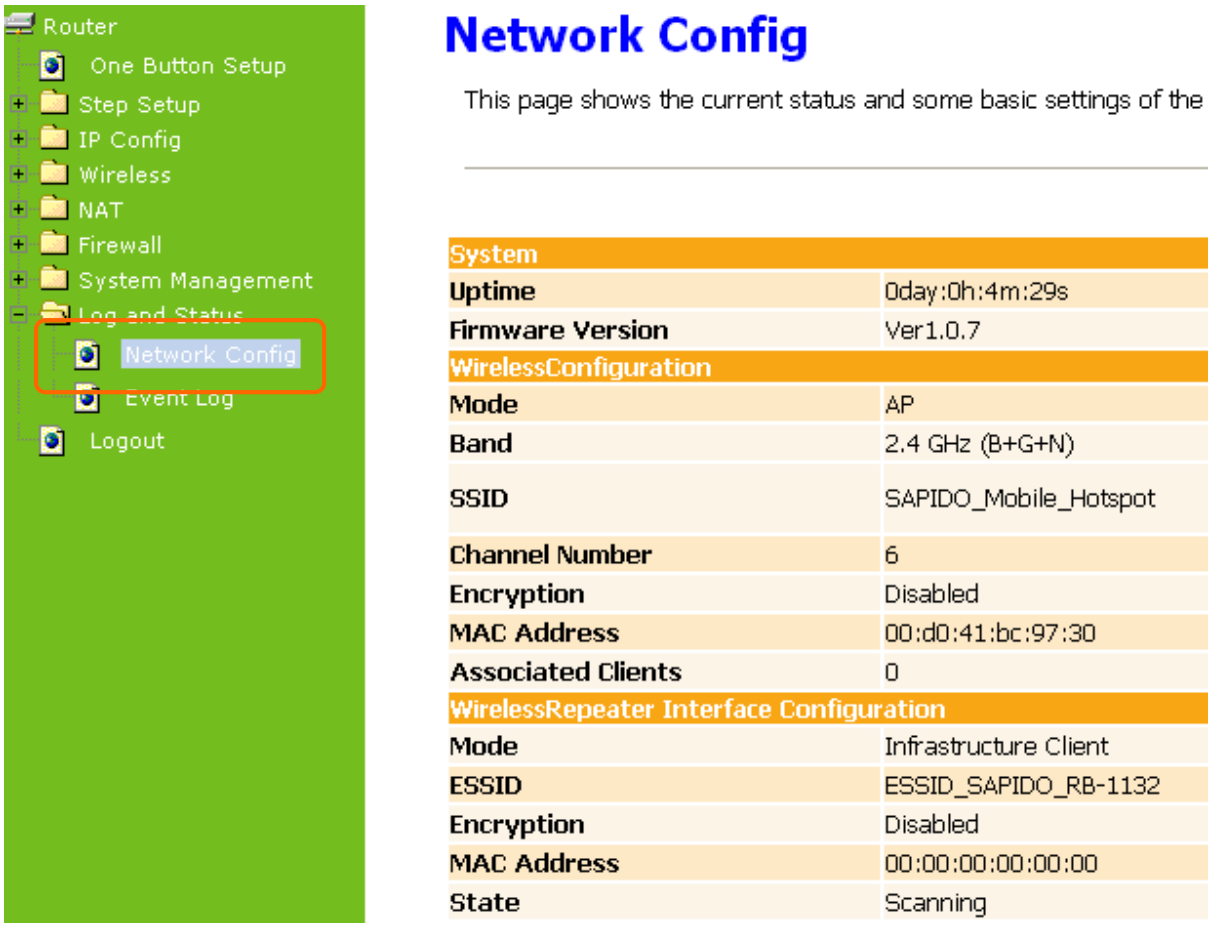

Step 2. Setting the same SSID, channel and security you got form “Network Config” and Click on **Apply Changes** to save the setting

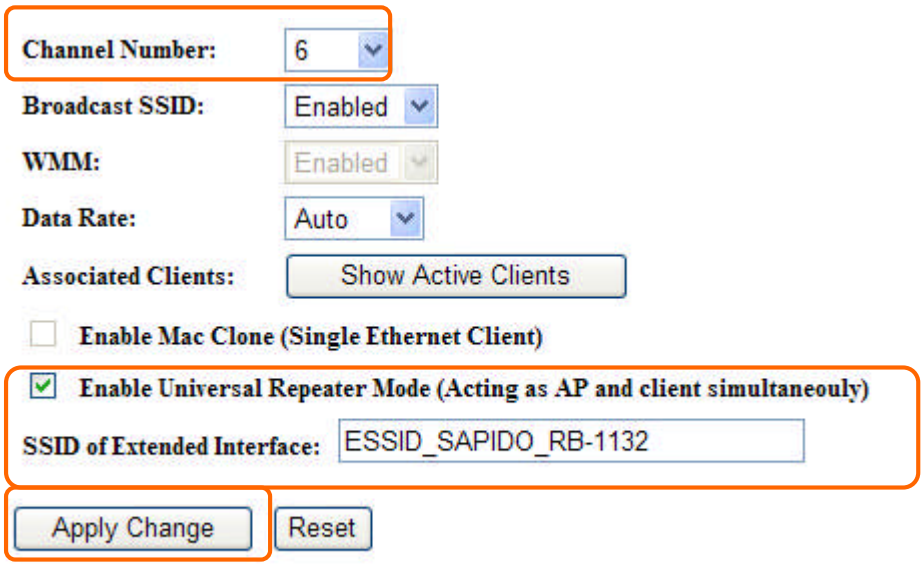
Channel Number: 6
Broadcast SSID: Enabled
WMM: Enabled
Data Rate: Auto
Associated Clients: Show Active Clients
Enable Mac Clone (Single Ethernet Client)
Enable Universal Repeater Mode (Acting as AP and client simultaneouly)
SSID of Extended Interface: ESSID_SAPIDO_RB-1132
Apply Change
Reset

Note: The DHCP server should be disabled under menu “**LAN Interface Setup**” and then the URM could be enabled.

Step 3. Check the AP connectors and the Wireless connecting status.

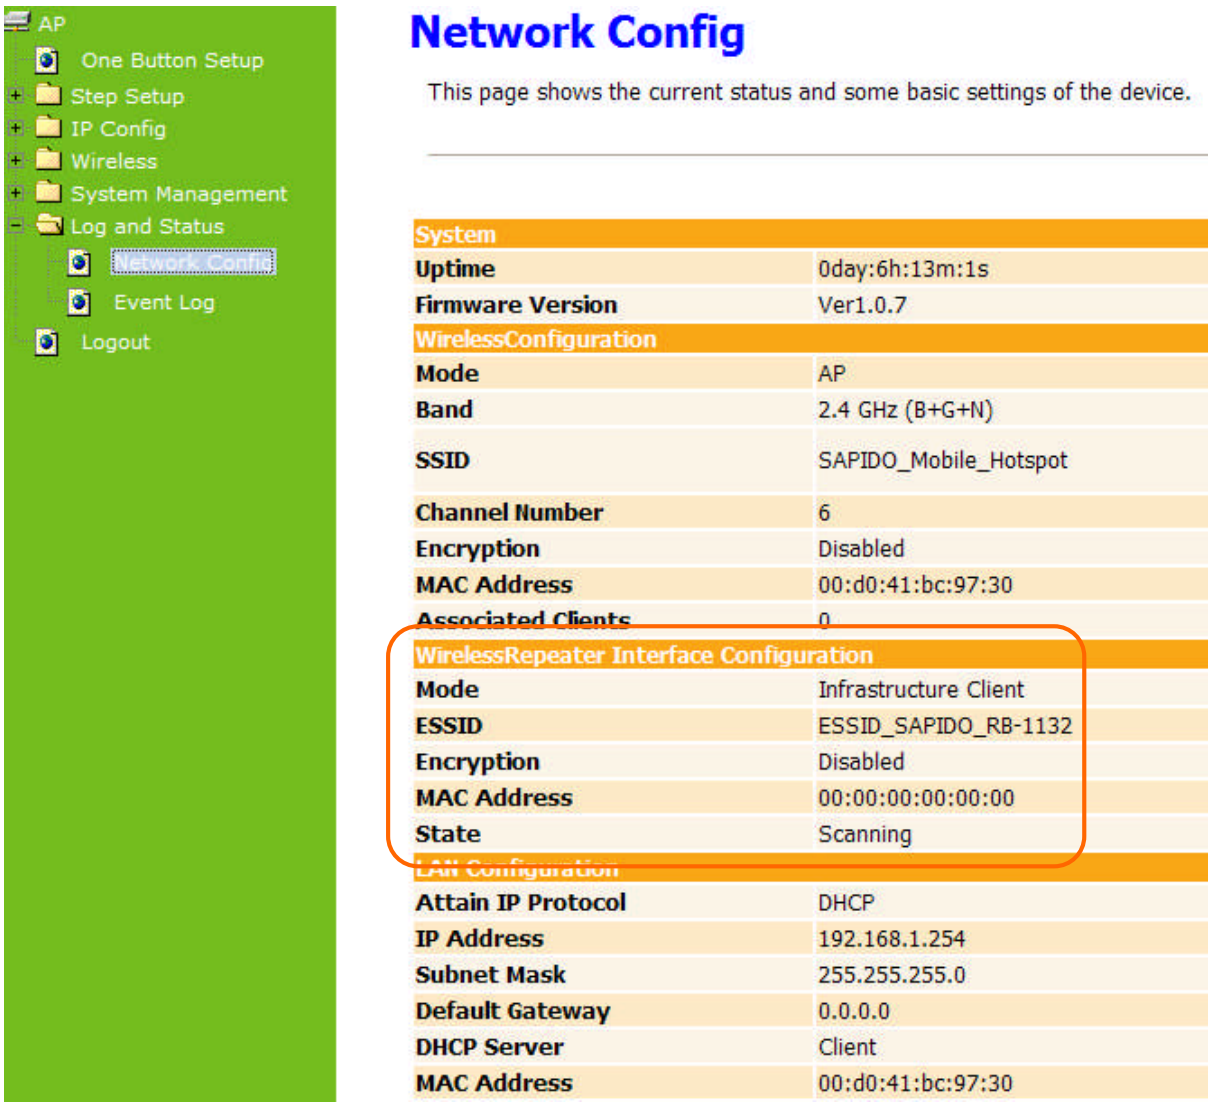

14. SSID of Extended Interface

When mode is set to “AP” and Universal Repeater Mode is enabled, user should input SSID of another AP (the upper level device) in the field of **SSID of Extended Interface**.

15. Apply Changes & Reset

Click on “**Apply Change**” to save the setting data. Or you may click on “**Reset**” to clear all the input data.

6.2.2 Wireless Advanced Settings

Please follow the instructions to configure the **Wireless** settings.

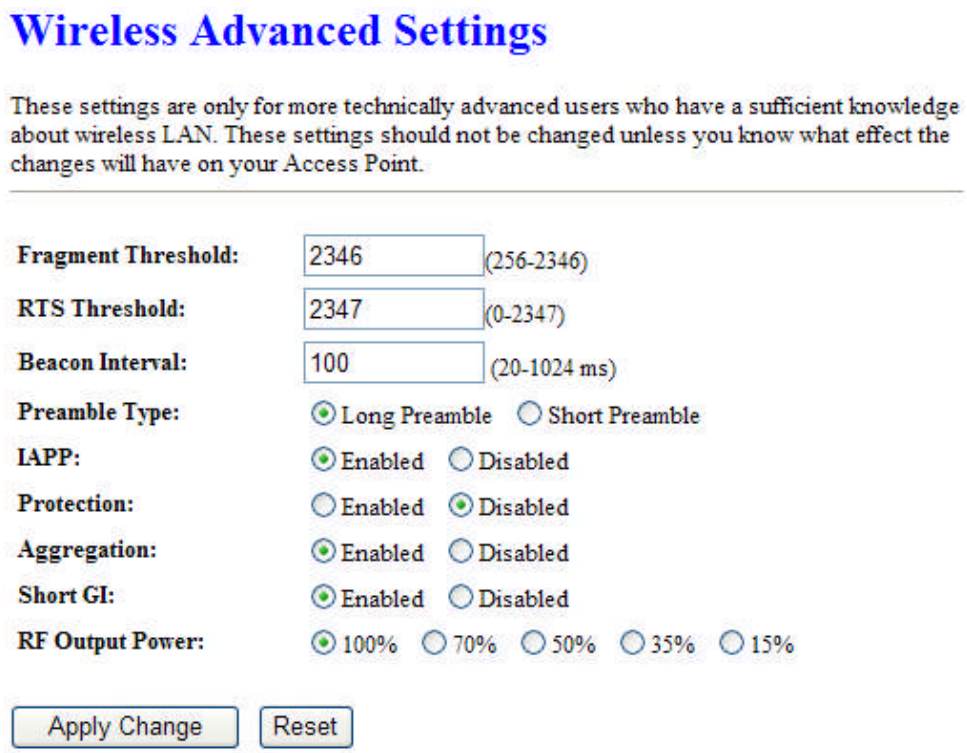
Wireless Advanced Settings
These settings are only for more technically advanced users who have a sufficient knowledge about wireless LAN. These settings should not be changed unless you know what effect the changes will have on your Access Point.
Fragment Threshold: 2346 (256-2346)
RTS Threshold: 2347 (0-2347)
Beacon Interval: 100 (20-1024 ms)
Preamble Type: Long Preamble Short Preamble
IAPP: Enabled Disabled
Protection: Enabled Disabled
Aggregation: Enabled Disabled
Short GI: Enabled Disabled
RF Output Power: 100% 70% 50% 35% 15%
Apply Change
Reset

1. Fragment Threshold

To identify the maximum length of packet, the overflow packet length wil be fragmentized. The allowed range is 256-2364, and default length is 2346 bytes.

2. RTS Threshold

This value should remain at its default setting of 2347. The range is 0~2347. Should you encounter inconsistent data flow, only minor modifications are recommended. If a network packet is smaller than the present RTS threshold size, the RTS/CTS mechanism will not be enabled. The router sends Request to Send (RTS) frames to a particular receiving station and negotiates the sending of a data frame. After receiving an RTS, the wireless station responds with a Clear to Send (CTS) frame to acknowledge the right to begin transmission. Fill the range from 0 to 2347 into this blank.

3. Beacon Interval

Beacons are packets sent by an access point to synchronize a wireless network. Specify a beacon interval value. The allowed setting range is 20-1024 ms.

4. Preamble Type

The preamble (also called “a header”) is a section of data at the head of a packet that contains information that wireless devices need when they send and receive packets. Short preambles improve throughput performance, but some wireless devices require long preambles. Select the suitable preamble as short or long preamble.

5. IAPP

Inter Access Point Protocol. Allow seamless roaming between Access Points in your wireless network. Coupled with superior RF performance

6. Protection

Select to enable the wireless protection or not.

7. Aggregation

Data aggregation can reduce the amount of data routed through the network, and increasing throughput.

8. Short GI

Enabling the Short Guard Interval increases the wireless transmission.

9. RF Output Power

User can adjust the RF output power to get the best wireless connection. There are 5 power types available: 100%, 70%, 50%, 35%, and 15%.

10. Apply Changes & Reset

Click on “Apply Changes” to save the setting data. Or you may click on “Reset” to clear all the input data.

6.2.3 Wireless Security Setup

4 encryption types can be selected here, please follow the instructions below for each.

Wireless Security Setup
This page allows you setup the wireless security. Turn on WEP or WPA by using Encryption Keys could prevent any unauthorized access to your wireless network.
Select SSID:
Root AP - SAPIDO_Mobile_Hotspot
Apply Change
Reset
Encryption:
None
802.1x Authentication:

1. Encryption – WEP

Enabling WEP can protect your data from eavesdroppers. If you do not need this feature, select "**None**" to skip the following setting. N+ Mini Router supports both 64-bit and 128-bit encryption using the Wired Equivalent Privacy (WEP) algorithm. Select the type of encryption you want to use (64 or 128 bit) and configure one to four WEP Keys. The "1280bit" method is more secure than the "64-bit".

- **Use 802.1x Authentication**

Enable 802.1x Authentication so that a wireless node must be authenticated before it can gain access to other LAN resources.

Key Length: For 64bits WEP key, either 5 ASCII characters or 10 hexadecimal digitals leading by 0x can be entered. For 128bits WEP key, either 13 ASCII characters or 26 hexadecimal digits leading by 0x can be entered.

Note: 128 bits WEP is most secure, but has more encryption/decryption overhead. Note that all wireless devices must support the same WEP encryption bit size and have the same key. Four keys can be entered here, but only one key can be selected at a time. The keys can be entered in ASCII or Hexadecimal. Select the item from drop-down list you wish to use.

Encryption Key: At most four keys can be set. A WEP key is either 10 or 26 hexadecimal digits (0~9, a~f, and A~F) based on whether you select 64 bit or 128 bit in the WEP drop-down list.

2. Encryption – WPA (WPA, WPA2 & WPA2 Mixed)

The WPA, WPA2 & WPA2 Mixed encrypt each frame transmitted from the radio using the pre-shared key (PSK) which entered from this panel or a key got dynamically through 802.1x.

- **WPA Authentication Mode**

Enterprise (RADIUS): Please input the port, IP address, and password of authentication RADIUS Server.

Personal (Pre-Shared Key): Pre-Shared Key type is coding in ASCII, and the length is between 8 to 63 characters. If the coding is in Hex, the key length is 64 characters.

3. Apply Changes & Reset

Click on **Apply Changes** to save the setting data. Or you may click on **Reset** to clear all the input data.

6.2.4 Wireless Access Control

With the MAC address, you may allow or disallow the access to your AP.

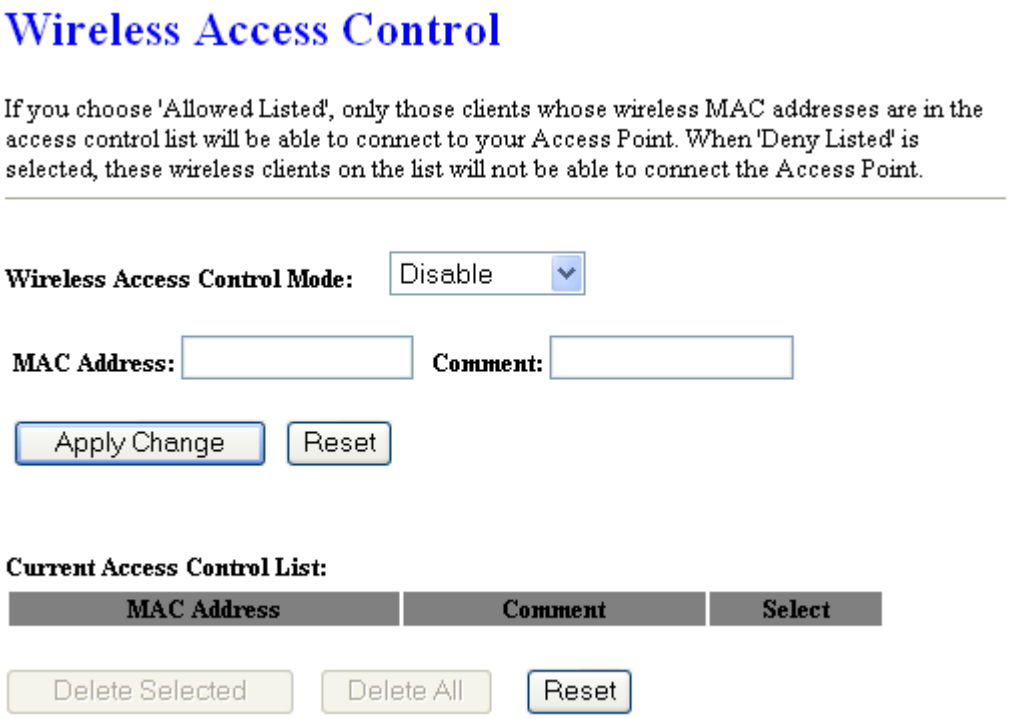
Wireless Access Control
If you choose 'Allowed Listed', only those clients whose wireless MAC addresses are in the access control list will be able to connect to your Access Point. When 'Deny Listed' is selected, these wireless clients on the list will not be able to connect the Access Point.
Wireless Access Control Mode:
Disable
MAC Address:
Comment:
Apply Change
Reset
Current Access Control List:
MAC Address
Comment
Select
Delete Selected
Delete All
Reset

1. Wireless Access Control Mode

"**Allowed Listed**" means only the MAC address listed on the allowed list can access to your wireless network.

"Deny Listed" means the listed MAC Address are not allowed to link to your wireless network.

"**Disable**" for function disuse.

2. MAC Address

Please input the allowed or denied MAC address, for example, 001122334455.

3. Comment

You may input the comments for the set MAC Address.

4. Apply Changes & Reset

Click on "Apply Change" to save the setting data. Or you may click on "Reset" to clear all the input data.

5. Current Access Control List

In this list, all the MAC info you input will be displayed.

6. Delete Selected and Delete All

Click on "**Delete Selected**" to erase the selected MAC address. Click on "**Delete All**" to erase all the entered MAC Address.

6.2.5 WDS Settings

WDS (Wireless Distribution System) is a Wireless Access Point mode that enables wireless bridging in which only WDS APs communicate with each other (without allowing for wireless clients or stations to access them), and/or wireless repeating in which APs communicate both with each other and with wireless stations (at the expense of half the throughput).

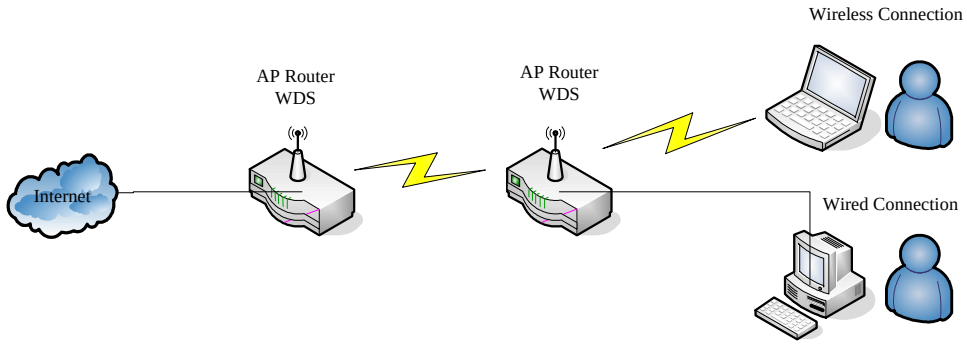

Please follow the instructions to setup WDS connections.

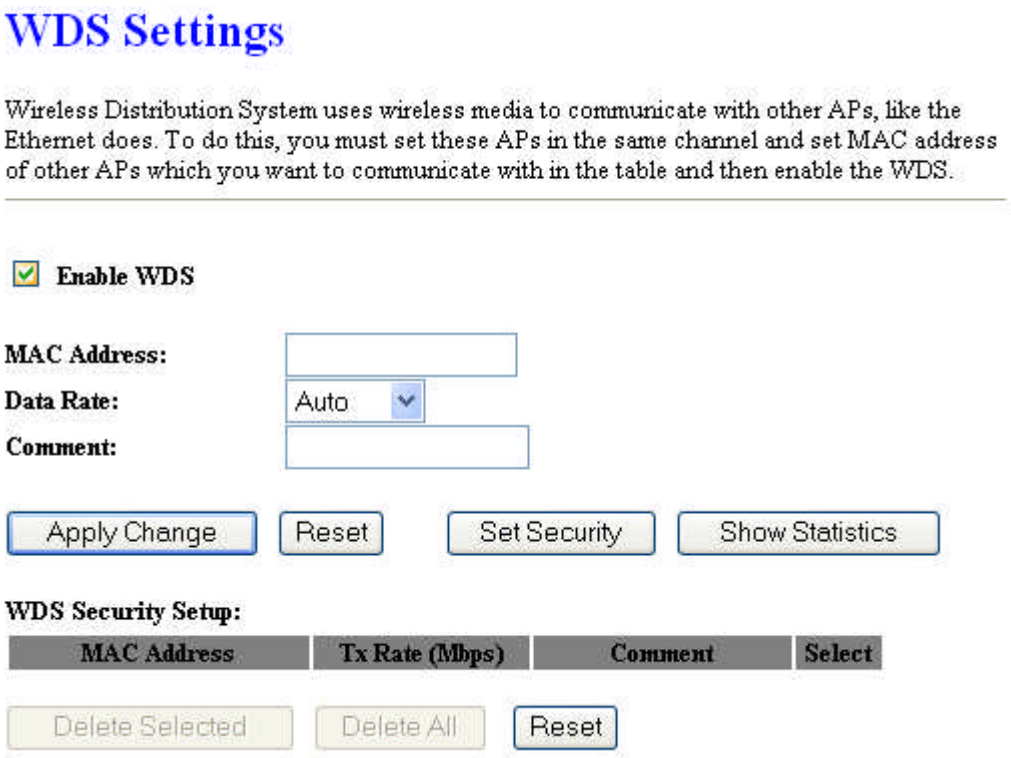
WDS Settings
Wireless Distribution System uses wireless media to communicate with other APs, like the Ethernet does. To do this, you must set these APs in the same channel and set MAC address of other APs which you want to communicate with in the table and then enable the WDS.
Enable WDS
MAC Address:
Data Rate:
Auto
Comment:
Apply Change
Reset
Set Security
Show Statistics
WDS Security Setup:
MAC Address
Tx Rate (Mbps)
Comment
Select
Delete Selected
Delete All
Reset

Step 1. Check the MAC address and Channel number of the device you want to setup WDS with N+ Mini Router.

System	
Uptime	0day:0h:16m:0s
Firmware Version	Ver1.0.5
Build Time	Thu Jul 30 17:11:33 CST 2009
WirelessConfiguration	
Mode	AP
Band	2.4 GHz (B+G+N)
SSID	SAPIDO_Mobile_Hotspot
Channel Number	11
Encryption	Disabled
MAC	00:d0:41:b9:6e:ca
Associated Clients	0
TCP/IP Configuration	
Attain IP Protocol	DHCP
IP Address	192.168.1.254
Subnet Mask	255.255.255.0
Default Gateway	0.0.0.0
DHCP Server	Client
MAC Address	00:d0:41:b9:6e:c9

Step 2. Get back to the menu "**Wireless Basic Settings**" of N+ Mini Router. Select **AP+WDS** mode, and then select the Channel Number. Click **Apply Changes** to save the setting data.

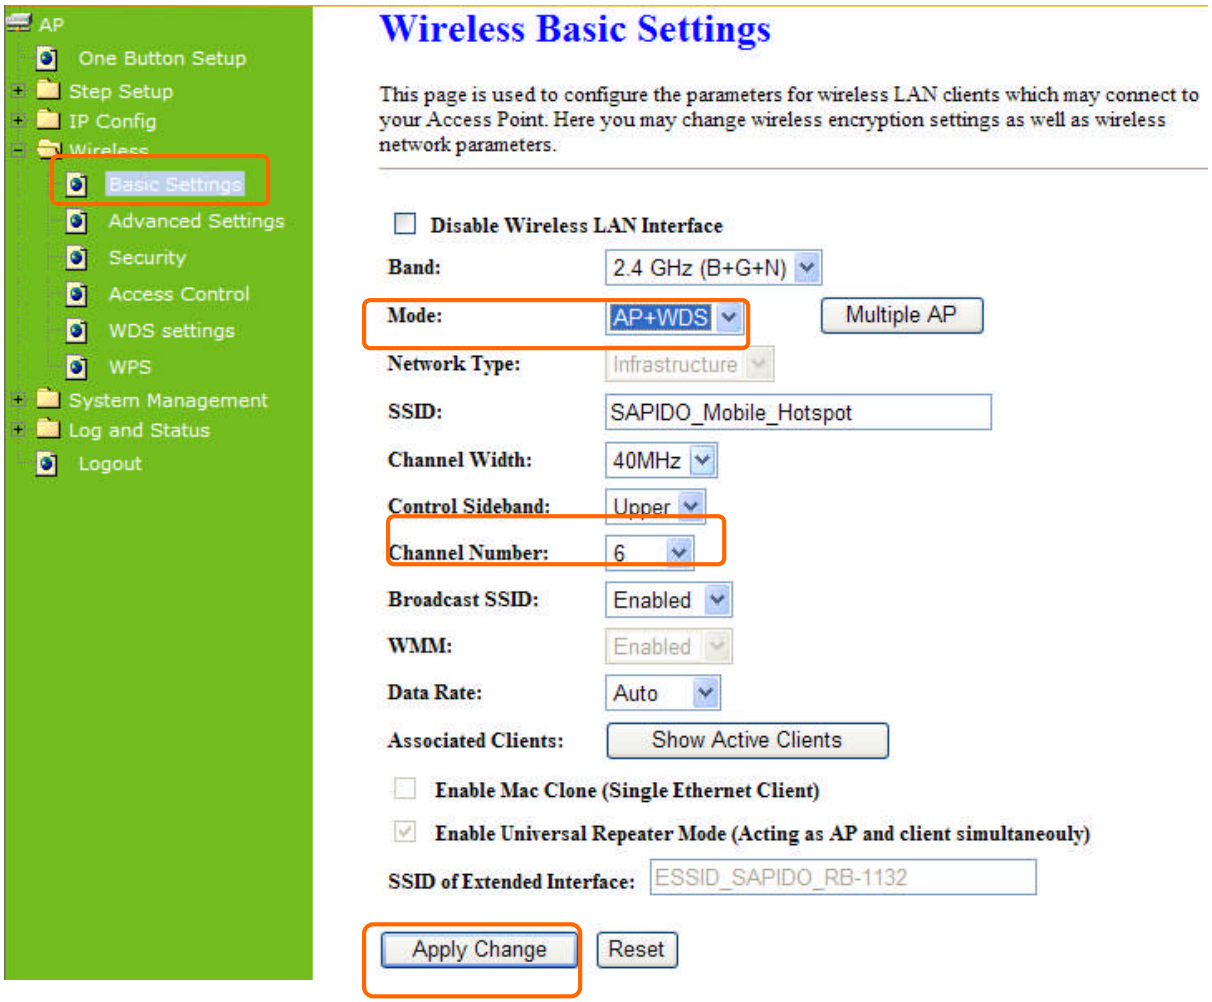

Step 3. Enter the WDS Settings page, select **Enable WDS**, and then input the **MAC address** of the paired device. Click **Apply Changes** to save the setting data.

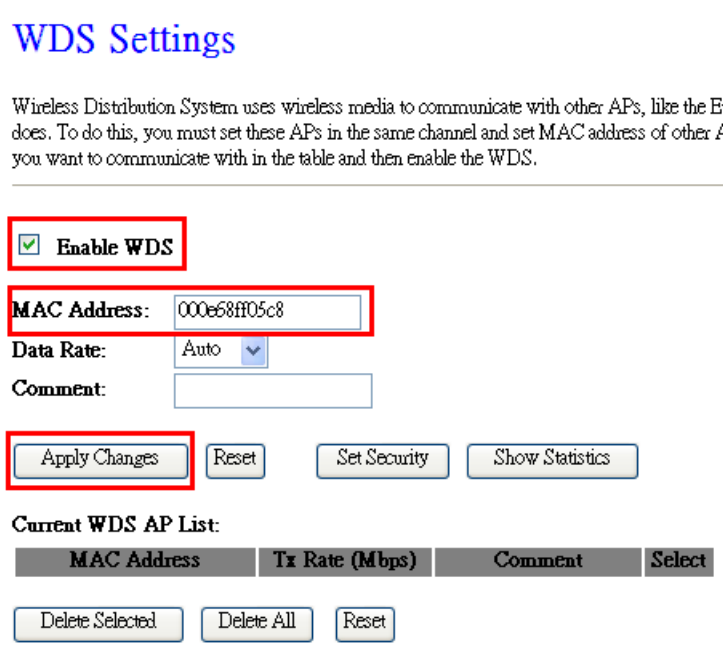
WDS Settings
Wireless Distribution System uses wireless media to communicate with other APs, like the Ethernet does. To do this, you must set these APs in the same channel and set MAC address of other APs which you want to communicate with in the table and then enable the WDS.
Enable WDS
MAC Address: 000e58ff05c8
Data Rate: Auto
Comment:
Apply Changes
Reset
Set Security
Show Statistics
Current WDS AP List:
MAC Address
Tx Rate (Mbps)
Comment
Select
Delete Selected
Delete All
Reset

Step 4. When the time counts down to 0, you will see the MAC address of the paired device displaying on **Current WDS AP List.**

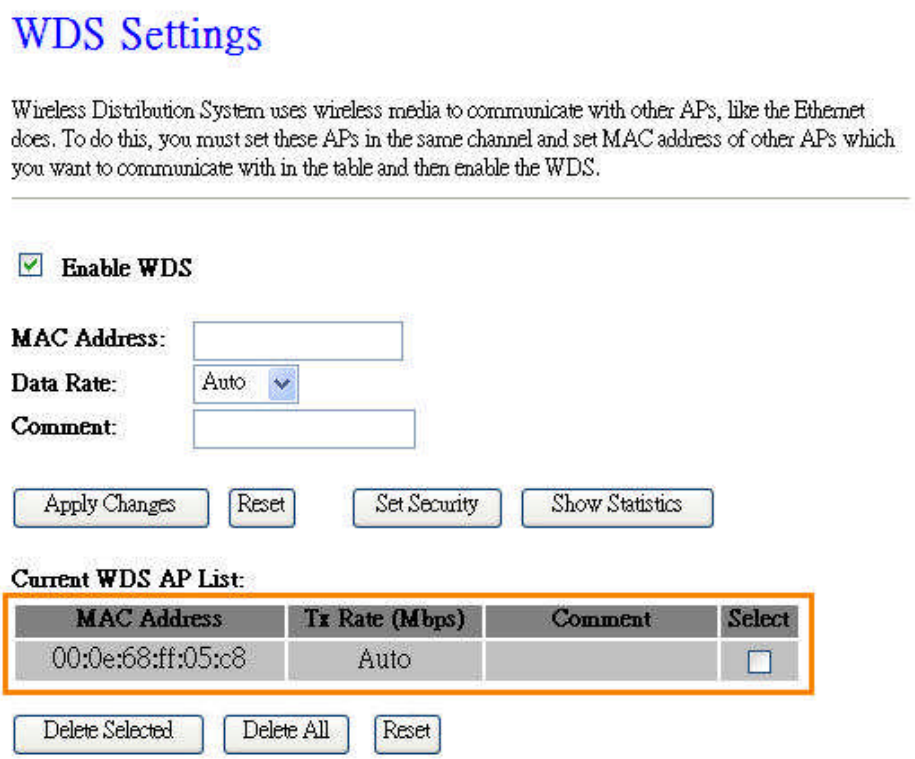
WDS Settings
Wireless Distribution System uses wireless media to communicate with other APs, like the Ethernet does. To do this, you must set these APs in the same channel and set MAC address of other APs which you want to communicate with in the table and then enable the WDS.
Enable WDS
MAC Address:
Data Rate:
Auto
Comment:
Apply Changes
Reset
Set Security
Show Statistics
Current WDS AP List:
MAC Address
Tx Rate (Mbps)
Comment
Select
00:0e:68:ff:05:c8
Auto
Delete Selected
Delete All
Reset

Step 5. Head back to LAN Interface, disable DHCP option, and then click **Apply Changes** to save the setting data.

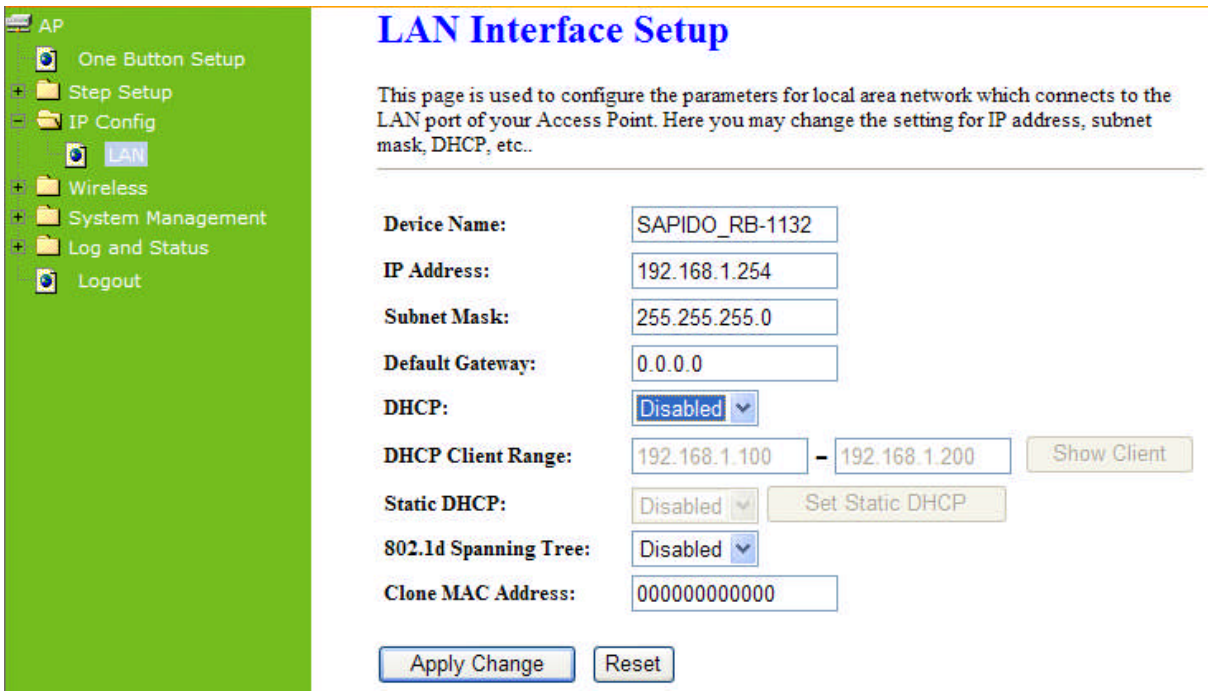

Step 6. Doing the same way to setup the MAC address in the paired device. Launch the UT to the menu "**WDS settings**" of the paired device, and input router's MAC address. Click **Apply Changes** to save the setting data.

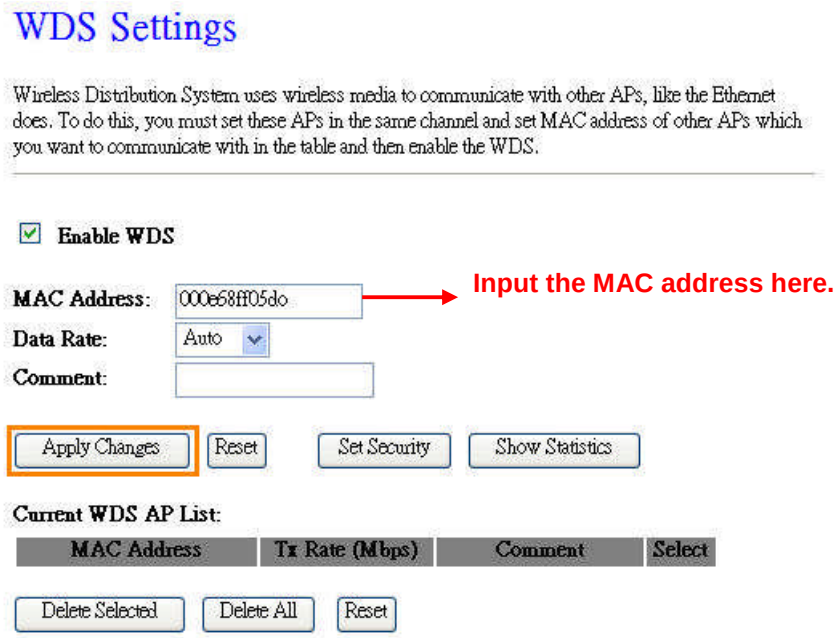
WDS Settings
Wireless Distribution System uses wireless media to communicate with other APs, like the Ethernet does. To do this, you must set these APs in the same channel and set MAC address of other APs which you want to communicate with in the table and then enable the WDS.
Enable WDS
MAC Address:
000e68ff05do
Input the MAC address here.
Data Rate:
Auto
Comment:
Apply Changes
Reset
Set Security
Show Statistics
Current WDS AP List:
MAC Address
Tx Rate (Mbps)
Comment
Select
Delete Selected
Delete All
Reset

Step 7. After initiating the paired device, please check Local Area Connections. Click Supports to check out the IP address which is assigned by the paired device.

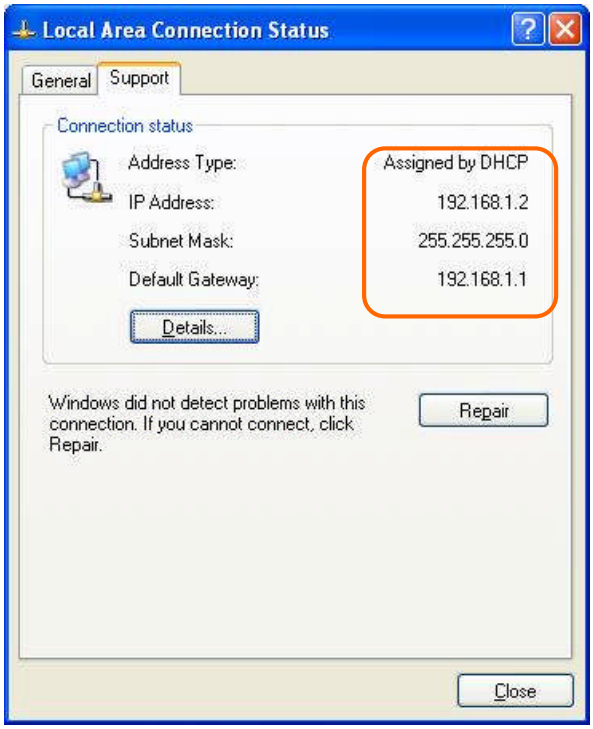

Step 8. You can input http://192.168.6.96 in IE browser to enter the GUI page of the paired device and make sure the connection.

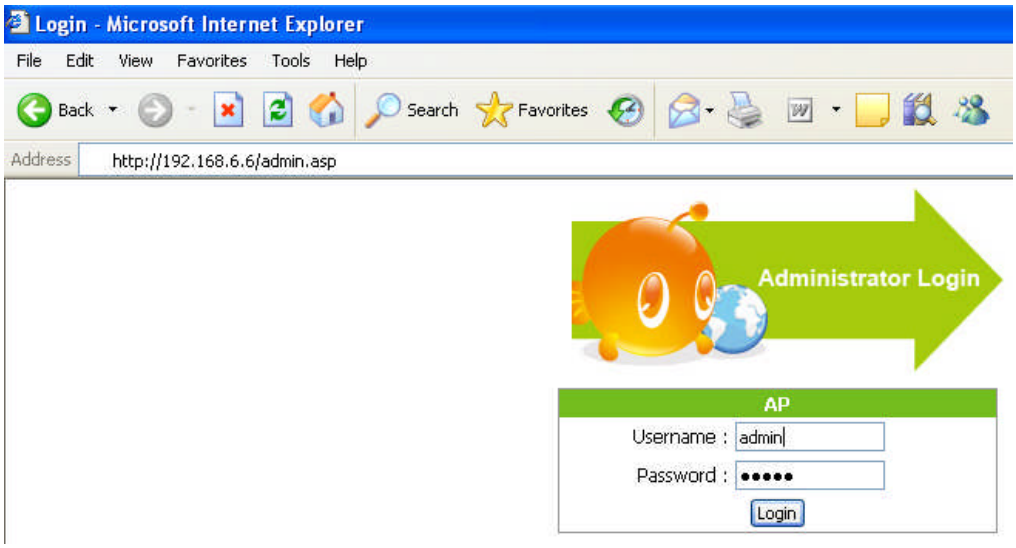

6.2.6 WPS

Wi-Fi Protected Setup (WPS) is an easy way to establish a secured wireless network between N+ Mini Router and wireless card. Users do not need to manually entering a creative, yet predictable security key on both Wi-Fi devices to prevent unwanted access to their wireless network. With WPS, it can automatically configure a wireless network with a network name (SSID) and strong WPA data encryption and authentication.

WPS can be enabled by 2 methods:

1. **PBC (Push button configuration) Method,** in which the user simply has to push a button, either an actual or a virtual one, on both WPS devices to connect.
2. **PIN (Personal Identification Number) Method,** in which a PIN has to be taken either from a sticker label or from the web interface of the WPS device. This PIN will then be entered in the AP or client WPS device to connect.

Please follow instructions below to enable the WPS function.

- **Start PBC:**

(1.) Press the **WPS button** from N+ Mini Router or click **Start PBC** from menu "**Wi-Fi Protected Setup**", and waiting for the WPS wireless card setting.

or

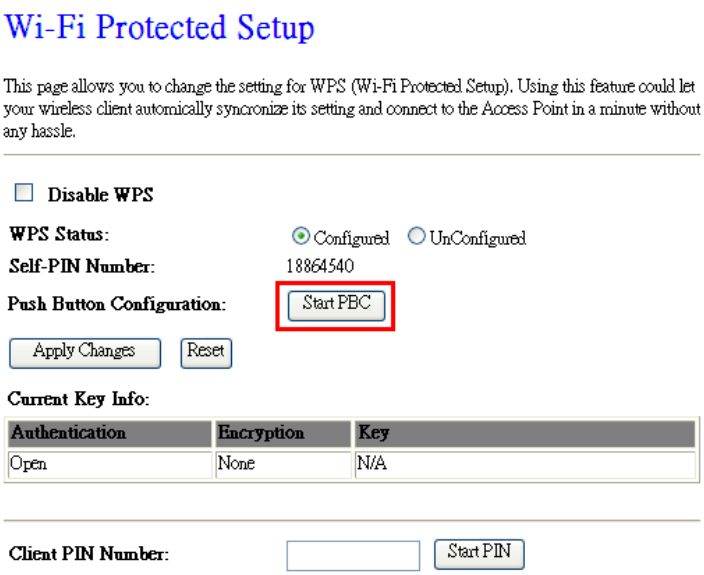

(2.) Open the **"Wireless Utility"** of your wireless card, and click its **"PBC"** button, to start auto pairing.

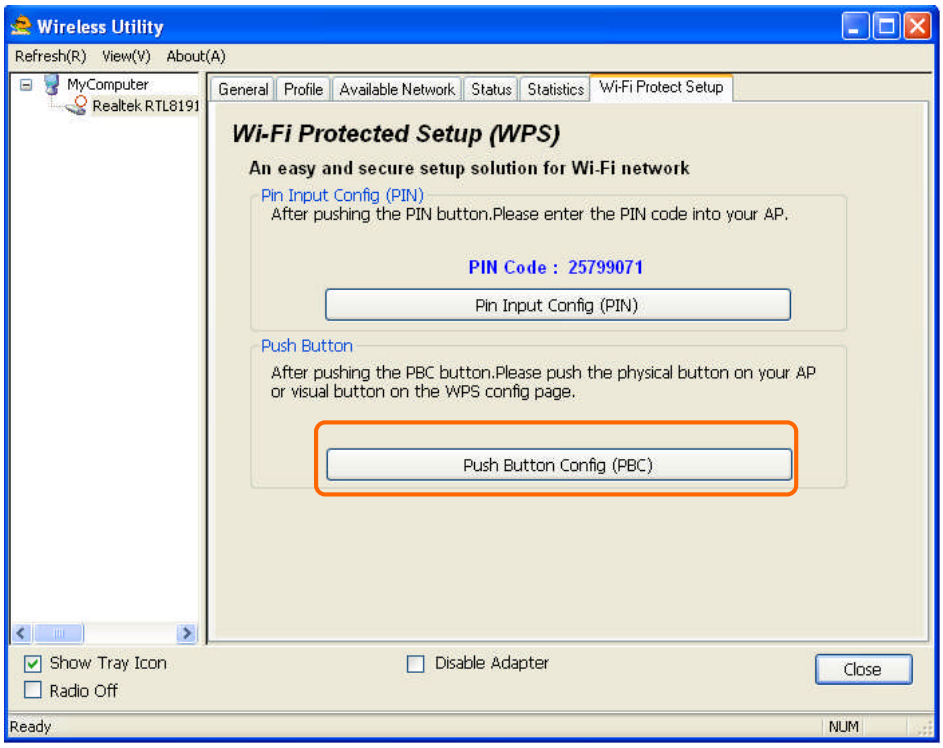

(3.) While scanning is successful, the information of the wireless card appears in the windows below.

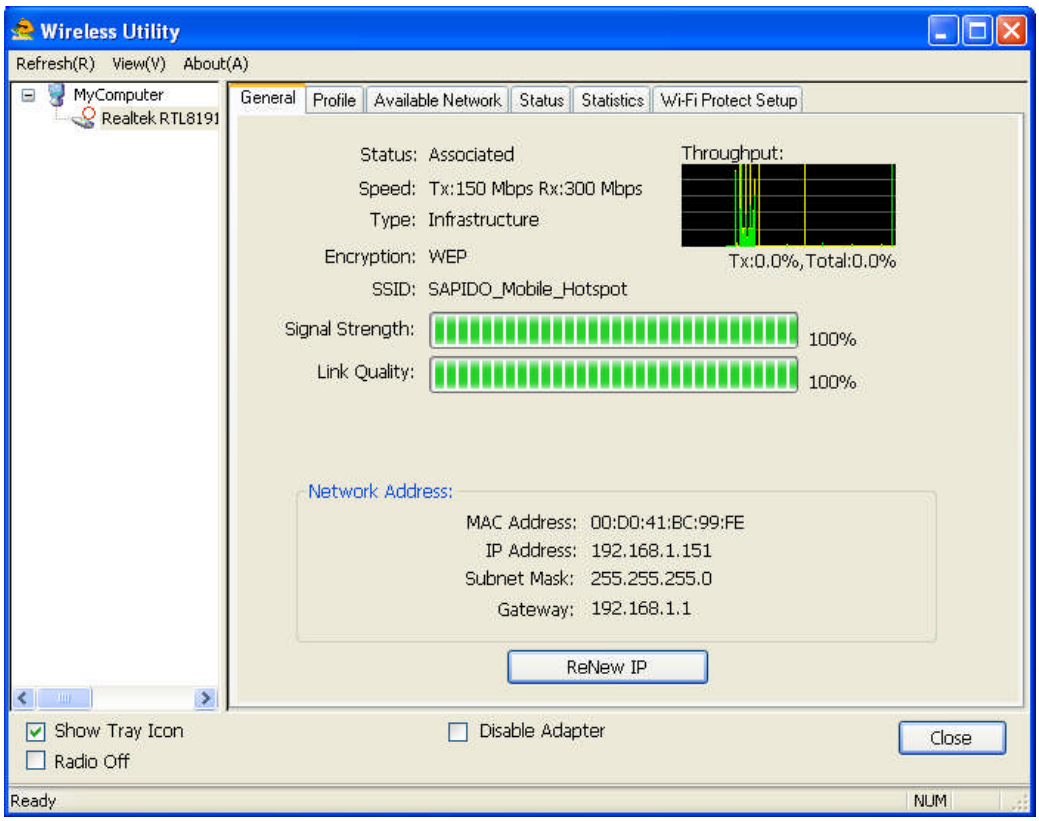

Start PIN:

(4.) Open the "**Wireless Utility**" of your wireless card. Follow its PIN instruction to get a new PIN number. Write it down.

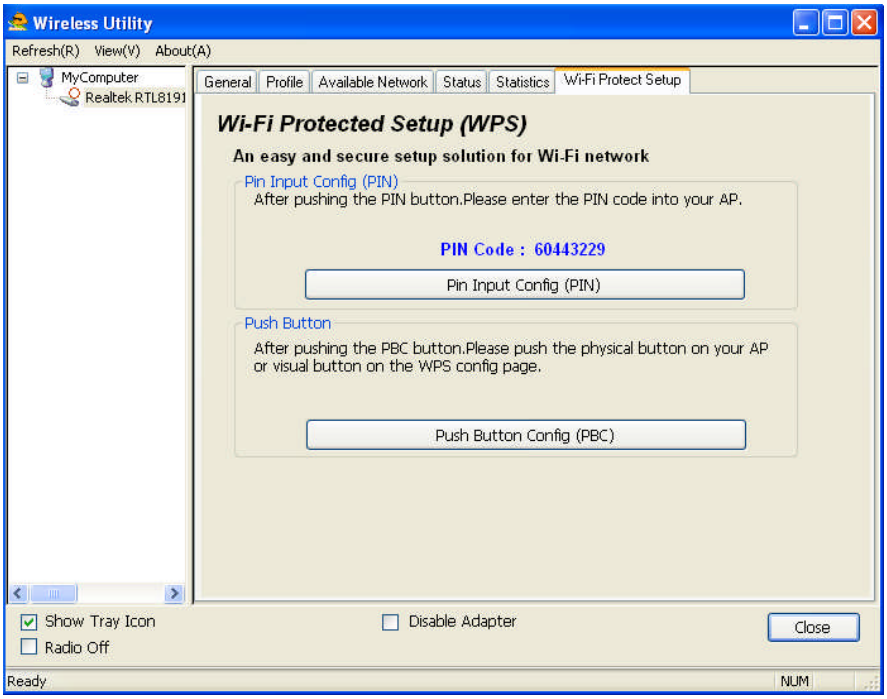

(5.) Open menu "**Wi-Fi Protected Setup**" of N+ Mini Router, input the PIN number from the wireless card then click **Start PIN**.

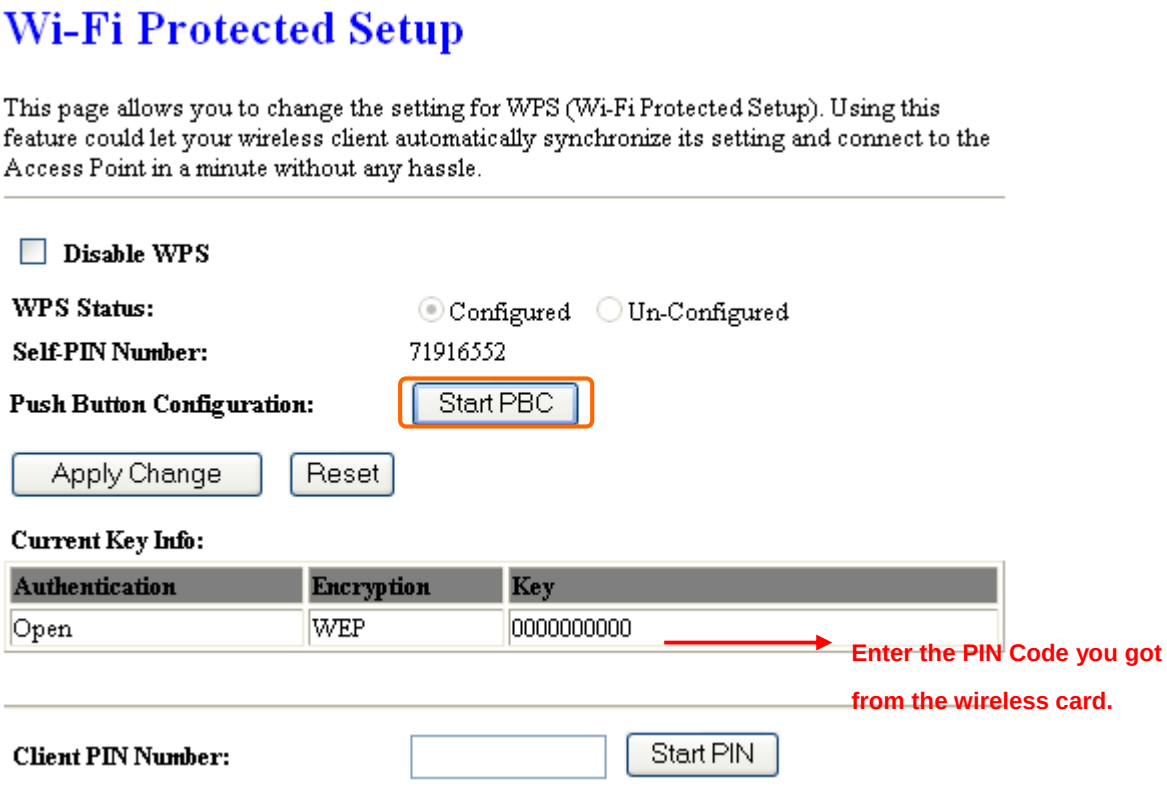

(6.) Back to **“Wireless Utility”** and press the **“Start PIN”** button to complete the auto-paring process.

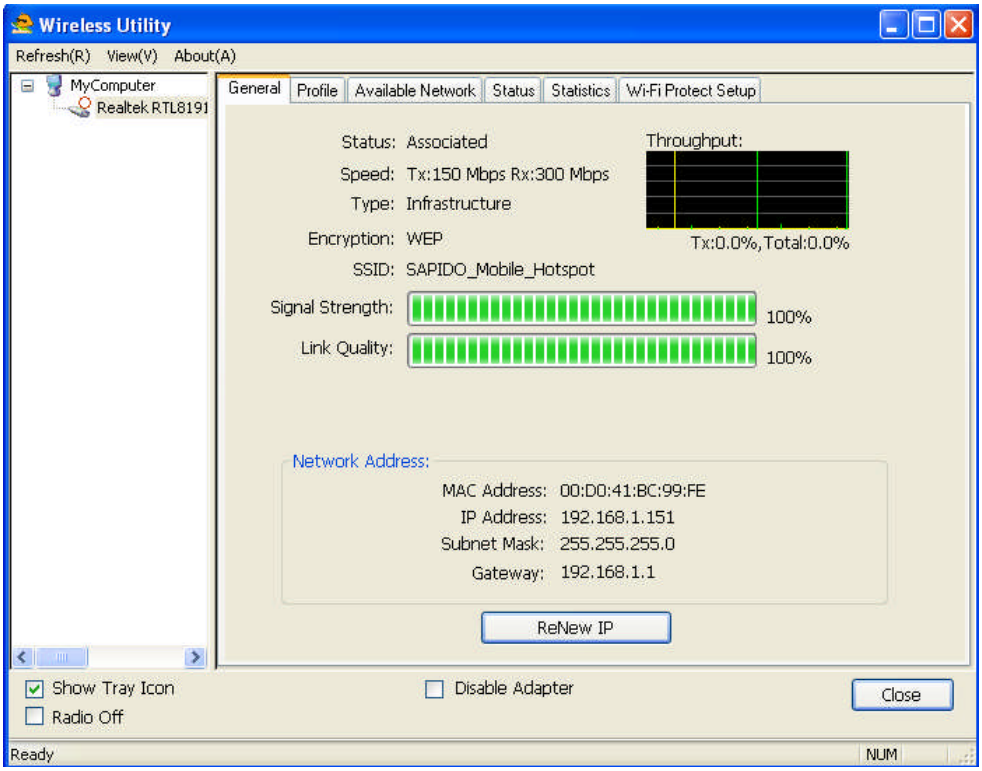

6.3 System Management

N+ Mini Router provides system management including password changing, firmware upgrade, time setting, user's account setting and other detail settings. Following is detail explanation for each.

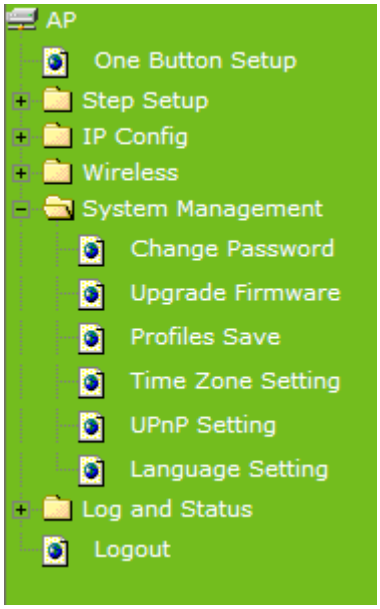

6.3.1 Change Password

Users can set or change their password in this section.

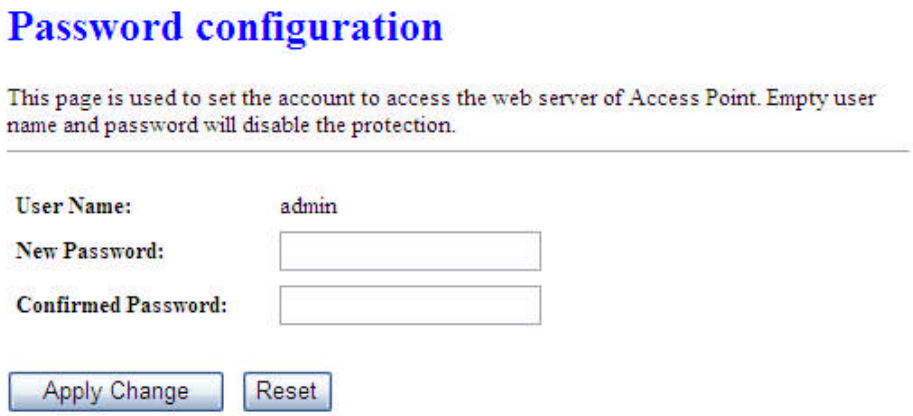
Password configuration
This page is used to set the account to access the web server of Access Point. Empty user name and password will disable the protection.
User Name:
admin
New Password:
Confirmed Password:
Apply Change
Reset

1. New Password

Enter the new password you want to change.

2. New Password (Confirm)

Enter the new password again for confirming.

3. Apply Changes & Reset

Click on **Apply Changes** to save the setting data. Or you may click on **Reset** to clear all the input data.

Note: 1. Only the password can be changed, the user name for administrator is **admin** and not to be changed.
2. If you forget administrator's password, please reset 3.5G plus WLAN Mobile Server Router to default setting by pressing the "**Reset**" button on the rear panel over 5 seconds. And the password will return to **admin**.

6.3.2 Upgrade Firmware

There is certain risk while upgrading firmware. Upgrading firmware is not recommended unless the significant faulty is found. You can upgrade the firmware of N+ Mini Router on this page. Make sure the firmware you want to use is on the local hard drive of the computer. Click **Upgrade Firmware** to proceed.

Upgrade Firmware
This page allows you upgrade the Access Point firmware to new version. Please note,do not power off the device during the upload because it may crash the system.
Select File:
Browse...
Upload
Reset

1. Update Firmware

Click on **Browse…** button to search your local hard drive and locate the firmware to be used for update.

2. Upload & Reset:

Click **Upload** to upgrade the firmware or **Reset** to restore to factory default Settings

Note: 1. To prevent the firmware upgrading interrupted by other wireless signals and caused failure. We recommend using wired connection to do the upgrading.
2. Before upgrading the firmware, please remove any USB device which connected with this router.
3. The firmware upgrade will not remove your previous settings.

- **Reset button:**

On the back of this router, there is a reset button. If you can not login the administrator page by forgetting your password; or the router has problem you can't solve. You can push the reset button for 5 seconds with a stick. The router will reboot and all settings will be restored to factory default settings. If the problem still exists, you can visit our web site to see if there is any firmware for download to solve the problem.

6.3.3 Save / Reload Settings

To back up the current configuration setting or load the backup data, also you can restore N+ Mini Router to default setting by this function.

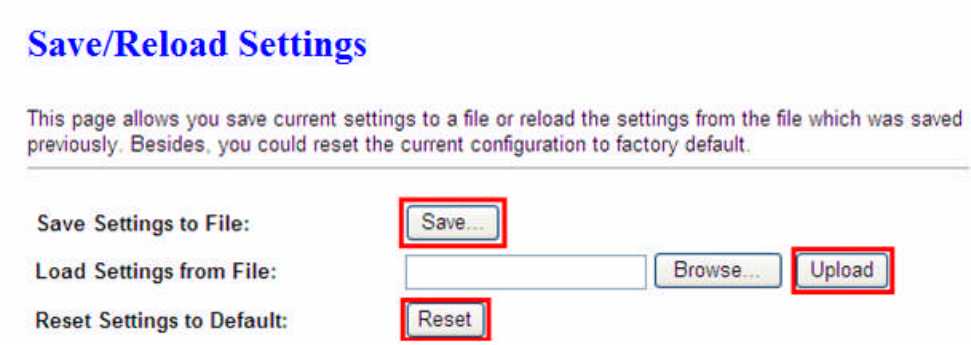
Save/Reload Settings
This page allows you save current settings to a file or reload the settings from the file which was saved previously. Besides, you could reset the current configuration to factory default.
Save Settings to File:
Save...
Load Settings from File:
Browse...
Upload
Reset Settings to Default:
Reset

1. Save Settings To File

Step 1. Click on **Save** button for saving the configuration setting into assigned location.

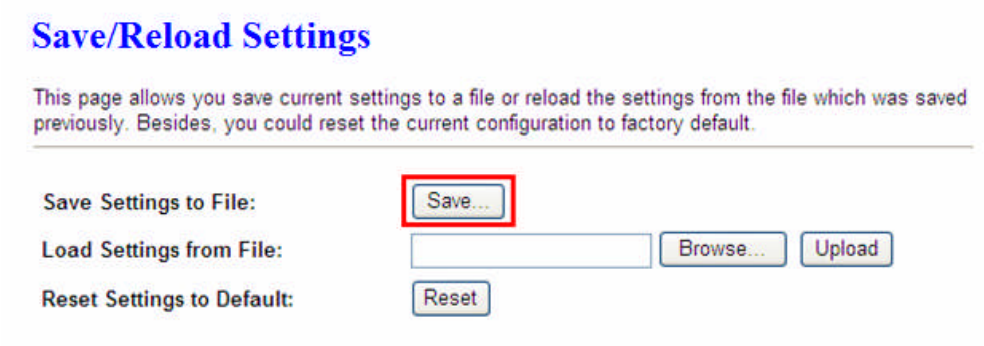
Save/Reload Settings
This page allows you save current settings to a file or reload the settings from the file which was saved previously. Besides, you could reset the current configuration to factory default.
Save Settings to File:
Save...
Load Settings from File:
Browse...
Upload
Reset Settings to Default:
Reset

A pop window will show up and ask to save config.dat file.

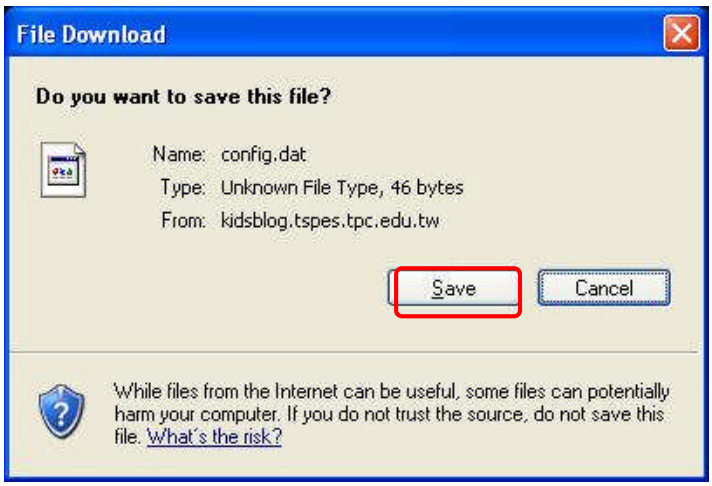
File Download
Do you want to save this file?
Name: config.dat
Type: Unknown File Type, 46 bytes
From: kidsblog.tspes.tpc.edu.tw
Save
Cancel
While files from the Internet can be useful, some files can potentially harm your computer. If you do not trust the source, do not save this file. What's the risk?

Step 2. Please select the location, for example: the desktop.

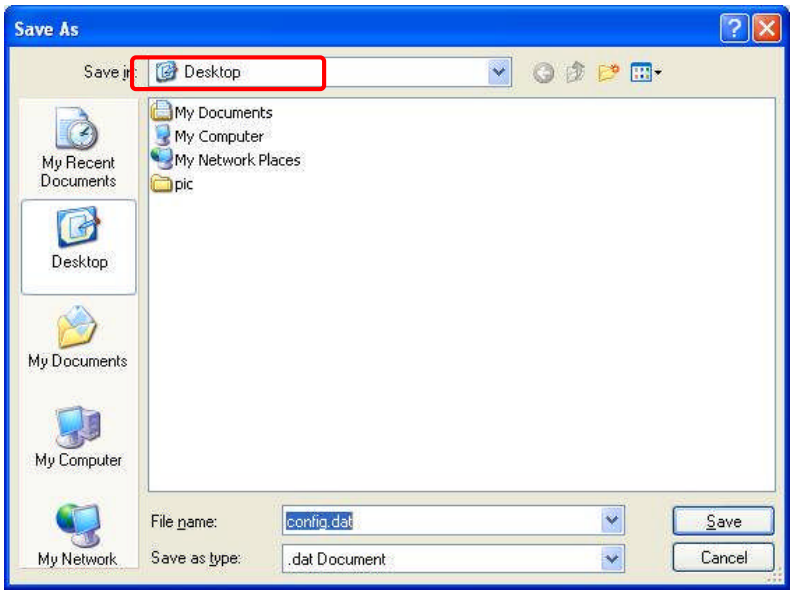

Step 3. The file you just saved will appear on the desktop.

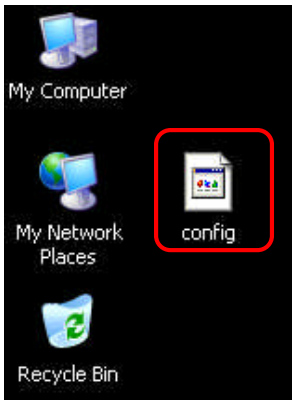

2. Load Settings From File

Step 1. Click on "**Browse…**" button for searching the saving configuration from hard drive, and then click on Upload button to load all the settings into the router.

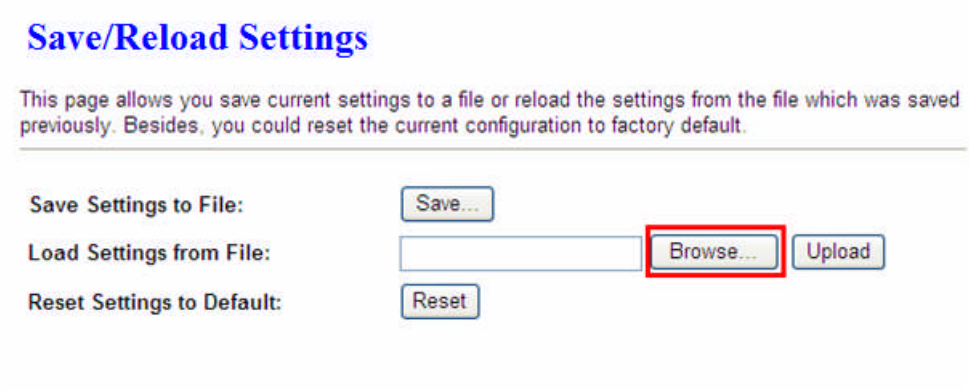
Save/Reload Settings
This page allows you save current settings to a file or reload the settings from the file which was saved previously. Besides, you could reset the current configuration to factory default.
Save Settings to File:
Save...
Load Settings from File:
Browse...
Upload
Reset Settings to Default:
Reset

Step 2. Select the **config.dat** file.

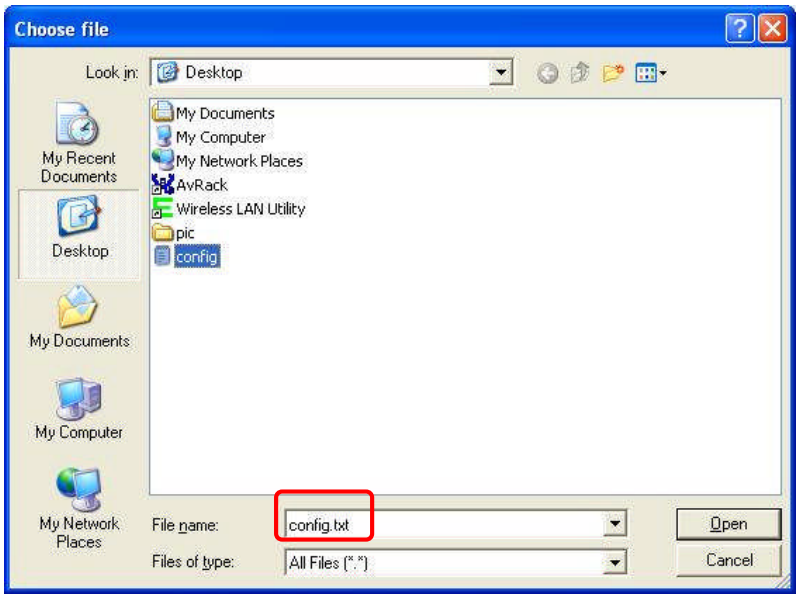

Step 3. Click **Upload** to retrieve.

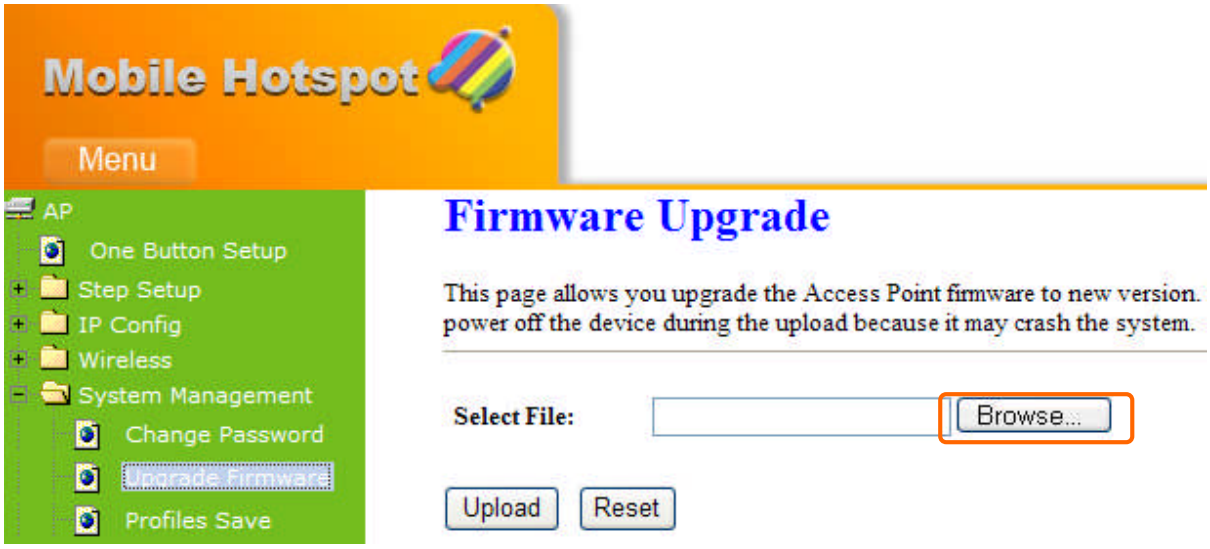

Step 4. When you see the screen below, the updating is completed. Please click **OK** to return to the main menu.

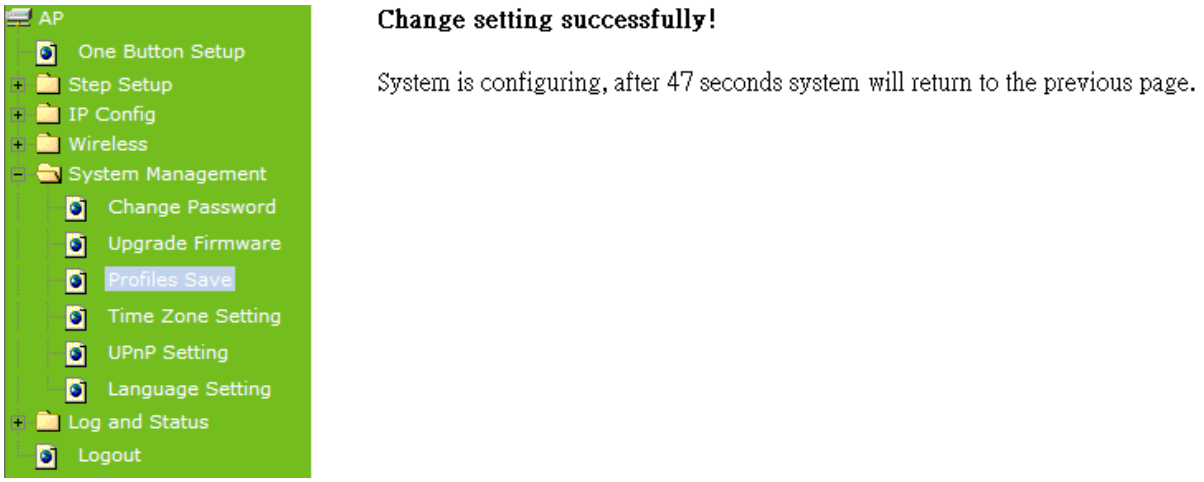

3. Reset Setting to Default

After you have tried other methods for troubleshooting your network, you may choose to restore N+ Mini Router to the factory default settings.

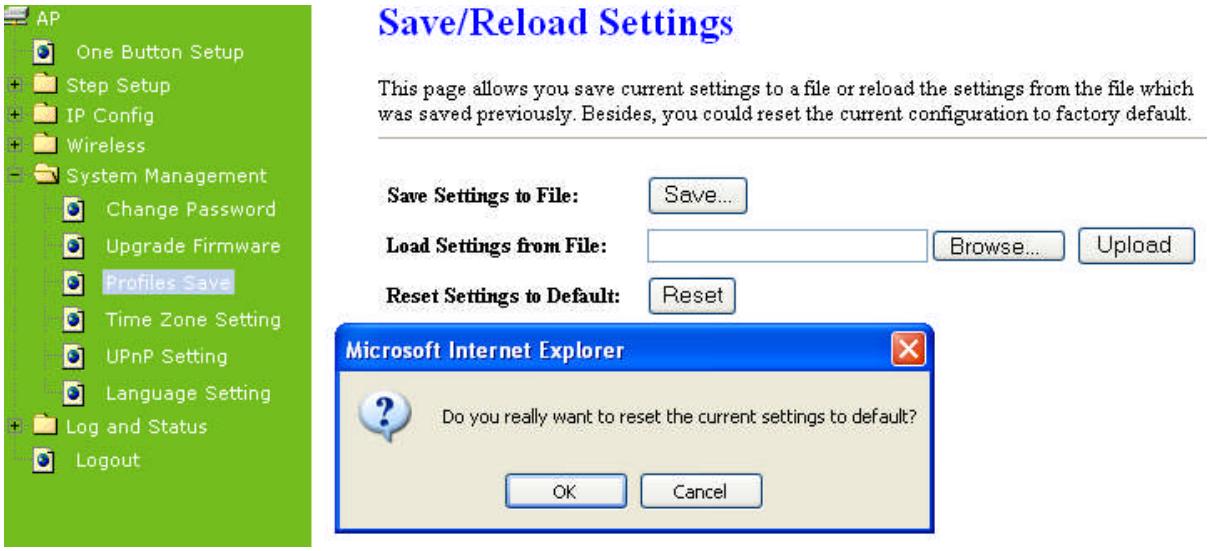

When you see the screen below, the resetting is completed. Please click **OK** and return to the main menu.

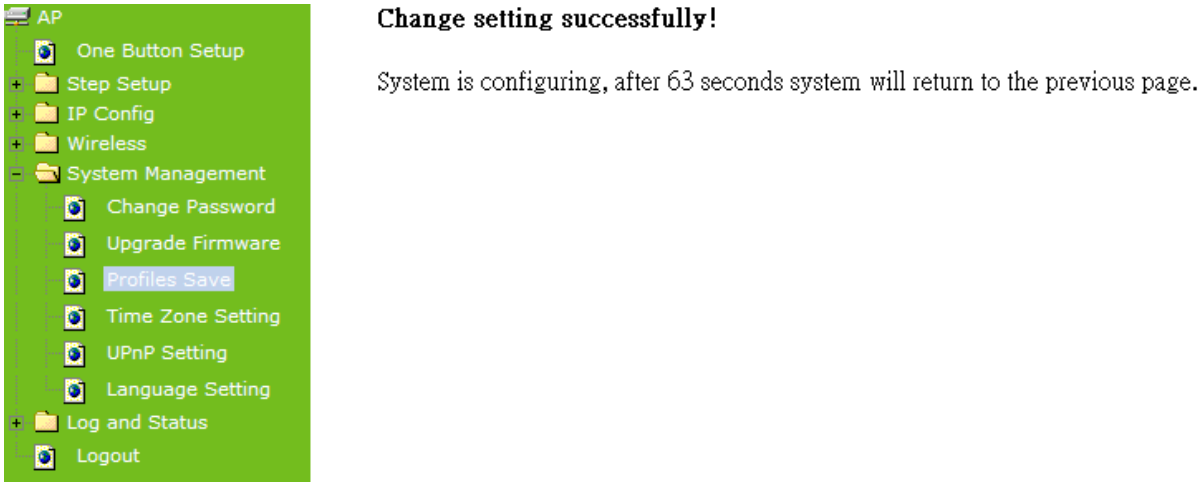

6.3.4 Time Zone Setting

The System time is the time used by N+ Mini Router for scheduling services. You can manually set the time or connect to a NTP (Network Time Protocol) server. If a NTP server is set, you will only need to set the time zone. If you manually set the time, you may also set Daylight Saving dates and the system time will automatically adjust on those dates.

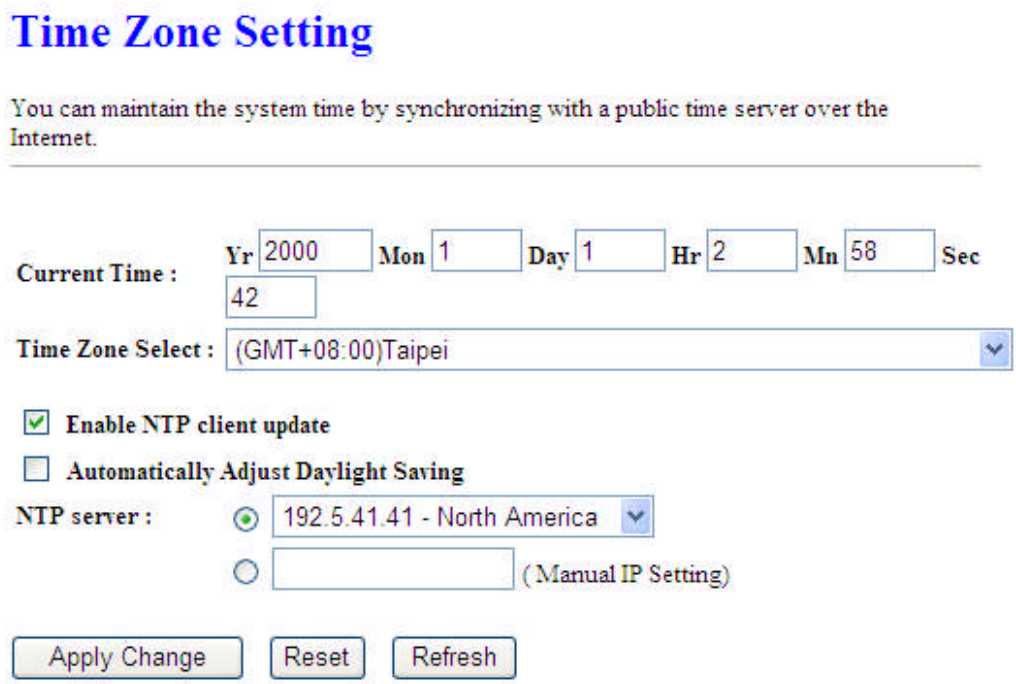
Time Zone Setting
You can maintain the system time by synchronizing with a public time server over the Internet.
Current Time :
Yr 2000 Mon 1 Day 1 Hr 2 Mn 58 Sec 42
Time Zone Select :
(GMT+08:00)Taipei
Enable NTP client update
Automatically Adjust Daylight Saving
NTP server :
192.5.41.41 - North America
(Manual IP Setting)
Apply Change
Reset
Refresh

1. Current Time

Users can input the time manually.

2. Time Zone Select

Select your time zone location from the drop-down list.

3. Enable NTP client update

Check to enable NTP client update.

4. Automatically Adjust Daylight Saving

If you are in daylight saving time area, please enable this item.

5. NTP server

Please select the NTP server from the pull-down list, or you can enter the NTP server IP address manually.

6. Apply Changes & Reset & Refresh

Please click on **Apply Changes** to save the setting data. Or you may click on **Reset** to clear all the input data. Or you may click on **Refresh** to update the system time on the screen.

6.3.5 UPnP Setting

UPnP (Univsersal Plug and Play) allows users to connect their UPnP-enabled broadband router, printer server and other devices right to the network with zero-configuration, meaning easier setup for installing the device on the network. The automatic discovery feature enables the device to obtain an IP address, present and describe itself to other devices and PCs on the network without having to install drivers, but to configure and use those devices.

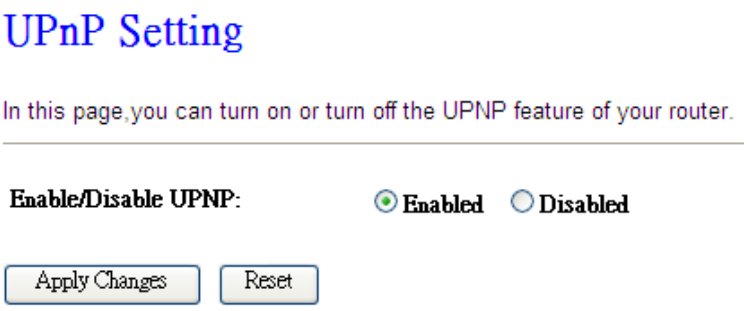

After enabling UPNP, click **My Network Places,** and user can open the web GUI by just clicking on the **Internet Gateway Device** icon.

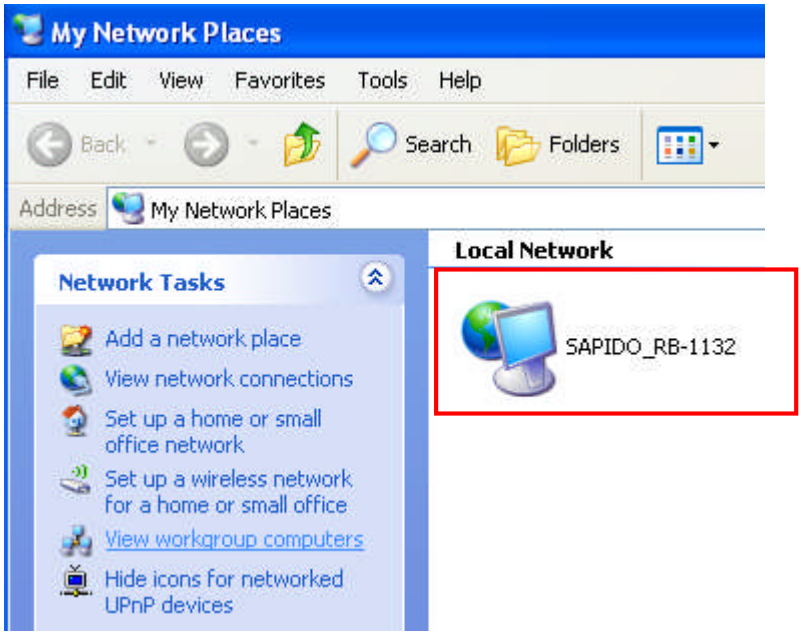

6.3.6 Language Setting

N+ Mini Broadband Router provides a user friendly interface in 12 languages. You can create your own language interface by following steps.

Step 3. **Select Language:** Select your preferred language from the drop down list, for example, Spanish, and then click **Apply Changes**.

Step 4. When you see the screen with message in your selected language, the Language setup is completed.

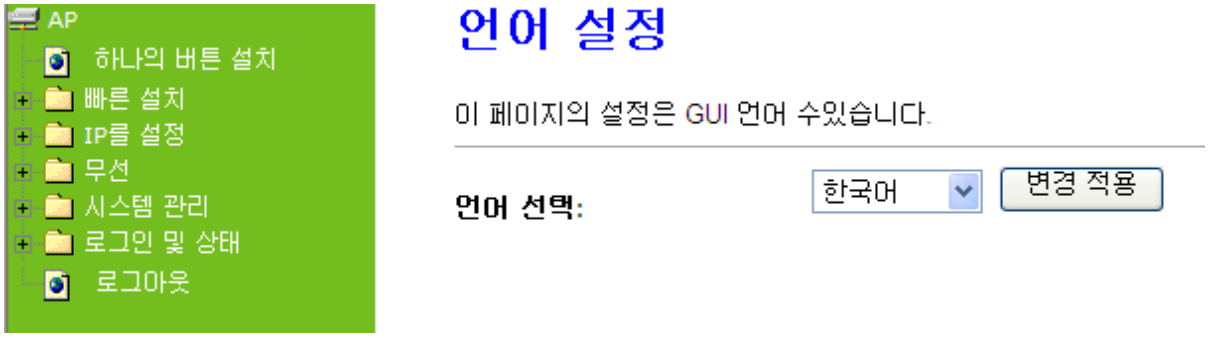

Note: In order to prevent the incomplete translation, you can press “CTRL+F5” to force reload of the page.

6.4 Log & Status

N+ Mini Broadband Router provides the log list and connection status for user to check.

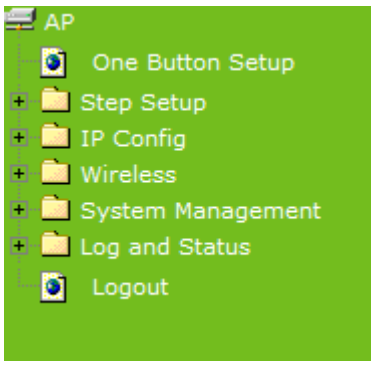

6.4.1 Network Config

Network Configuration shows the firmware version and the connection status of LAN, WAN and Wireless.

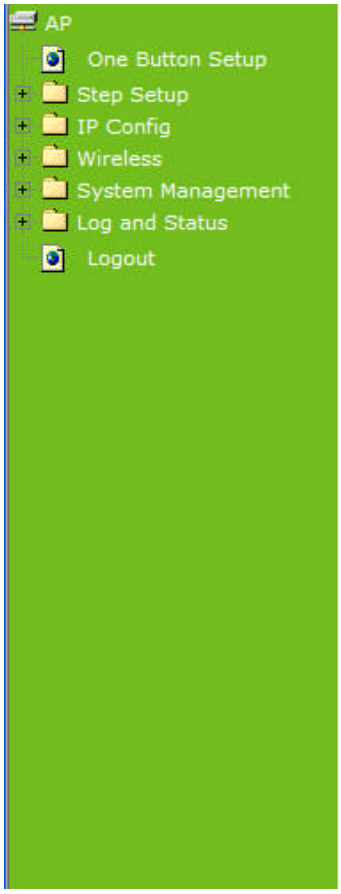

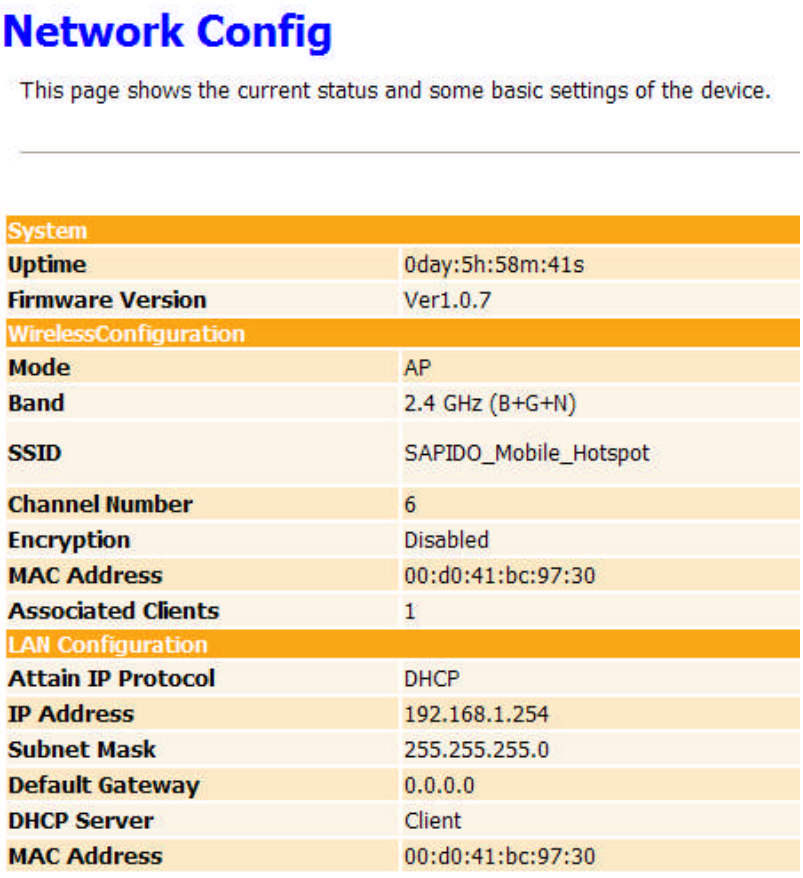

6.4.2 Event Log

N+ Mini Broadband Router provides system logs for review.

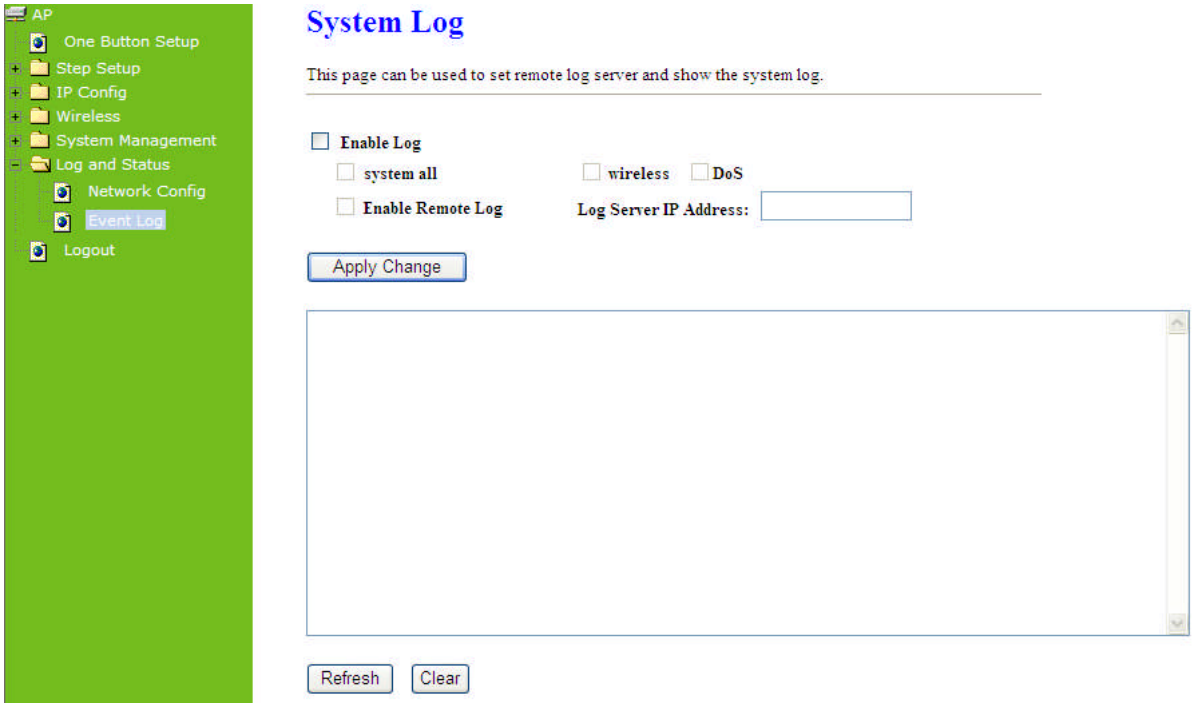

1. Enable Log

Select Enable Log to record the system log

2. system all, wireless & DoS

Select **Wireless, DoS** or **system all** to record

3. Enable Remote Log

You may choose to enable the remote event log or not.

4. Log Server IP Address

Please input the log server IP Address.

5. Apply Changes & Refresh & Clear

Click on **Apply Change** to save the setting data. Click on **Refresh** to renew the system time, or on **Clear** to clear all the record.

- After clicking **Apply Change** to record the event log, it will be shown as the example below.

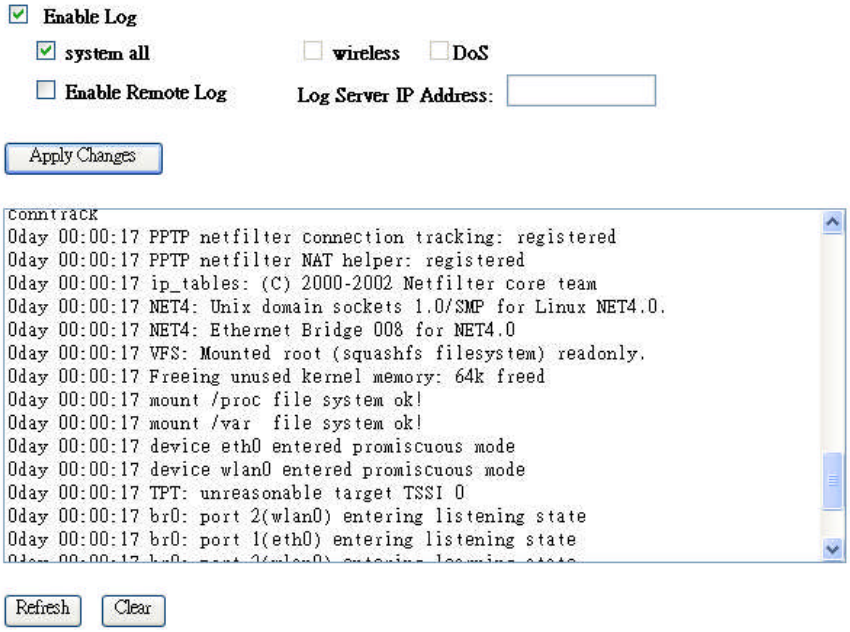
Enable Log
system all
wireless
DoS
Enable Remote Log
Log Server IP Address:
Apply Changes
conntrack
0day 00:00:17 PPTP netfilter connection tracking: registered
0day 00:00:17 PPTP netfilter NAT helper: registered
0day 00:00:17 ip_tables: (C) 2000-2002 Netfilter core team
0day 00:00:17 NET4: Unix domain sockets 1.0/SMP for Linux NET4.0.
0day 00:00:17 NET4: Ethernet Bridge 008 for NET4.0
0day 00:00:17 VFS: Mounted root (squashfs filesystem) readonly.
0day 00:00:17 Freeing unused kernel memory: 64k freed
0day 00:00:17 mount /proc file system ok!
0day 00:00:17 mount /var file system ok!
0day 00:00:17 device eth0 entered promiscuous mode
0day 00:00:17 device wlan0 entered promiscuous mode
0day 00:00:17 TPT: unreasonable target TSSI 0
0day 00:00:17 br0: port 2(wlan0) entering listening state
0day 00:00:17 br0: port 1(eth0) entering listening state
Refresh
Clear

6.5 Logout

Click **Logout** on the bottom menu to exit and go back to GUI login home page.

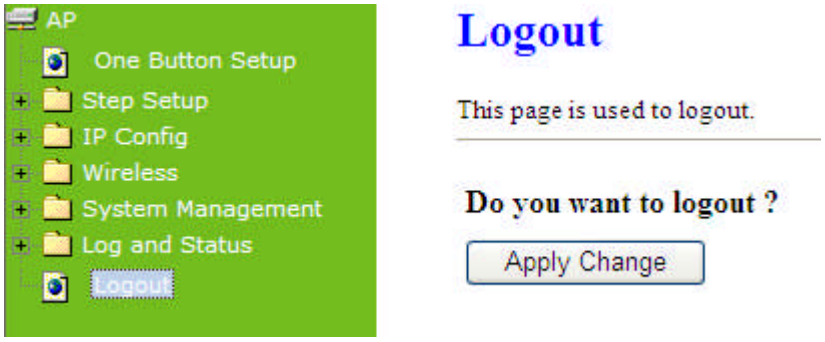

Chapter 7 Advance Configuration for WiFi AP Mode

7.1 IP Configuration

This function allows you to add routing rules into N+ Mini Broadband Router, including LAN.

7.1.1 LAN Setup

Use this page to set up the local IP address and subnet mask for your router. Please select **LAN** under the **IP Config** menu and follow the instructions below to enter the LAN setting page to configure the settings you want.

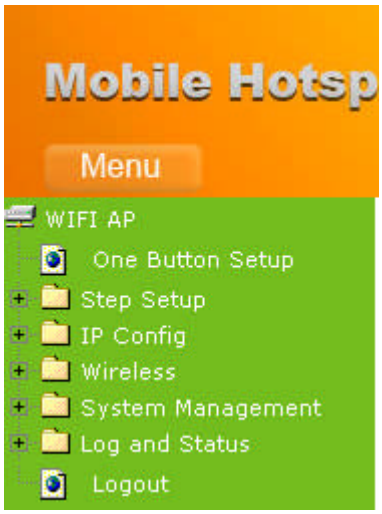

7.1.2 LAN Interface Setup

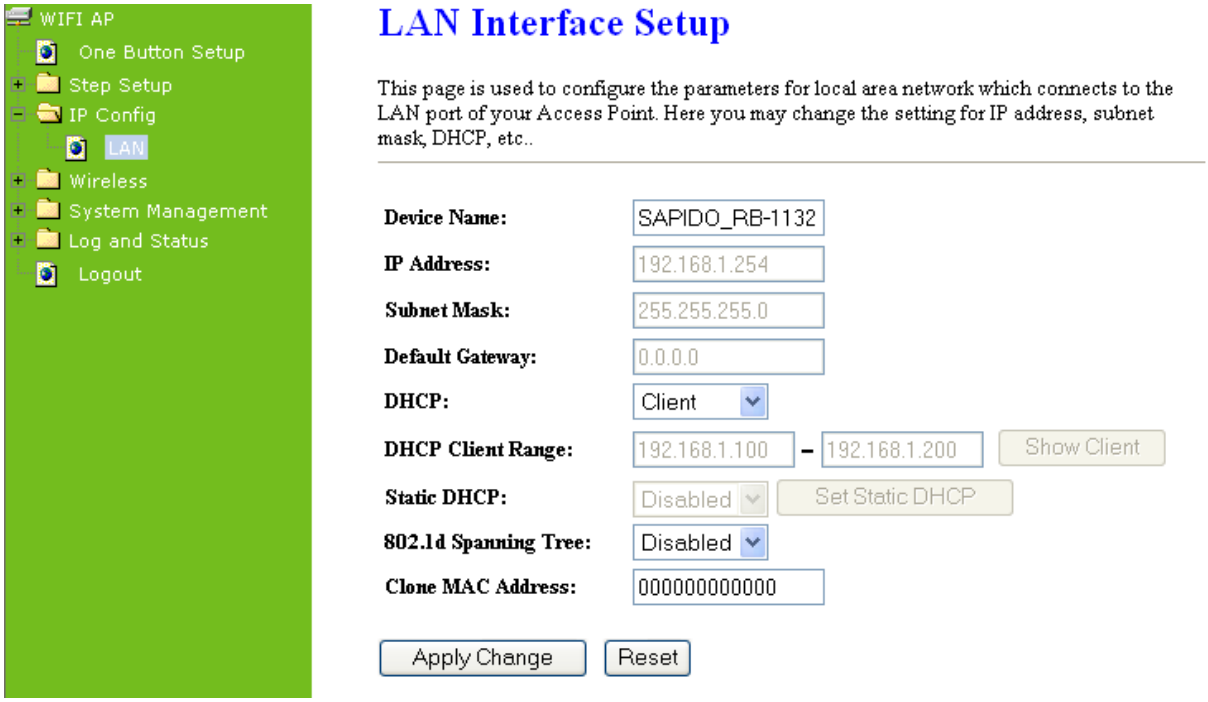
WIFI AP
One Button Setup
Step Setup
IP Config
LAN
Wireless
System Management
Log and Status
Logout
LAN Interface Setup
This page is used to configure the parameters for local area network which connects to the LAN port of your Access Point. Here you may change the setting for IP address, subnet mask, DHCP, etc..
Device Name: SAPIDO_RB-1132
IP Address: 192.168.1.254
Subnet Mask: 255.255.255.0
Default Gateway: 0.0.0.0
DHCP: Client
DHCP Client Range: 192.168.1.100 – 192.168.1.200 Show Client
Static DHCP: Disabled Set Static DHCP
802.1d Spanning Tree: Disabled
Clone MAC Address: 000000000000
Apply Change
Reset

1. IP Address

The default value of LAN IP address is **192.168.1.254** for this router.

2. Subnet Mask

Input Subnet Mask, normally it is **255.255.255.0**.

3. Default Gateway

Input ISP Default Gateway Address. If you don't know, please check with your ISP.

4. DHCP

Enable or disable DHCP services. The DHCP server will automatically allocate an unused IP address from the IP address pool to the requesting computer if enabled.

5. DHCP Client Range

Define the DHCP client range and then the DHCP server will assign an IP to the requesting computer from this range. The **Show Client** will display every assigned IP address, MAC address, and expired time. The default range is 192.168.1.100 - 192.168.1.200.

6. 802.1d Spanning Tree

IEEE 802.1d Spanning Tree Protocol (STP) is a link layer network protocol that ensures a

loop-free topology for any bridged LAN. The main purpose of STP is to ensure that you do not create loops when you have redundant paths in your network. Loops are deadly to a network.

7. Clone MAC Address

Copy the MAC address from the device you had registered to your ISP if your ISP asks for the specific MAC Address.

8. Apply Changes & Reset

Click on **Apply Changes** to save the setting data. Or you may click on **Reset** to clear all the input data.

7.2 Wireless Setup

Please select **Wireless** under the main menu.

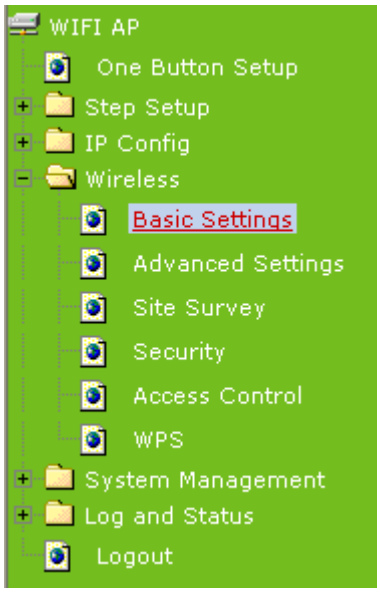

7.2.1 Wireless Basic Settings

Follow the instructions to configure the **Wireless** settings.

1. Disable Wireless LAN Interface

Select **Disable Wireless LAN Interface** to turn off the wireless function.

2. Band

This field indicates the 802.11x interface mode. For example, "**2.4GHz(G)**" prevents the 802.11b clients from accessing the router. "**2.4GHz(B+G)**" allows both 802.11b and 802.11g clients to access the router. There are 6 options, 2.4 GHz (B/G/N/B+G/G+N/B+G+N) from the drop down list.

3. Mode

Select **AP, WDS,** or **AP+WDS** to allow or disallow the wireless operation.

- **Multiple APs**

Click Multiple APs to set up 4 different SSIDs to deploy a shared WLAN. Users can add or limit the properties for each SSID, increasing the flexibility and efficiency of the network.

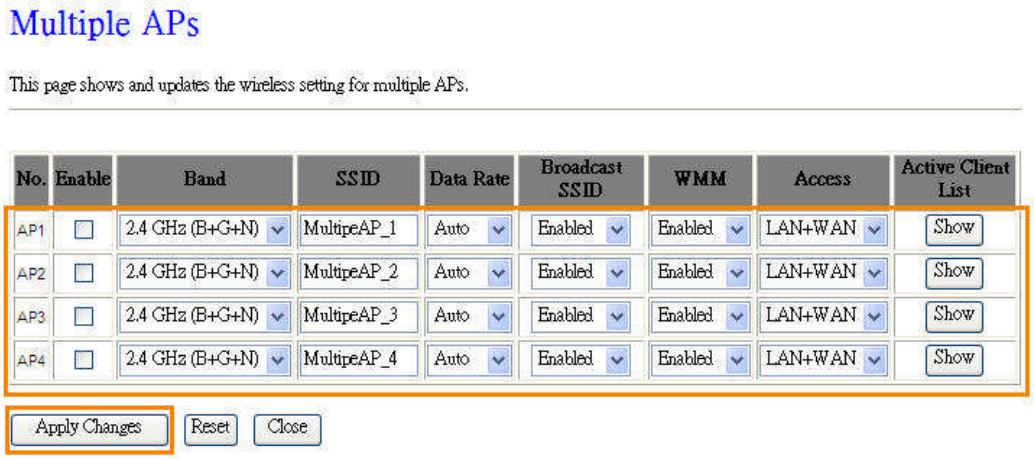

(1.) **Enable:** check it for enable or not.

(2.) **Band:** select the frequency from the drop down list.

(3.) **SSID:** please enter different SSID in each class.

(4.) **Data Rate:** please select the data transmission rate.

(5.) **Access:** defined the access type.

a. LAN+WAN: the client can access to the Internet and connect to 3.5G Mobile router's GUI to setup.

b. WAN: the client can only access to the Internet.

(6.) **Active Client List:** display the properties of the client which is connecting successfully.

(7.) **Apply Changes:** Please click **Apply Changes** to initiate or click **Reset** to clear all the input data.

4. Network Type：

Please select "**Infrastructure**" or "**Ad hoc**." The default is "**Infrastructure**." The selection is disabled when wireless mode is selected to AP.

5. SSID：

Please input your wireless network name. Default is "SAPIDO_RB-1132".

6. Channel Width

Please select “**20MHZ**” or “**40MHZ**” channel width to change the transmission channels.

7. ControlSideband

Setting the Sideband "**Upper**" or "**lower.**”

8. Channel Number

Please select your wireless network channel. There are Auto, 2~11.

9. Broadcast SSID

Enable or disable the SSID broadcast function. Disable this feature can provide more security of your WLAN.

10. Data Rate

Rate at which data can be communicated (bps); auto, 1M, 2M, 5.5M, 11M, 6M, 9M, 12M, 18M, 24M, 36M, 48M or 54M to be selected from the drop-down list.

11. Associated Clients

Check the WiFi ISP connectors and the connecting status.

12. Enable Mac Clone (Single Ethernet Client)

Copy the MAC Address for identity of some ISPs.

13. Enable Universal Repeater Mode (Acting as AP and Client simultaneously)

Enable **Universal Repeater Mode**, N+ Mini Router will act as a wireless AP and AP client at the same time, and able to link to another AP.. It uses AP client function to connect to a Root AP (any AP) and uses AP function to service all wireless stations within its coverage. All the stations within the coverage of N+ Mini Router can be bridged to the Root AP. It can help user to extend the coverage of wireless network.

After checking **Enable Universal Repeater Mode**, please input the ESSID. The default is **ESSID_Mobile_Router**.

- **How to Enable URM (Universal Repeater Mode)**

  User could enable URM in wireless basic setting page as shown in following figures.

  Step 1. Get back to menu “**Network Config**” and write down the SSID, channel and security.

Step 2. Setting the same SSID, channel and security you got form “Network Config” and Click on **Apply Changes** to save the setting

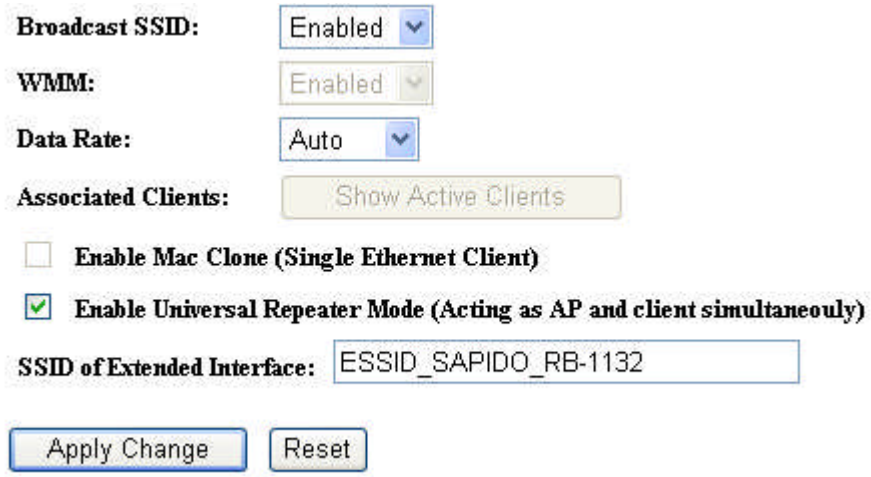

Note: The DHCP server should be disabled under menu “**LAN Interface Setup**” and then the URM could be enabled.

Step 3. Check the AP connectors and the Wireless connecting status.

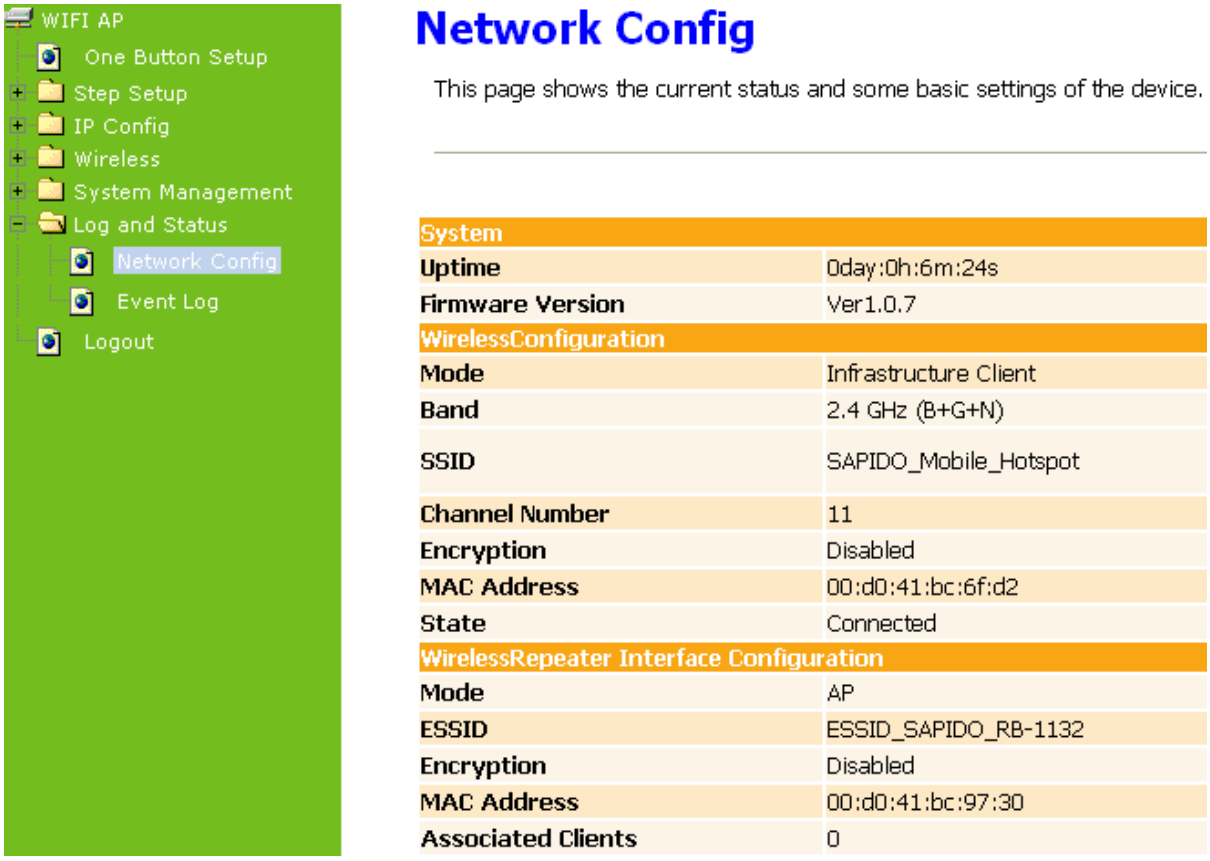

14. SSID of Extended Interface

When mode is set to “AP” and Universal Repeater Mode is enabled, user should input SSID of another AP (the upper level device) in the field of **SSID of Extended Interface**.

15. Apply Change & Reset

Click on “**Apply Change**” to save the setting data. Or you may click on “**Reset**” to clear all the input data.

7.2.2 Wireless Advanced Settings

Please follow the instructions to configure the **Wireless** settings.

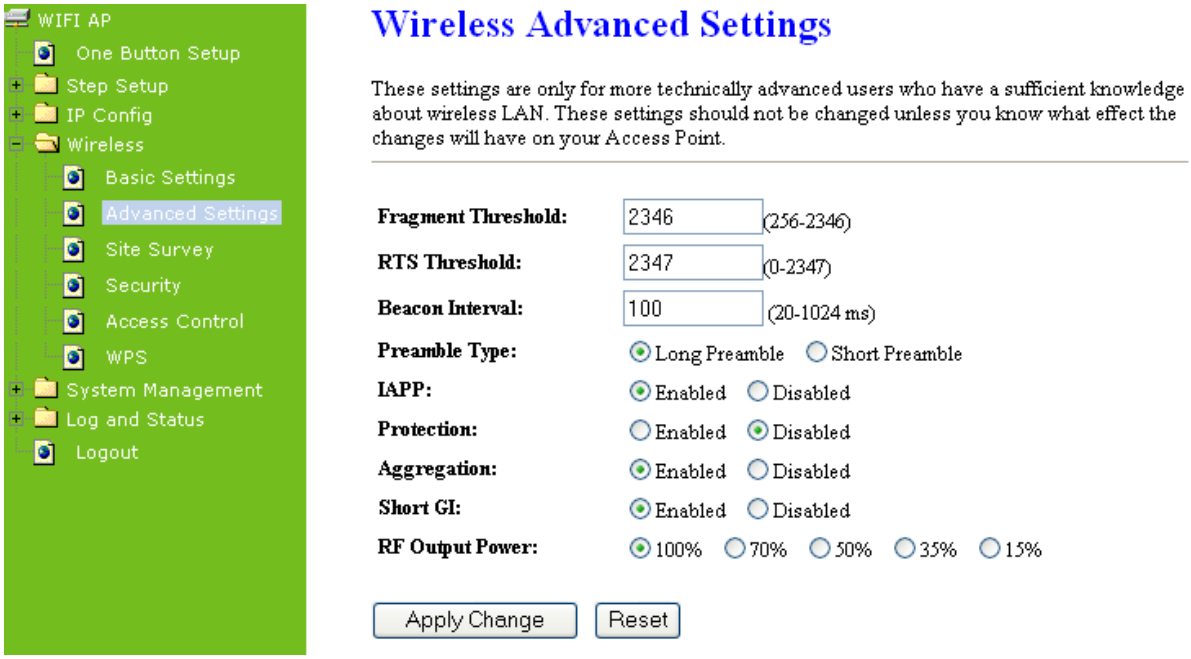
WIFI AP
One Button Setup
Step Setup
IP Config
Wireless
Basic Settings
Advanced Settings
Site Survey
Security
Access Control
WPS
System Management
Log and Status
Logout
Wireless Advanced Settings
These settings are only for more technically advanced users who have a sufficient knowledge about wireless LAN. These settings should not be changed unless you know what effect the changes will have on your Access Point.
Fragment Threshold: 2346 (256-2346)
RTS Threshold: 2347 (0-2347)
Beacon Interval: 100 (20-1024 ms)
Preamble Type: Long Preamble Short Preamble
IAPP: Enabled Disabled
Protection: Enabled Disabled
Aggregation: Enabled Disabled
Short GI: Enabled Disabled
RF Output Power: 100% 70% 50% 35% 15%
Apply Change
Reset

1. Fragment Threshold

To identify the maximum length of packet, the overflow packet length wil be fragmentized. The allowed range is 256-2364, and default length is 2346 bytes.

2. RTS Threshold

This value should remain at its default setting of 2347. The range is 0~2347. Should you encounter inconsistent data flow, only minor modifications are recommended. If a network packet is smaller than the present RTS threshold size, the RTS/CTS mechanism will not be enabled. The router sends Request to Send (RTS) frames to a particular receiving station

and negotiates the sending of a data frame. After receiving an RTS, the wireless station responds with a Clear to Send (CTS) frame to acknowledge the right to begin transmission. Fill the range from 0 to 2347 into this blank.

3. Beacon Interval

Beacons are packets sent by an access point to synchronize a wireless network. Specify a beacon interval value. The allowed setting range is 20-1024 ms.

4. Preamble Type

The preamble (also called “a header”) is a section of data at the head of a packet that contains information that wireless devices need when they send and receive packets. Short preambles improve throughput performance, but some wireless devices require long preambles. Select the suitable preamble as short or long preamble.

5. IAPP

Inter Access Point Protocol. Allow seamless roaming between Access Points in your wireless network. Coupled with superior RF performance

6. Protection

Select to enable the wireless protection or not.

7. Aggregation

Data aggregation can reduce the amount of data routed through the network, and increasing throughput.

8. Short GI

Enabling the Short Guard Interval increases the wireless transmission.

9. RF Output Power

User can adjust the RF output power to get the best wireless connection. There are 5 power types available: 100%, 70%, 50%, 35%, and 15%.

10. Apply Changes & Reset

Click on “**Apply Changes**” to save the setting data. Or you may click on “**Reset**” to clear all the input data.

7.2.3 Wireless Site Survey

This function provides users to search existing wireless APs or wireless base stations from ISP. You can connect to a wireless AP manually in WiFi AP mode. The designed AP will appear on SSID column in Wireless Basic Setup page.

Please click on **Refresh** to refresh the list. Click **Connect** after select an existing AP to connect.

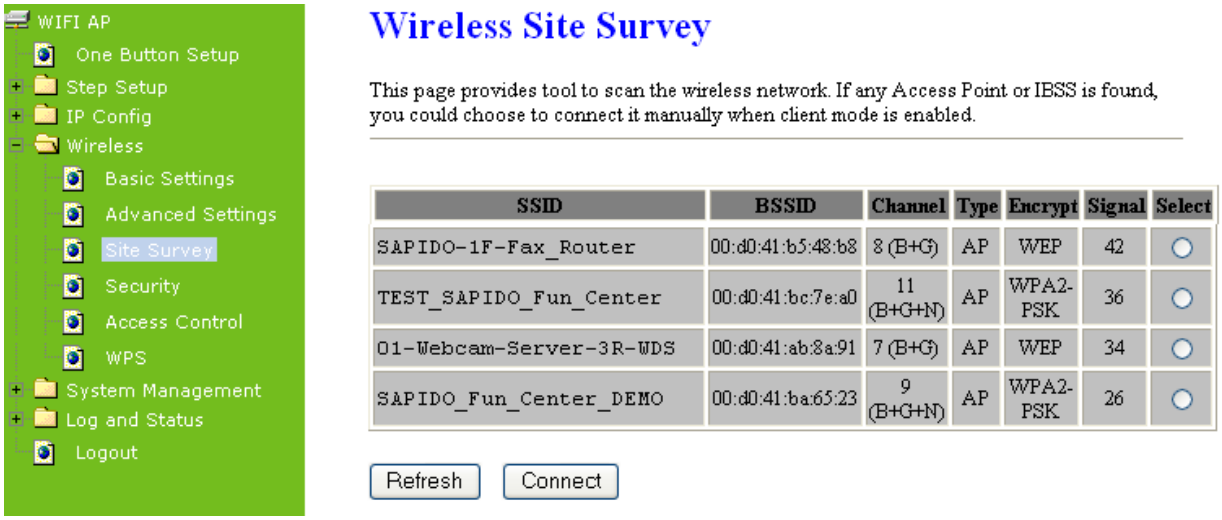

7.2.4 Wireless Security Setup

4 encryption types can be selected here, please follow the instructions below for each.

1. Encryption – WEP

Enabling WEP can protect your data from eavesdroppers. If you do not need this feature, select "**None**" to skip the following setting. N+ Mini Router supports both 64-bit and 128-bit encryption using the Wired Equivalent Privacy (WEP) algorithm. Select the type of encryption you want to use (64 or 128 bit) and configure one to four WEP Keys. The "1280bit" method is more secure than the "64-bit".

Key Length: For 64bits WEP key, either 5 ASCII characters or 10 hexadecimal digitals leading by 0x can be entered. For 128bits WEP key, either 13 ASCII characters or 26 hexadecimal digits leading by 0x can be entered.

Note: 128 bits WEP is most secure, but has more encryption/decryption overhead. Note that all wireless devices must support the same WEP encryption bit size and have the same key. Four keys can be entered here, but only one key can be selected at a time. The keys can be entered in ASCII or Hexadecimal. Select the item from drop-down list you wish to use.

Encryption Key: At most four keys can be set. A WEP key is either 10 or 26 hexadecimal digits (0~9, a~f, and A~F) based on whether you select 64 bit or 128 bit in the WEP drop-down list.

2. Encryption – WPA (WPA, WPA2 & WPA2 Mixed)

The WPA, WPA2 & WPA2 Mixed encrypt each frame transmitted from the radio using the pre-shared key (PSK) which entered from this panel or a key got dynamically through 802.1x.

- **WPA Authentication Mode**

Enterprise (RADIUS): Please input the port, IP address, and password of authentication RADIUS Server.

Personal (Pre-Shared Key): Pre-Shared Key type is coding in ASCII, and the length is between 8 to 63 characters. If the coding is in Hex, the key length is 64 characters.

3. Apply Changes & Reset

Click on **Apply Changes** to save the setting data. Or you may click on **Reset** to clear all the input data.

7.2.5 Wireless Access Control

With the MAC address, you may allow or disallow the access to your AP.

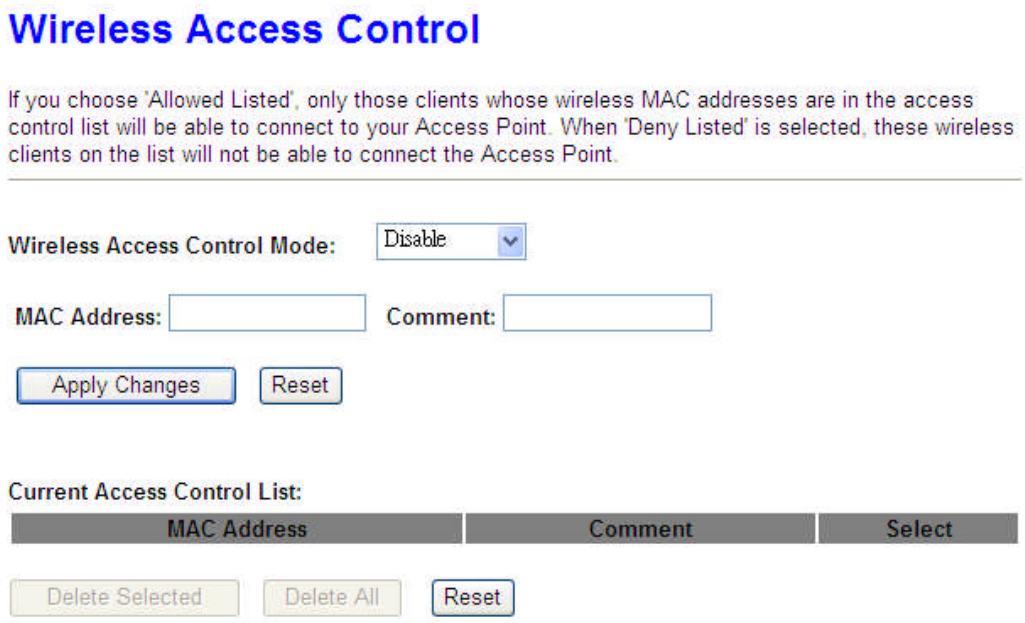
Wireless Access Control
If you choose 'Allowed Listed', only those clients whose wireless MAC addresses are in the access control list will be able to connect to your Access Point. When 'Deny Listed' is selected, these wireless clients on the list will not be able to connect the Access Point.
Wireless Access Control Mode:
Disable
MAC Address:
Comment:
Apply Changes
Reset
Current Access Control List:
MAC Address
Comment
Select
Delete Selected
Delete All
Reset

1. Wireless Access Control Mode

"**Allowed Listed**" means only the MAC address listed on the allowed list can access to your wireless network.

"Deny Listed" means the listed MAC Address are not allowed to linkto your wireless network.

"**Disable**" for function disuse.

2. MAC Address

Please input the allowed or denied MAC address, for example, 001122334455.

3. Comment

You may input the comments for the set MAC Address.

4. Apply Changes & Reset

Click on "**Apply Change**" to save the setting data. Or you may click on "**Reset**" to clear all the input data.

5. Current Access Control List

In this list, all the MAC info you input will be displayed.

6. Delete Selected and Delete All

Click on "**Delete Selected**" to erase the selected MAC address. Click on "**Delete All**" to erase all the entered MAC Address.

7.2.6 WPS

Wi-Fi Protected Setup (WPS) is an easy way to establish a secured wireless network between N+ Mini Router and wireless card. Users do not need to manually entering a creative, yet predictable security key on both Wi-Fi devices to prevent unwanted access to their wireless network. With WPS, it can automatically configure a wireless network with a network name (SSID) and strong WPA data encryption and authentication.

WPS can be enabled by 2 methods:

1. **PBC (Push button configuration) Method,** in which the user simply has to push a button, either an actual or a virtual one, on both WPS devices to connect.
2. **PIN (Personal Identification Number) Method,** in which a PIN has to be taken either from a sticker label or from the web interface of the WPS device. This PIN will then be entered in the AP or client WPS device to connect.

Please follow instructions below to enable the WPS function.

- **Start PBC:**

(1.) Press the **WPS button** from N+ Mini Router or click **Start PBC** from menu "**Wi-Fi Protected Setup**", and waiting for the WPS wireless card setting.

or

(2.) Open the "**Wireless Utility**" of your wireless card, and click its "**PBC**" button, to start auto pairing.

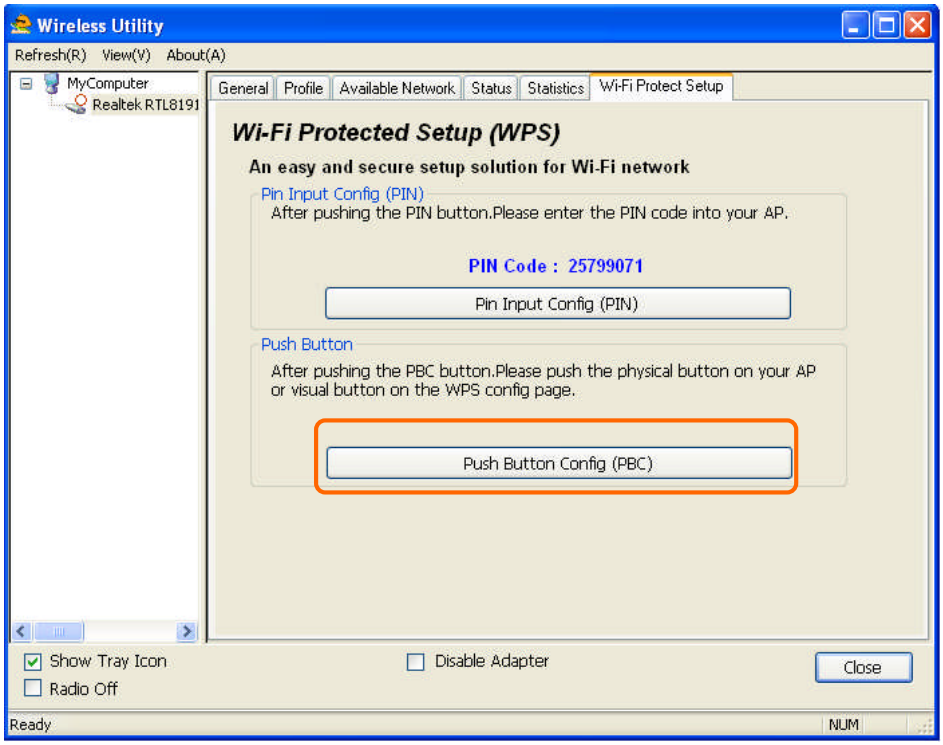

(4.) While scanning is successful, the information of the wireless card appears in the windows below.

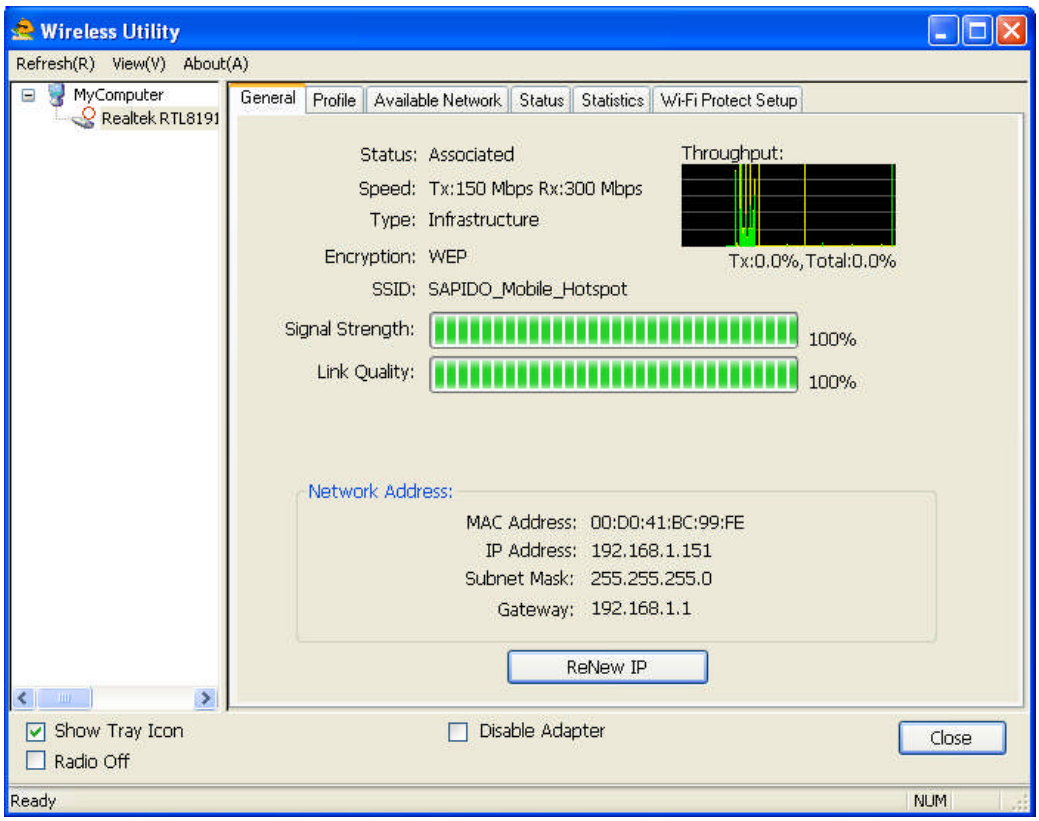

Start PIN:

(7.) Open the "**Wireless Utility**" of your wireless card. Follow its PIN instruction to get a new PIN number. Write it down.

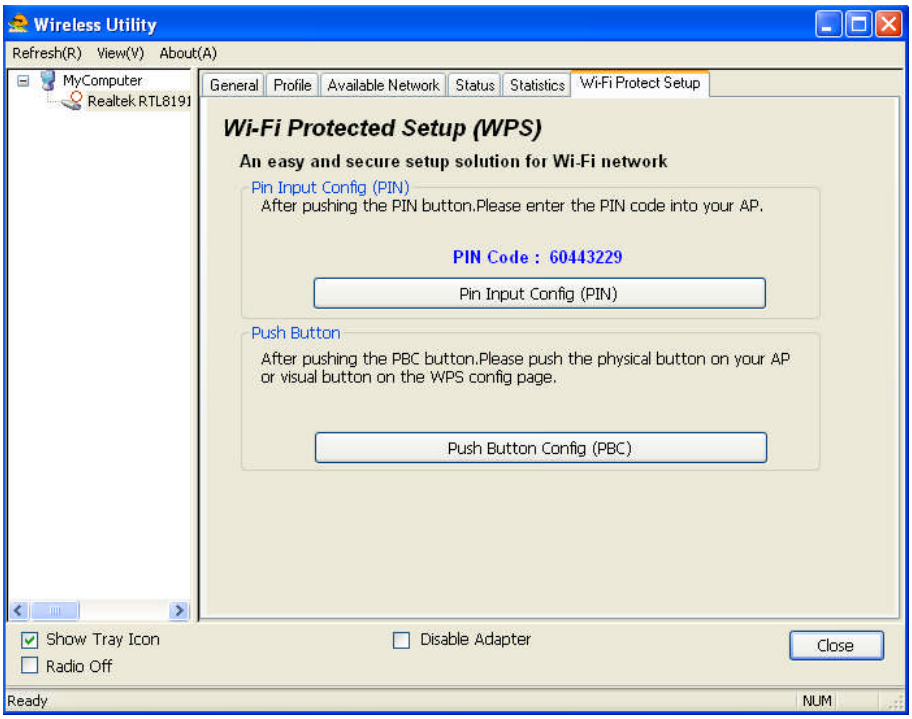

(8.) Open menu "**Wi-Fi Protected Setup**" of N+ Mini Router, input the PIN number from the wireless card then click **Start PIN**.

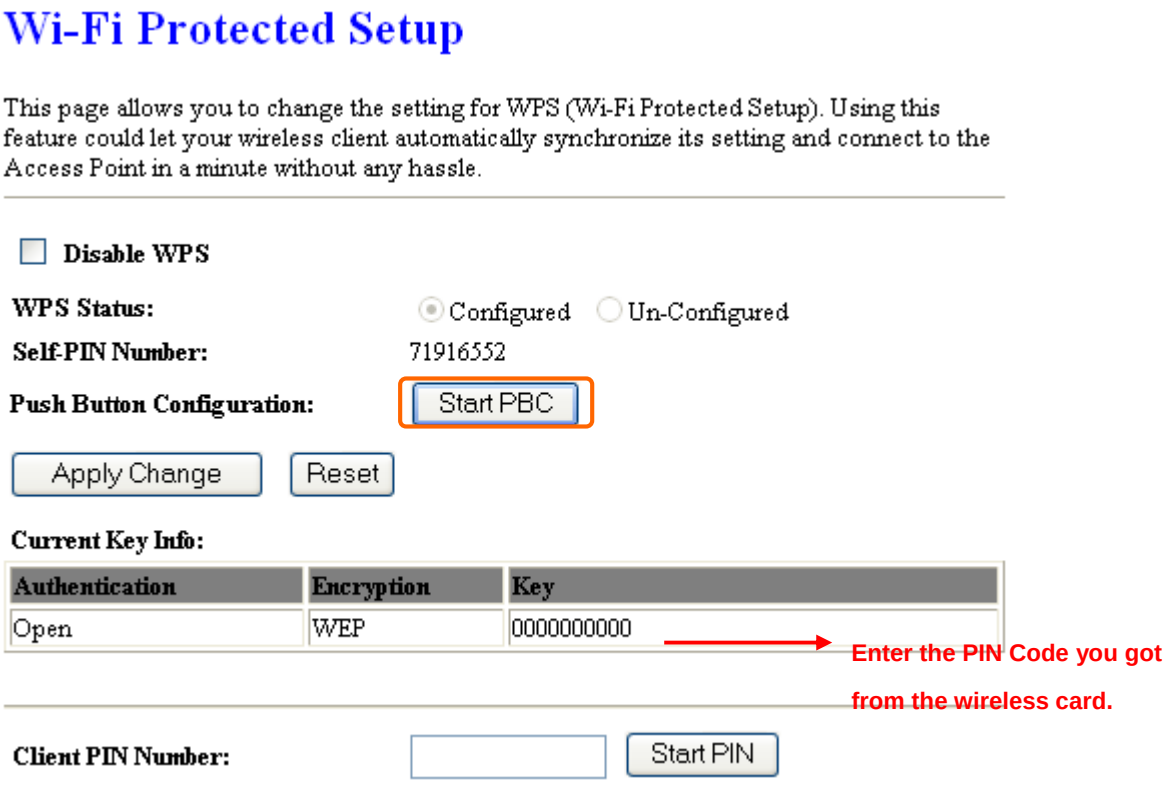

(9.) Back to **“Wireless Utility”** and press the **“Start PIN”** button to complete the auto-paring process.

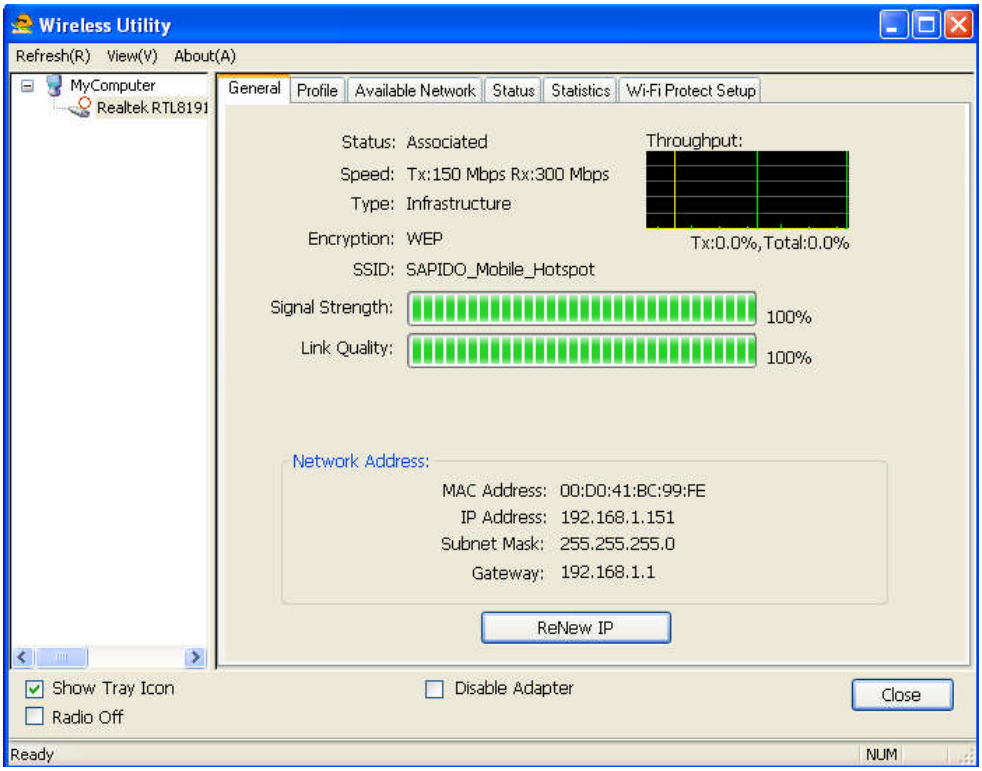

7.3 System Management

N+ Mini Broadband Router provides system management including password changing, firmware upgrade, time setting, user's account setting and other detail settings. Following is detail explanation for each.

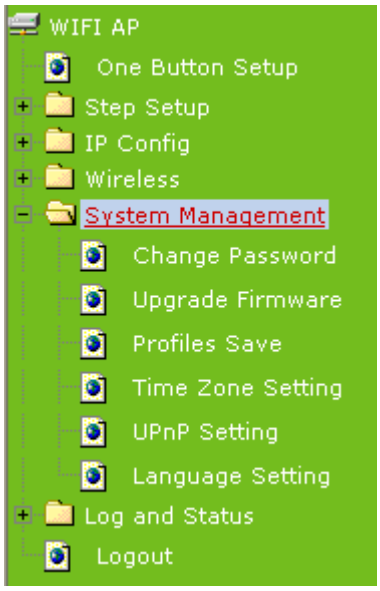

7.3.1 Change Password

Users can set or change their password in this section.

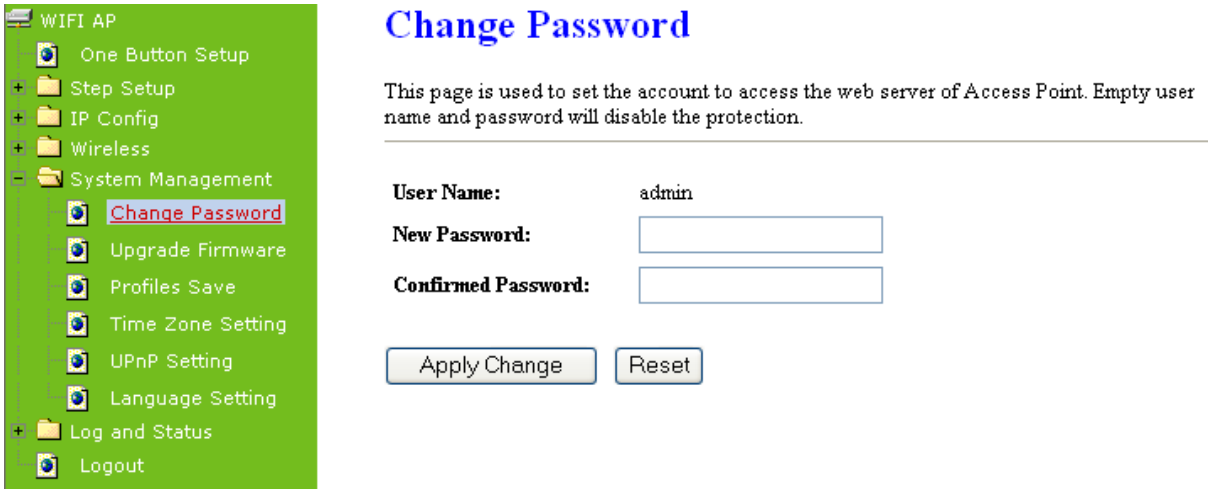

1. New Password

Enter the new password you want to change.

2. New Password (Confirm)

Enter the new password again for confirming.

3. Apply Change & Reset

Click on **Apply Changes** to save the setting data. Or you may click on **Reset** to clear all the input data.

Note: 1. Only the password can be changed, the user name for administrator is **admin** and not to be changed.
2. If you forget administrator's password, please reset 3.5G plus WLAN Mobile Server Router to default setting by pressing the "**Reset**" button on the rear panel over 5 seconds. And the password will return to **admin**.

7.3.2 Upgrade Firmware

There is certain risk while upgrading firmware. Upgrading firmware is not recommended unless the significant faulty is found. You can upgrade the firmware of N+ Mini Router on this page. Make sure the firmware you want to use is on the local hard drive of the computer. Click **Upgrade Firmware** to proceed.

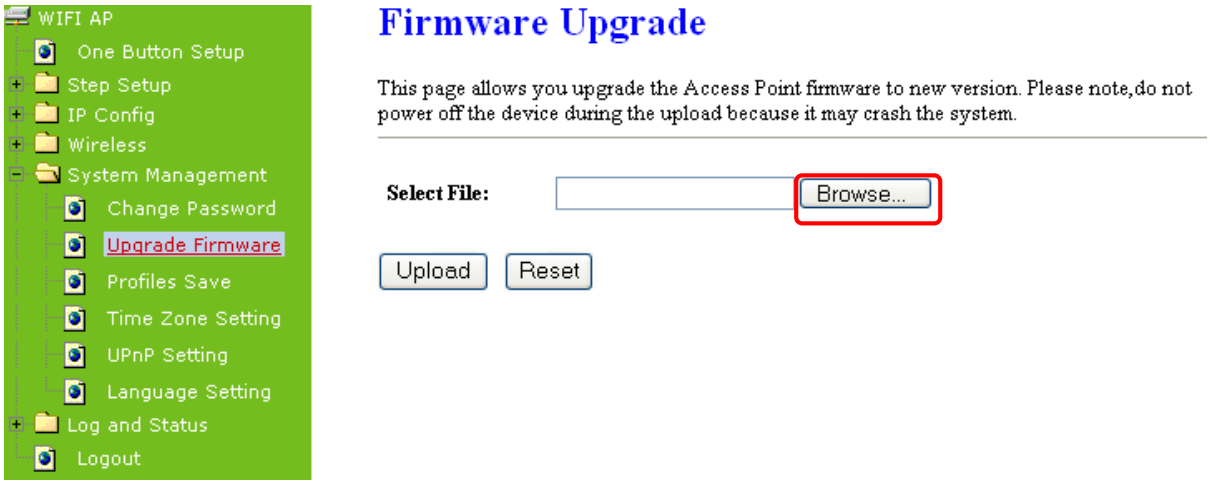

1. Update Firmware

Click on **Browse…** button to search your local hard drive and locate the firmware to be used for update.

2. Upload & Reset:

Click **Upload** to upgrade the firmware or **Reset** to restore to factory default Settings

Note: 1. To prevent the firmware upgrading interrupted by other wireless signals and caused failure. We recommend using wired connection to do the upgrading.
2. Before upgrading the firmware, please remove any USB device which connected with this router.
3. The firmware upgrade will not remove your previous settings.

- **Reset button:**

On the back of this router, there is a reset button. If you can not login the administrator page by forgetting your password; or the router has problem you can't solve. You can push the reset button for 5 seconds with a stick. The router will reboot and all settings will be restored to factory default settings. If the problem still exists, you can visit our web site to see if there is any firmware for download to solve the problem.

7.3.3 Save / Reload Settings

To back up the current configuration setting or load the backup data, also you can restore N+ Mini Broadband Router to default setting by this function.

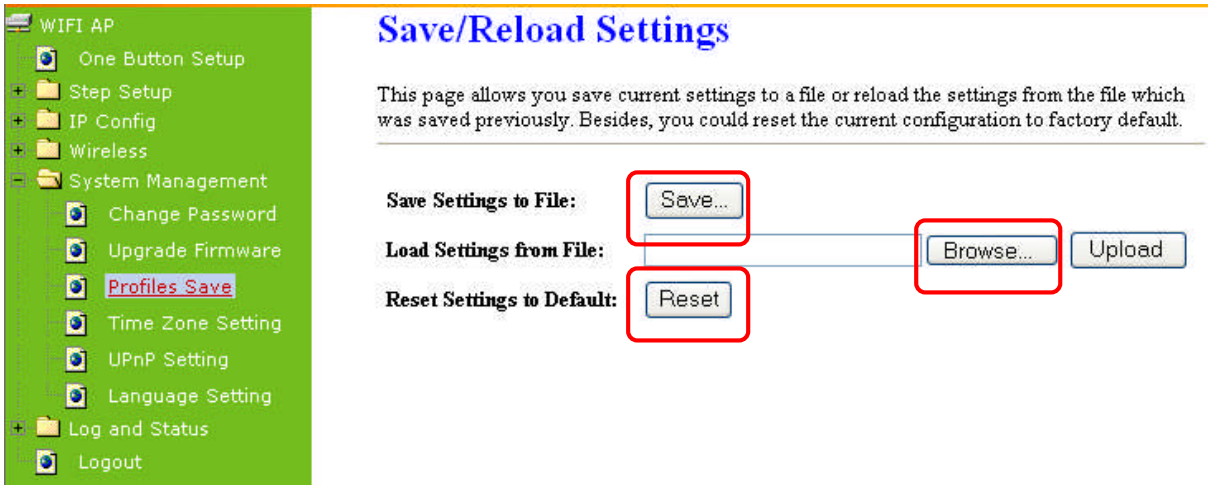

1. Save Settings To File

Step 1. Click on **Save** button for saving the configuration setting into assigned location.

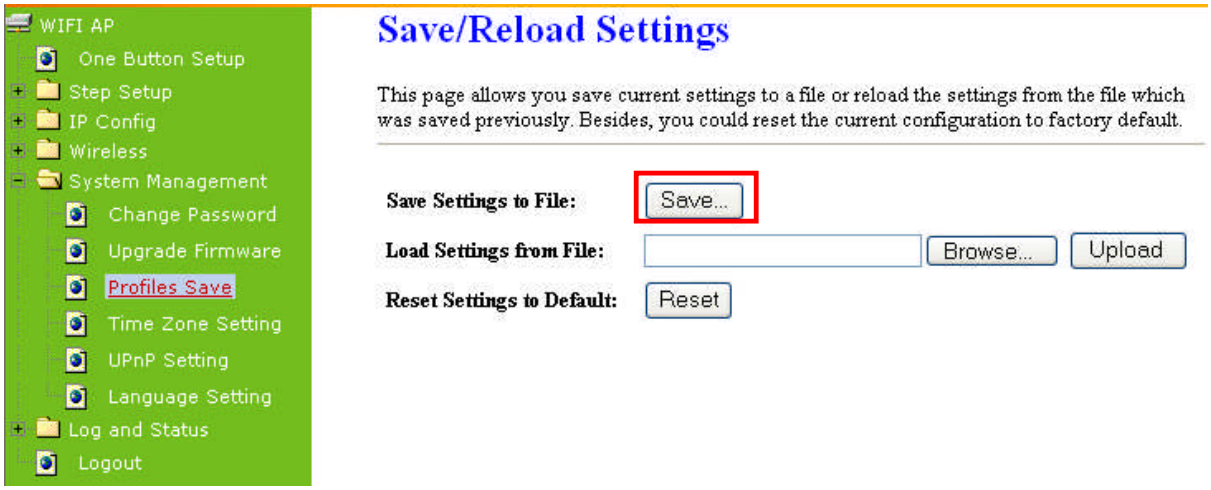

A pop window will show up and ask to save **config.dat** file.

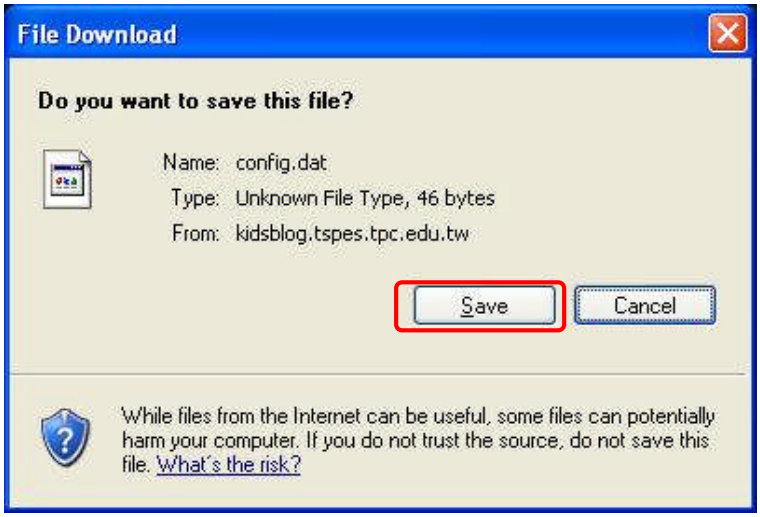
File Download
Do you want to save this file?
Name: config.dat
Type: Unknown File Type, 46 bytes
From: kidsblog.tspes.tpc.edu.tw
Save
Cancel
While files from the Internet can be useful, some files can potentially harm your computer. If you do not trust the source, do not save this file. What's the risk?

Step 2. Please select the location, for example: the desktop.

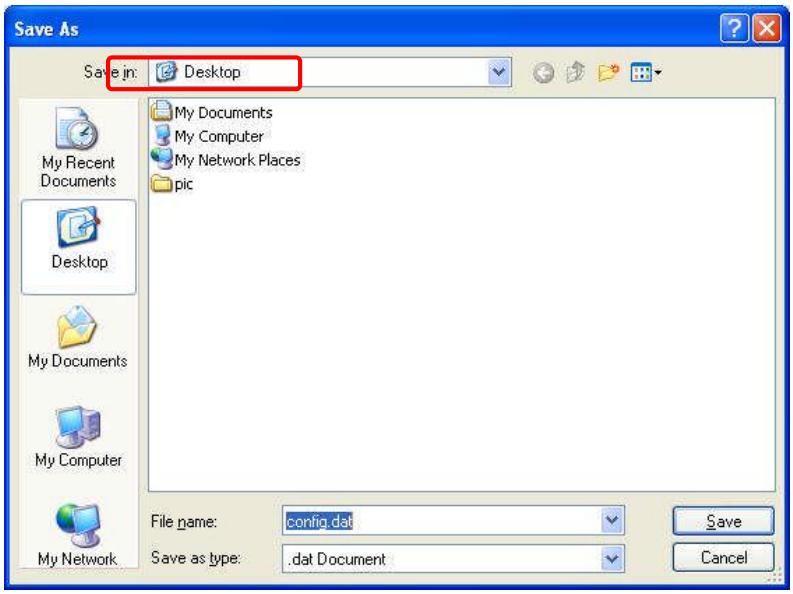

Step 3. The file you just saved will appear on the desktop.

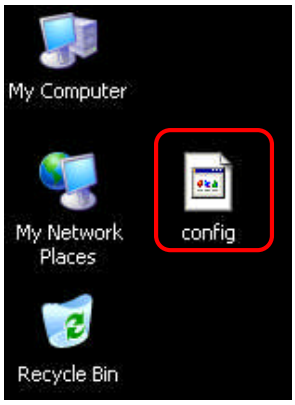

2. Load Settings From File

Step 1. Click on "**Browse…**" button for searching the saving configuration from hard drive, and then click on Upload button to load all the settings into the router.

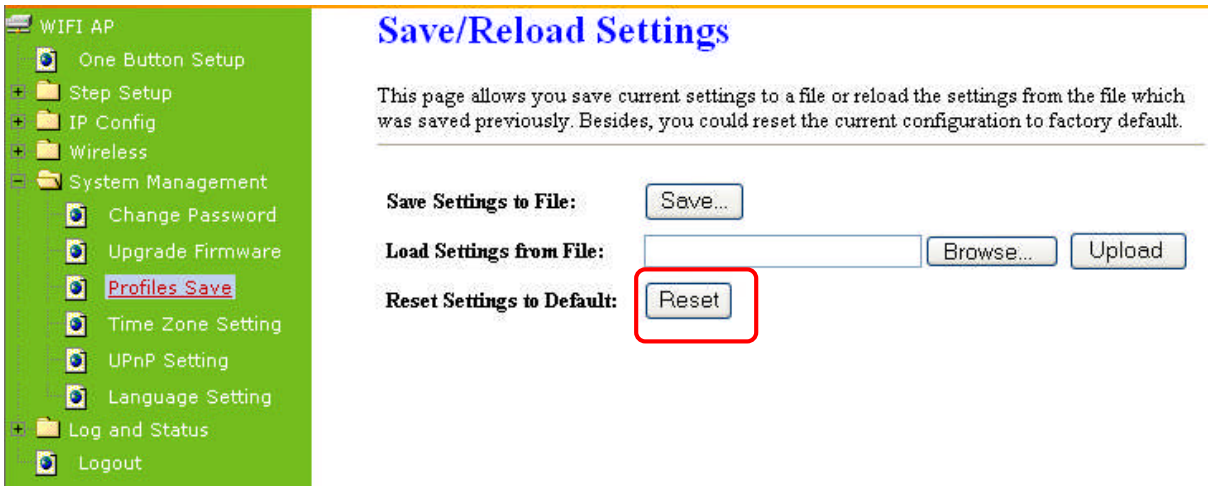

Step 2. Select the **config.dat** file.

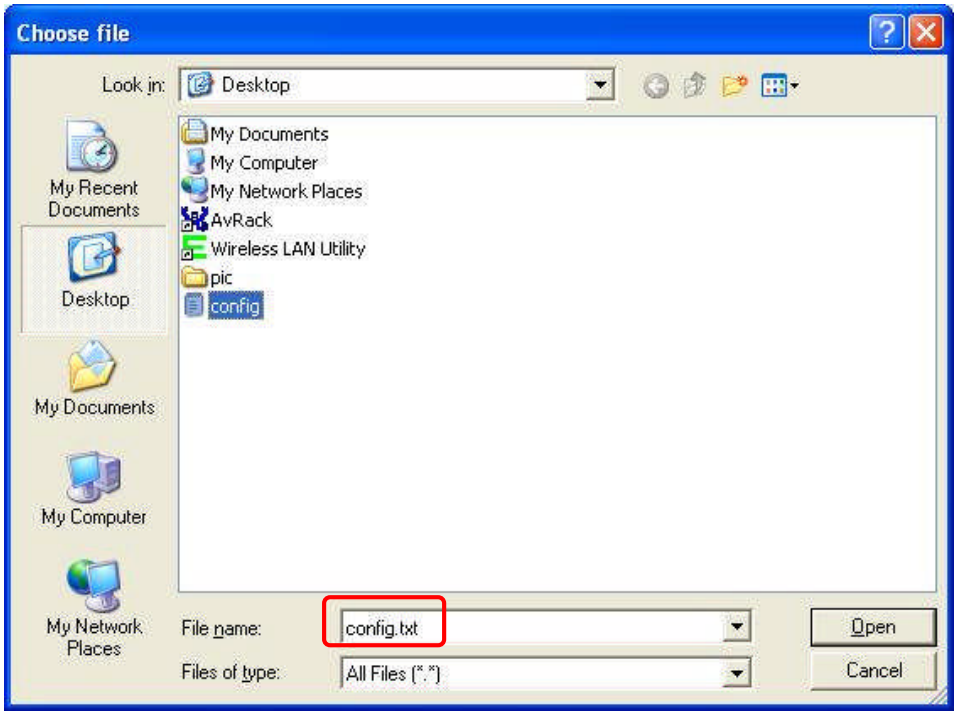

Step 3. Click **Upload** to retrieve.

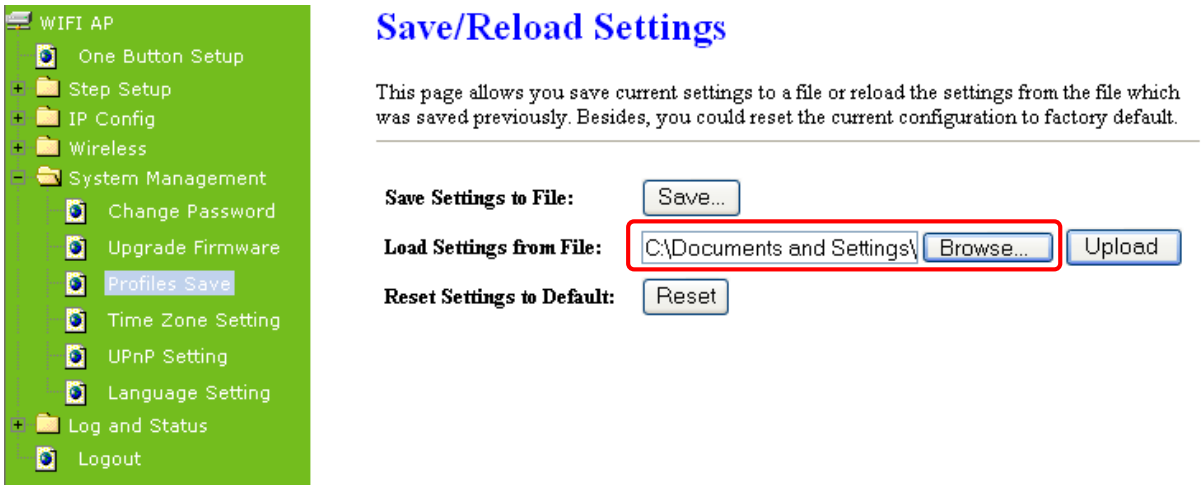

Step 4. When you see the screen below, the updating is completed. Please click **OK** to return to the main menu.

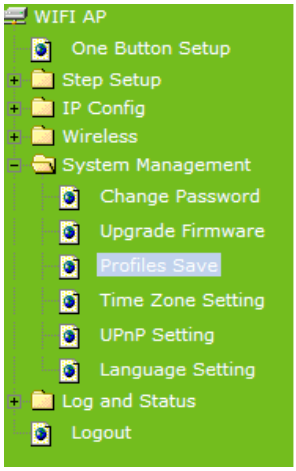

Change setting successfully!

System is configuring, after 2 seconds system will return to the previous page.

3. Reset Setting to Default

After you have tried other methods for troubleshooting your network, you may choose to restore N+ Mini Router to the factory default settings.

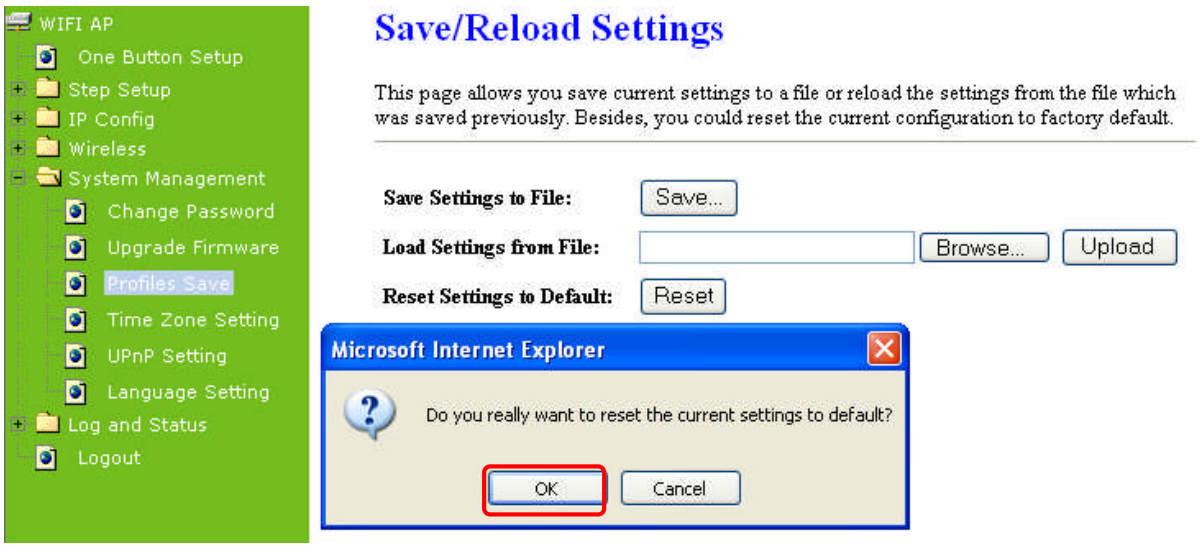

When you see the screen below, the resetting is completed. Please click **OK** and return to the main menu.

Change setting successfully!

System is configuring, after 63 seconds system will return to the previous page.

7.3.4 Time Zone Setting

The System time is the time used by N+ Mini Broadband Router for scheduling services. You can manually set the time or connect to a NTP (Network Time Protocol) server. If a NTP server is set, you will only need to set the time zone. If you manually set the time, you may also set Daylight Saving dates and the system time will automatically adjust on those dates.

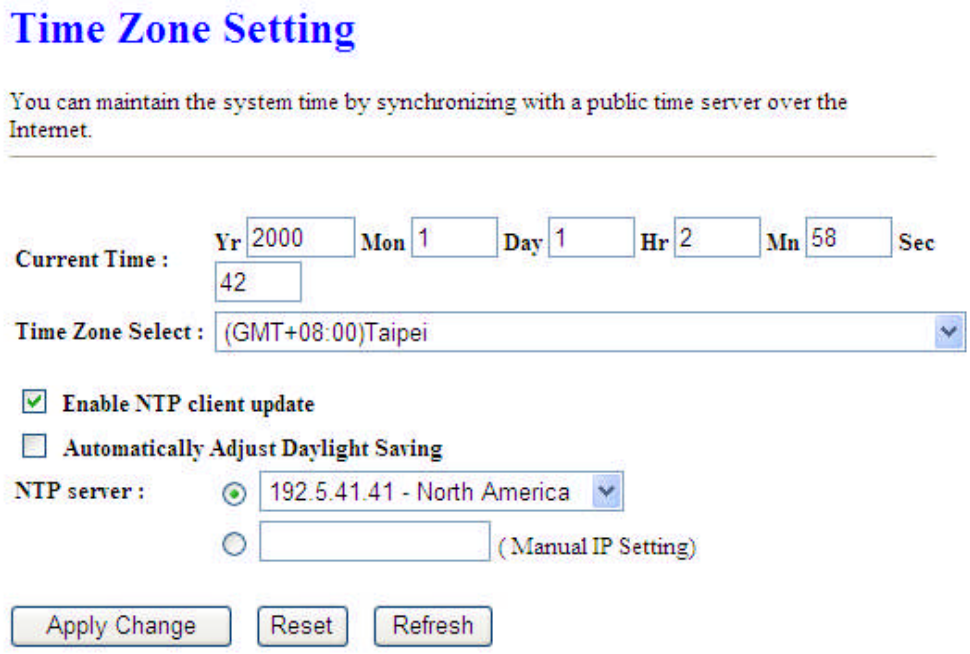
Time Zone Setting
You can maintain the system time by synchronizing with a public time server over the Internet.
Current Time :
Yr 2000 Mon 1 Day 1 Hr 2 Mn 58 Sec 42
Time Zone Select :
(GMT+08:00)Taipei
Enable NTP client update
Automatically Adjust Daylight Saving
NTP server :
192.5.41.41 - North America
(Manual IP Setting)
Apply Change
Reset
Refresh

1. Current Time

Users can input the time manually.

2. Time Zone Select

Select your time zone location from the drop-down list.

3. Enable NTP client update

Check to enable NTP client update.

4. Automatically Adjust Daylight Saving

If you are in daylight saving time area, please enable this item.

5. NTP server

Please select the NTP server from the pull-down list, or you can enter the NTP server IP address manually.

6. Apply Change & Reset & Refresh

Please click on **Apply Change** to save the setting data. Or you may click on **Reset** to clear all the input data. Or you may click on **Refresh** to update the system time on the screen.

7.3.5 UPnP Setting

UPnP (Univsersal Plug and Play) allows users to connect their UPnP-enabled broadband router, printer server and other devices right to the network with zero-configuration, meaning easier setup for installing the device on the network. The automatic discovery feature enables the device to obtain an IP address, present and describe itself to other devices and PCs on the network without having to install drivers, but to configure and use those devices.

After enabling UPNP, click **My Network Places,** and user can open the web GUI by just clicking on the **Internet Gateway Device** icon.

7.3.6 Language Setting

N+ Mini Router provides a user friendly interface in 12 languages. You can create your own language interface by following steps.

Step 1. Select Language: Select your preferred language from the drop down list, for example, Spanish, and then click **Apply Changes**.

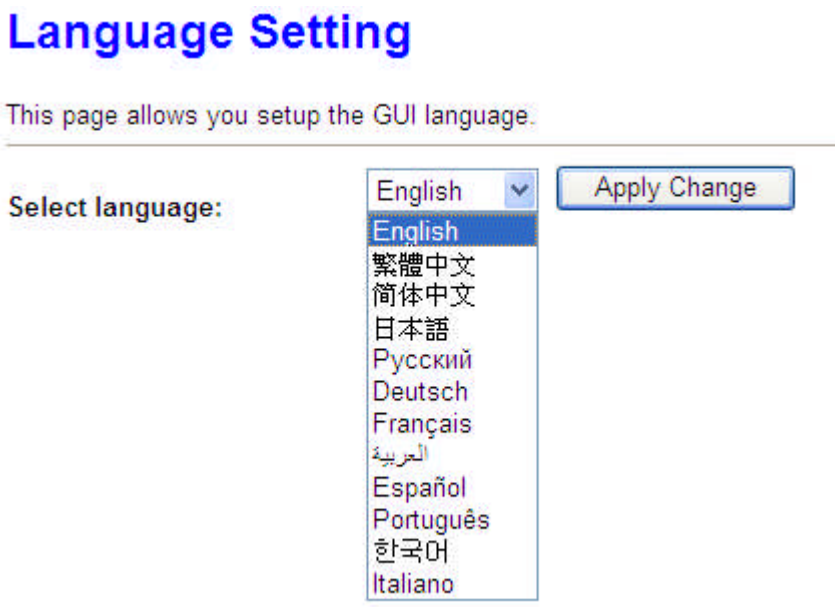

Step 2. When you see the screen with message in your selected language, the Language setup is completed.

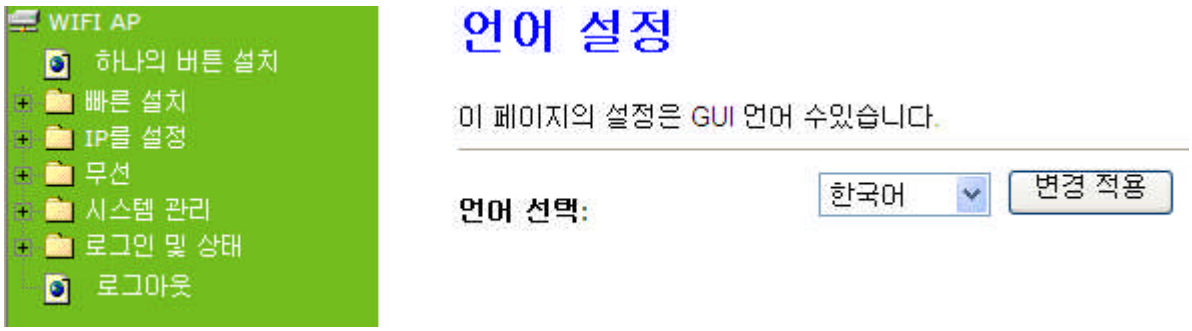

Note: In order to prevent the incomplete translation, you can press “CTRL+F5” to force reload of the page.

7.4 Log & Status

N+ Mini Router provides the log list and connection status for user to check.

7.4.1 Network Config

Network Configuration shows the firmware version and the connection status of LAN, WAN and Wireless.

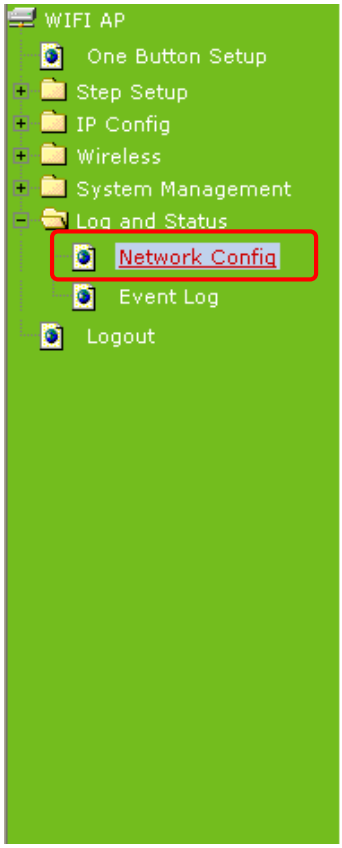

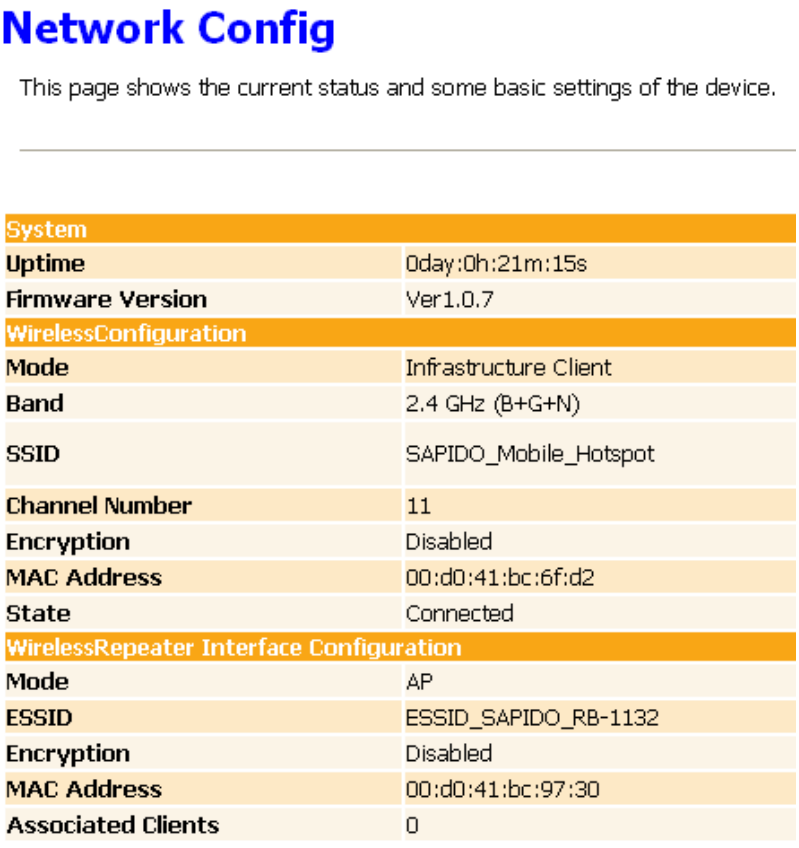

Network Config

This page shows the current status and some basic settings of the device.

System	
Uptime	0day:0h:21m:15s
Firmware Version	Ver1.0.7
WirelessConfiguration	
Mode	Infrastructure Client
Band	2.4 GHz (B+G+N)
SSID	SAPIDO_Mobile_Hotspot
Channel Number	11
Encryption	Disabled
MAC Address	00:d0:41:bc:6f:d2
State	Connected
WirelessRepeater Interface Configuration	
Mode	AP
ESSID	ESSID_SAPIDO_RB-1132
Encryption	Disabled
MAC Address	00:d0:41:bc:97:30
Associated Clients	0

7.4.2 Event Log

N+ Mini Router provides system logs for review.

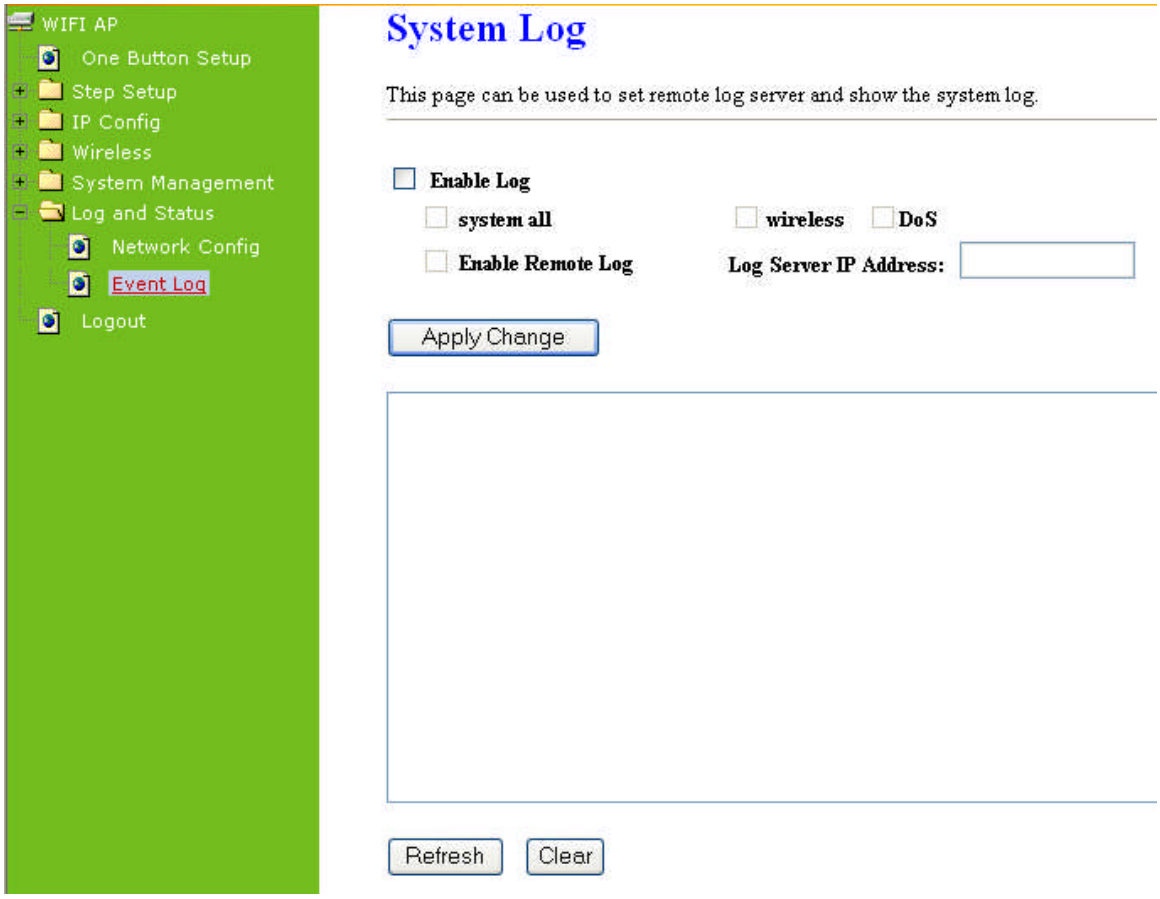

1. Enable Log

Select Enable Log to record the system log

2. system all, wireless & DoS

Select **Wireless, DoS** or **system all** to record

3. Enable Remote Log

You may choose to enable the remote event log or not.

4. Log Server IP Address

Please input the log server IP Address.

5. Apply Changes & Refresh & Clear

Click on **Apply Changes** to save the setting data. Click on **Refresh** to renew the system time, or on **Clear** to clear all the record.

- After clicking **Apply Changes** to record the event log, it will be shown as the example below.

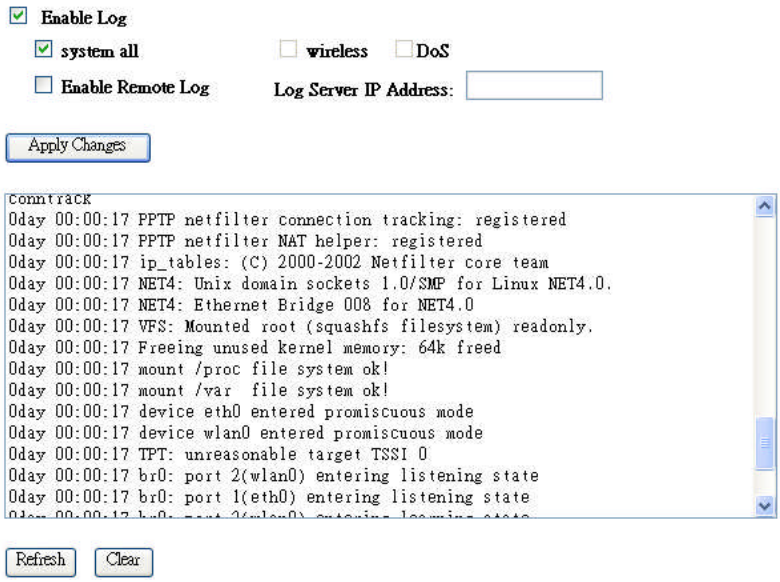
Enable Log
system all
wireless
DoS
Enable Remote Log
Log Server IP Address:
Apply Changes
conntrack
0day 00:00:17 PPTP netfilter connection tracking: registered
0day 00:00:17 PPTP netfilter NAT helper: registered
0day 00:00:17 ip_tables: (C) 2000-2002 Netfilter core team
0day 00:00:17 NET4: Unix domain sockets 1.0/SMP for Linux NET4.0.
0day 00:00:17 NET4: Ethernet Bridge 008 for NET4.0
0day 00:00:17 VFS: Mounted root (squashfs filesystem) readonly.
0day 00:00:17 Freeing unused kernel memory: 64k freed
0day 00:00:17 mount /proc file system ok!
0day 00:00:17 mount /var file system ok!
0day 00:00:17 device eth0 entered promiscuous mode
0day 00:00:17 device wlan0 entered promiscuous mode
0day 00:00:17 TPT: unreasonable target TSSI 0
0day 00:00:17 br0: port 2(wlan0) entering listening state
0day 00:00:17 br0: port 1(eth0) entering listening state
Refresh
Clear

7.5 Logout

Click **Logout** on the bottom menu to exit and go back to GUI login home page.

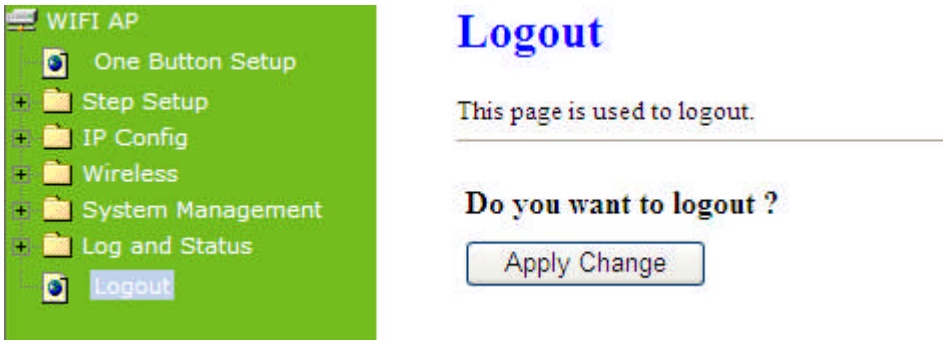

Chapter 8 DDNS Service Application

DDNS is a service changes the dynamic IP to the static IP. The settings of DDNS can solve the problem of being given the different IP by router every time. After setting the Router, your host name would correspond to your dynamic IP. Moreover, via the host name application, it could be easier for you to use FTP, Webcam and Printer remotely.

Dynamic DNS allows you to make an assumed name as a dynamic IP address to a static host name. Please configure the dynamic DNS below. Please select **Dynamic DNS** under the **IP Config** folder, and follow the instructions below to enter the **Dynamic DNS** page to configure the settings you want.

If you don't have a DDNS account, please follow the steps to complete your DDNS with Dynamic IP settings.

Step 1. First access the Internet and fill http://www.dyndns.com/ into the address field of your web browser, then click **Create Account**.

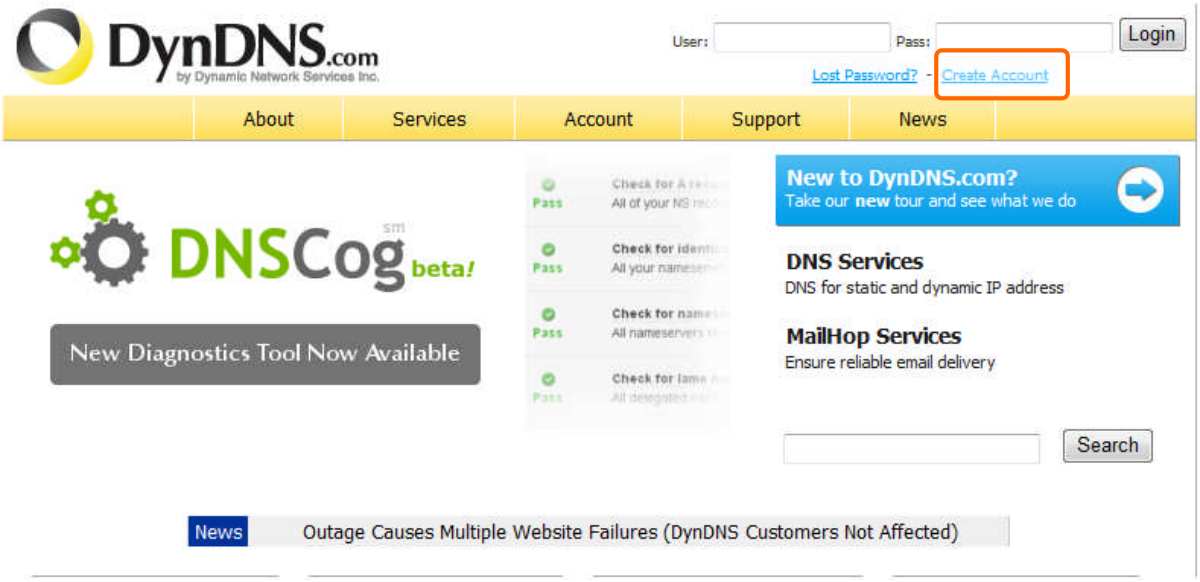

Step 2. Fill in the form as required, and then click on **Create Account** button.

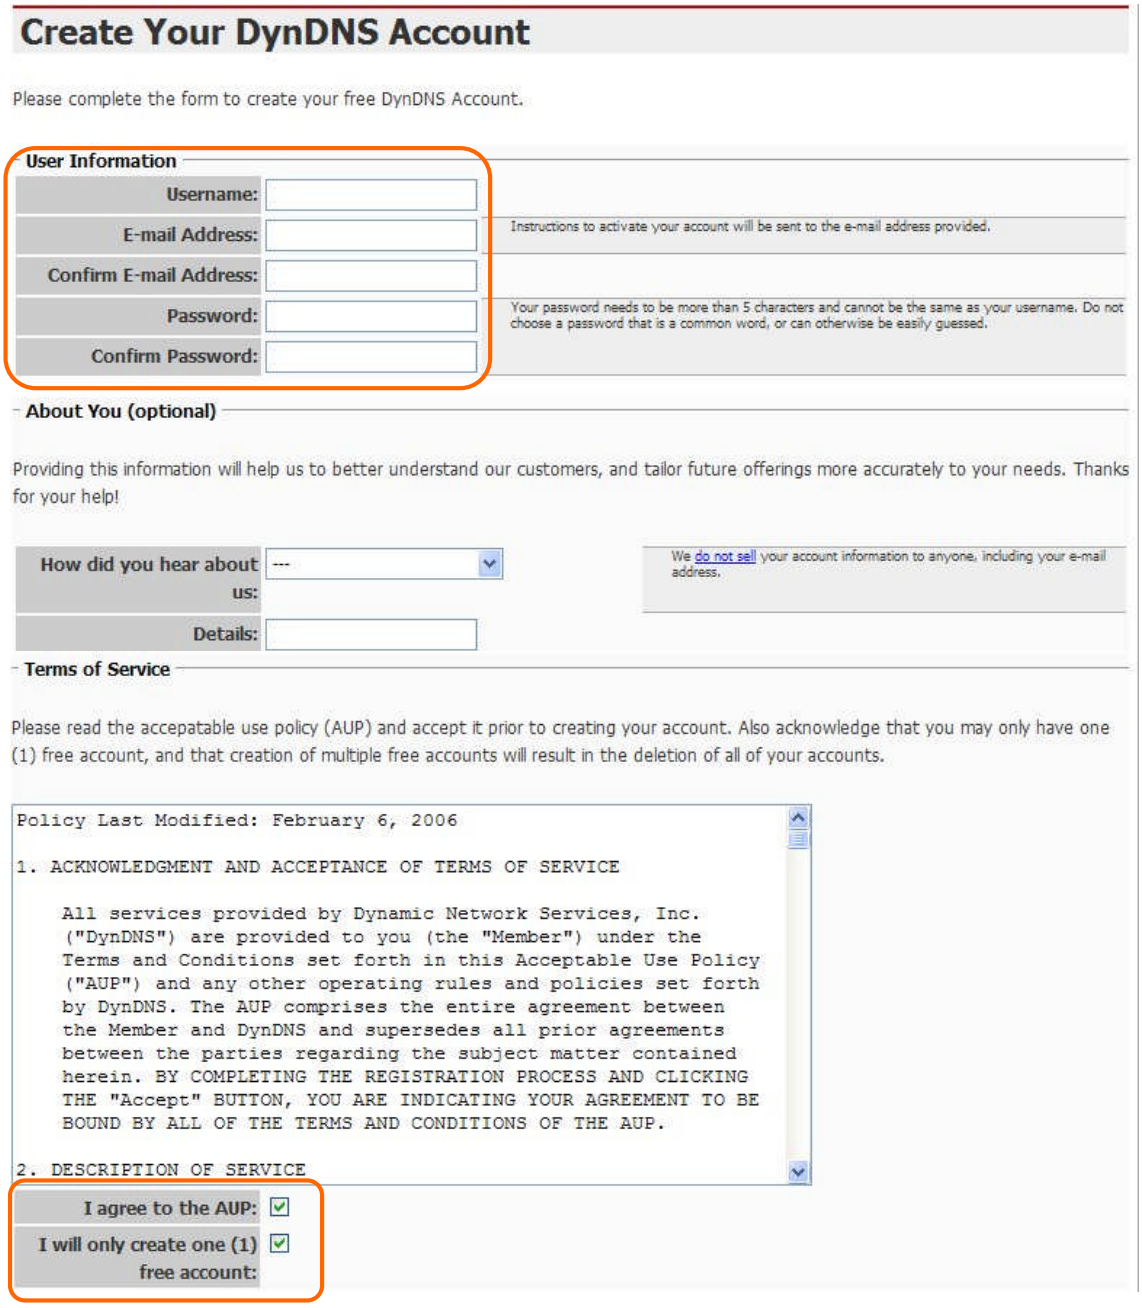
Create Your DynDNS Account
Please complete the form to create your free DynDNS Account.
User Information
Username:
E-mail Address:
Confirm E-mail Address:
Password:
Confirm Password:
Instructions to activate your account will be sent to the e-mail address provided.
Your password needs to be more than 5 characters and cannot be the same as your username. Do not choose a password that is a common word, or can otherwise be easily guessed.
About You (optional)
Providing this information will help us to better understand our customers, and tailor future offerings more accurately to your needs. Thanks for your help!
How did you hear about us:

Details:
We do not sell your account information to anyone, including your e-mail address.
Terms of Service
Please read the accepatable use policy (AUP) and accept it prior to creating your account. Also acknowledge that you may only have one (1) free account, and that creation of multiple free accounts will result in the deletion of all of your accounts.
Policy Last Modified: February 6, 2006
1. ACKNOWLEDGMENT AND ACCEPTANCE OF TERMS OF SERVICE
All services provided by Dynamic Network Services, Inc. ("DynDNS") are provided to you (the "Member") under the Terms and Conditions set forth in this Acceptable Use Policy ("AUP") and any other operating rules and policies set forth by DynDNS. The AUP comprises the entire agreement between the Member and DynDNS and supersedes all prior agreements between the parties regarding the subject matter contained herein. BY COMPLETING THE REGISTRATION PROCESS AND CLICKING THE "Accept" BUTTON, YOU ARE INDICATING YOUR AGREEMENT TO BE BOUND BY ALL OF THE TERMS AND CONDITIONS OF THE AUP.
2. DESCRIPTION OF SERVICE
I agree to the AUP:
I will only create one (1) free account:

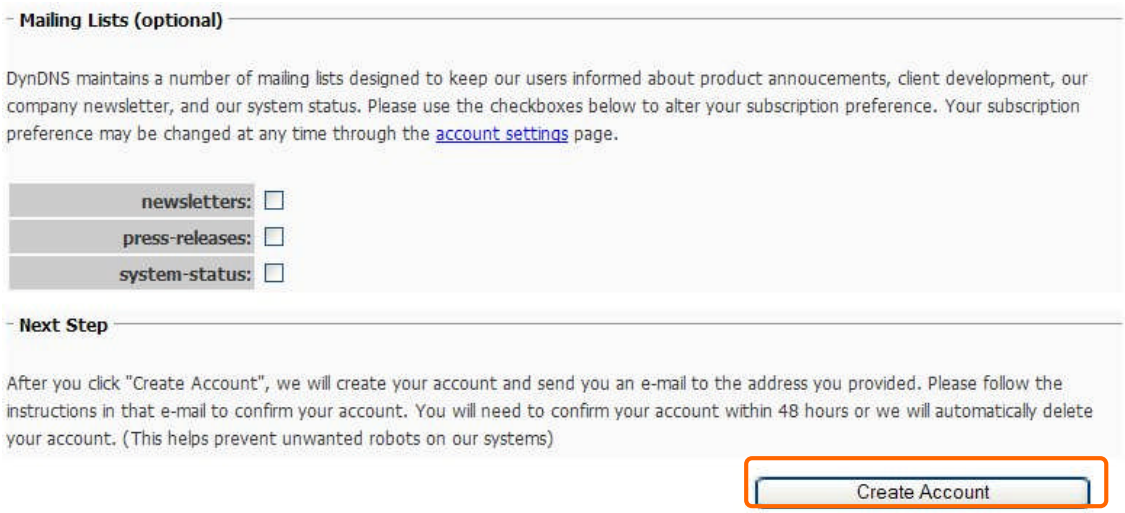
Mailing Lists (optional)
DynDNS maintains a number of mailing lists designed to keep our users informed about product annoucements, client development, our company newsletter, and our system status. Please use the checkboxes below to alter your subscription preference. Your subscription preference may be changed at any time through the account settings page.
newsletters:
press-releases:
system-status:
Next Step
After you click "Create Account", we will create your account and send you an e-mail to the address you provided. Please follow the instructions in that e-mail to confirm your account. You will need to confirm your account within 48 hours or we will automatically delete your account. (This helps prevent unwanted robots on our systems)
Create Account

Step 3. When you got this account created message, close it, and check your mailbox. You would get a mail from DynDNS website.

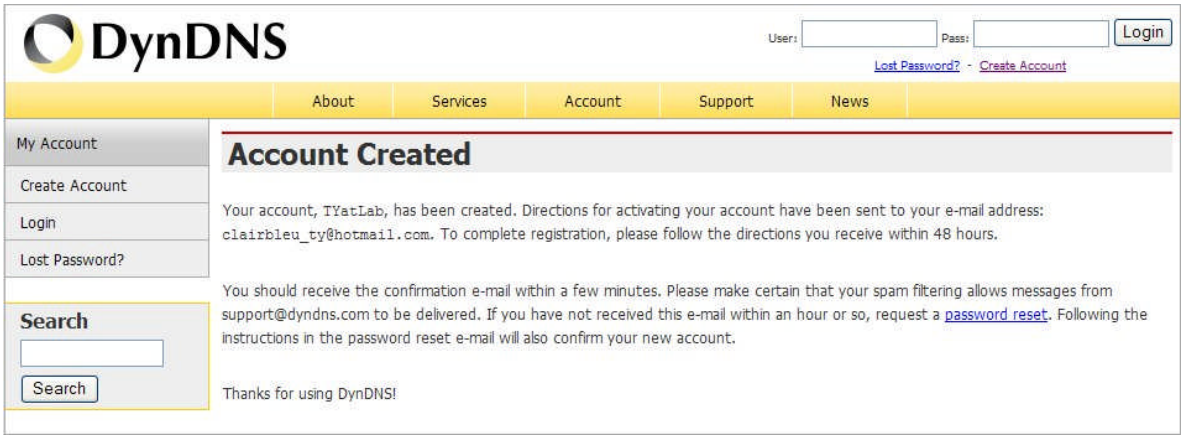
DynDNS
User:
Pass:
Login
Lost Password? - Create Account
About
Services
Account
Support
News
My Account
Create Account
Login
Lost Password?
Search
Search
Account Created
Your account, TYatLab, has been created. Directions for activating your account have been sent to your e-mail address: clairbleu_ty@hotmail.com. To complete registration, please follow the directions you receive within 48 hours.
You should receive the confirmation e-mail within a few minutes. Please make certain that your spam filtering allows messages from support@dyndns.com to be delivered. If you have not received this e-mail within an hour or so, request a password reset. Following the instructions in the password reset e-mail will also confirm your new account.
Thanks for using DynDNS!

Step 4. Click on the indicated address within your mail to confirm.

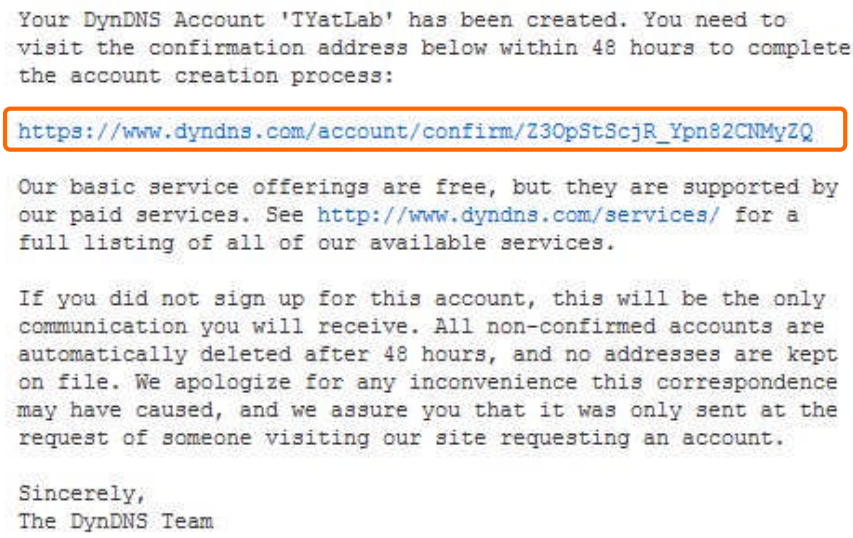
Your DynDNS Account 'TYatLab' has been created. You need to visit the confirmation address below within 48 hours to complete the account creation process:
https://www.dyndns.com/account/confirm/Z3OpStScjR_Ypn82CNMyZQ
Our basic service offerings are free, but they are supported by our paid services. See http://www.dyndns.com/services/ for a full listing of all of our available services.
If you did not sign up for this account, this will be the only communication you will receive. All non-confirmed accounts are automatically deleted after 48 hours, and no addresses are kept on file. We apologize for any inconvenience this correspondence may have caused, and we assure you that it was only sent at the request of someone visiting our site requesting an account.
Sincerely,
The DynDNS Team

Step 5. Click on **login.**

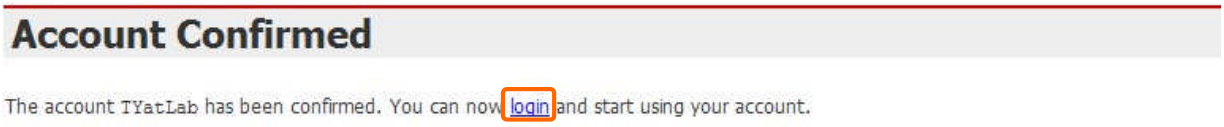
Account Confirmed
The account TYatLab has been confirmed. You can now login and start using your account.
Be informed of new services, changes to services, and important system maintenance/status notifications by subscribing to our mailing lists.
Once there, you may susbscribe to the Announce list by checking the appropriate box and clicking the "Save Settings" button.

Step 6. Click **My Services** after logging in.

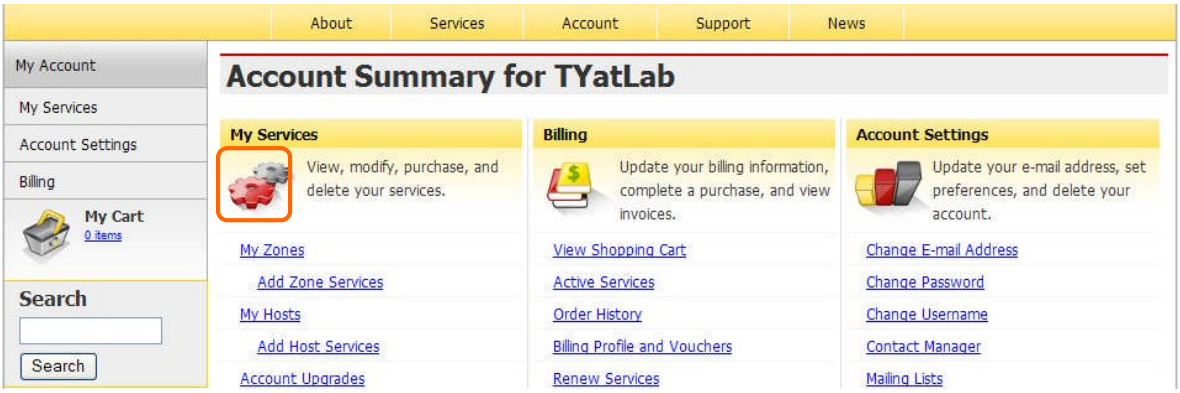

Step 7. Click **Add New Hostname**.

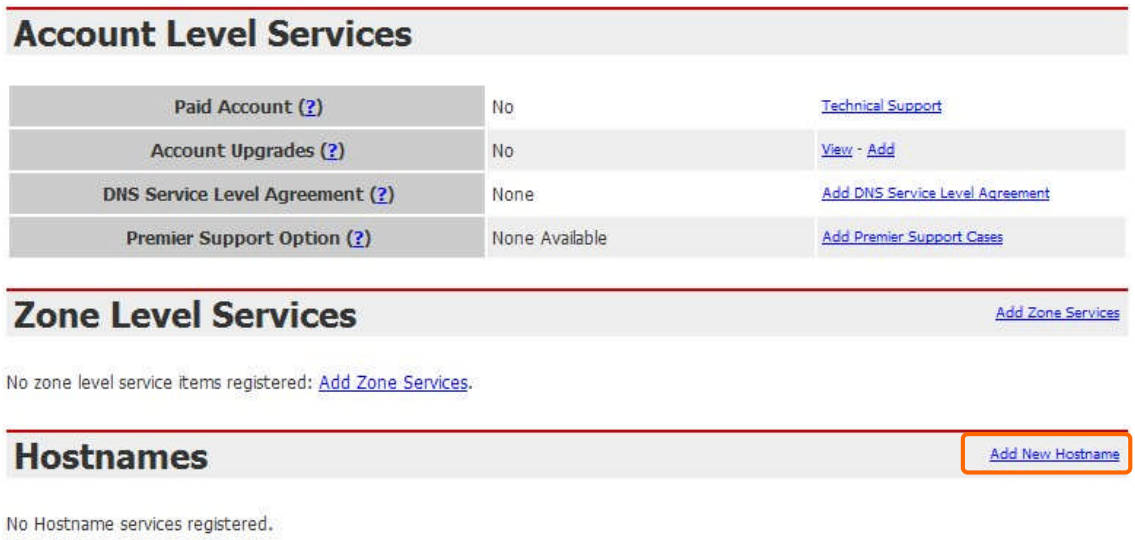
Account Level Services
Paid Account (?) No Technical Support
Account Upgrades (?) No View - Add
DNS Service Level Agreement (?) None Add DNS Service Level Agreement
Premier Support Option (?) None Available Add Premier Support Cases
Zone Level Services
Add Zone Services
No zone level service items registered: Add Zone Services.
Hostnames
Add New Hostname
No Hostname services registered.

Step 8. Put in your favorite hostname and service type, and then click **Create Host** after finished.

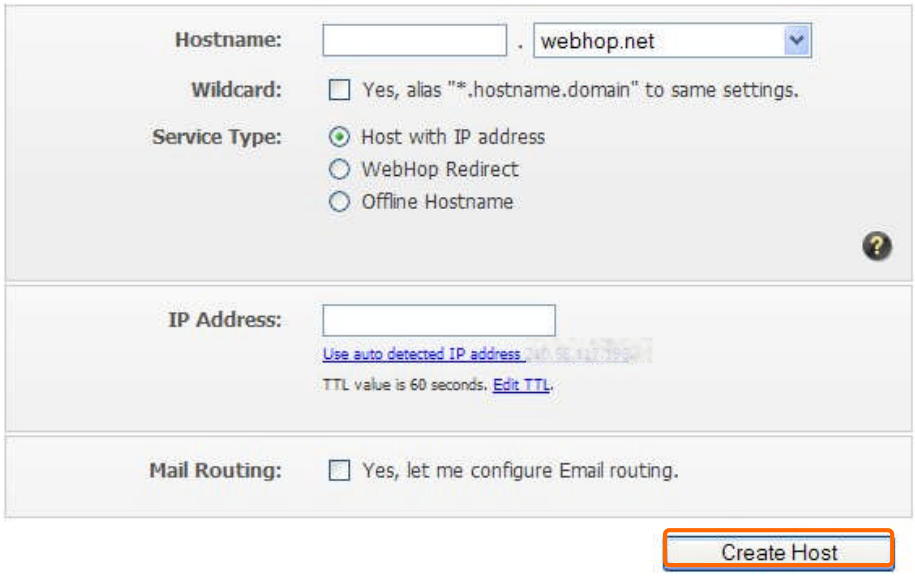

Step 9. Your hostname has been created when you see the following page.

Chapter 9 Q & A

9.1 Installation

1. Q: Where is the XDSL Router installed on the network?

A: In a typical environment, the Router is installed between the XDSL line and the LAN. Plug the XDSL Router into the XDSL line on the wall and Ethernet port on the Hub (switch or computer).

2. Q: Why does the throughput seem slow?

A: To achieve maximum throughput, verify that your cable doesn't exceed 100 meter. If you have to do so, we advise you to purchase a bridge to place it in the middle of the route in order to keep the quality of transmitting signal. Out of this condition you would better test something else.

- Verify network traffic does not exceed 37% of bandwidth.
- Check to see that the network does not exceed 10 broadcast messages per second.
- Verify network topology and configuration.

9.2 LED

1. Why doesn't N+ Mini Broadband Router power up?

A: Check if the output voltage is suitable, or check if the power supply is out of order.

2. The Internet browser still cannot find or connect to N+ Mini Broadband Router after verifying the IP address and LAN cable, the changes cannot be made, or password is lost.

A: In case N+ Mini Router is inaccessible; you can try to restore its factory default settings. Please press the "Reset" button and keep it pressed for over 7 seconds and the light of STATUS will vanish. The LEDs will flash again when reset is successful.

3. Why does N+ Mini Broadband Router shut down unexpectedly?

A: Re-plug your power adapter. Then, check the STATUS indicator; if it is off, the internal flash memory is damaged. For more help, please contact with your provider.

9.3 IP Address

1. Q: What is the default IP address of the router for LAN port?

A: The default IP address is 192.168.1.1 with subnet mask 255.255.255.0

2. Q: I don't know my WAN IP.

A: There are two ways to know.

Way 1: Check with your Internet Service Provider.

Way 2: Check the setting screen of N+ Mini Router. Click on **Status & Log** item to select **Network Configuration** on the Main Menu. WAN IP is shown on the WAN interface.

3. How can I check whether I have static WAN IP Address?

A: Consult your ISP to confirm the information, or check Network Configuration in N+ Mini Router's Main Menu.

4. Will the Router allow me to use my own public IPs and Domain, or do I have to use the IPs provided by the Router?

A: Yes, the Router mode allows for customization of your public IPs and Domain.

9.4 OS Setting

1. Why can't my computer work online after connecting to N+ Mini Broadband Router?

A: It's possible that your Internet protocol (TCP/IP) was set to use the following IP address. Please do as the following steps. (Windows 2000 & XP) **Start**＞**Settings**＞ **Network and Dial-up Connections**＞double click on **Internet Protocol(TCP/IP)**＞ select **obtain IP address automatically**＞ Click on **OK** button. Then, open Internet browser for testing. If you still can't go online, please test something else below.

- Verify network configuration by ensuring that there are no duplicate IP addresses.
- Power down the device in question and ping the assigned IP address of the device. Ensure no other device responds to that address.
- Check that the cables and connectors or use another LAN cable.

2. Q: Why can't I connect to the router?

A: Possible Solution 1: Make sure that your Ethernet connect properly and securely. Make sure that you've plugged in the power cord.

Possible Solution 2: Make sure that your PC is using an IP address within the range of 192.168.1.2 to 192.168.1.254. Make sure that the address of the subnet mask is 255.255.255.0. If necessary, the Default Gateway data should be at 192.168.1.1. To verify these settings, perform the following steps:

Windows 95, 98, or My Users:

1. Click on Windows **Start** > click on **Run** > input **winipcfg** > click on **OK** button.
2. Check the IP Address, Subnet Mask, Default Gateway data. Is this data correct? If the data isn't correct, click on **Release All**. Then click on **Renew All**.

Windows NT, 2000, or XP Users:

1. Click on Windows **Start** > click on **Run** > input **cmd** > click on **OK** button.
2. At the DOS prompt, type ipconfig/all.
3. Check the IP Address, Subnet Mask, Default Gateway data. Is this data correct? If the data isn't correct. Please input **ipconfig/release** > press **Enter** > input **ipconfig/renew** > press **Enter**.

Possible Solution 3: Verify the connection setting of your Web browser and verify that the HTTP Proxy feature of your Web browser is disabled. Make these verifications so that your Web browser can read configuration pages inside your router. Launch your Web browser. **Internet Explorer Users:**

1. Click on **Tools** > **Internet Options** > **Connections tab**.
2. Select **never dial a connection**, click on **Apply** button, and then click on **OK** button.
3. Click on **Tools** and then click on **Internet Options**.
4. Click on **Connections** and then click on **LAN Settings**.
5. Make sure none of the check boxes are selected and click on **OK** button.
6. Click on OK button.

Netscape Navigator Users:

1. Click on **Edit** > **Preferences** > double-click **Advanced** in the Category window.
2. Click on **Proxies** > select **Direct connection to the Internet** > click on **OK** button.
3. Click on **Edit again** and then click on **Preferences**.

4. Under category, double-click on **Advanced** and then click on **Proxies**.
5. Select **Direct connection to the Internet** and click on **OK** button.
6. Click on **OK** button.

3. Q: Web page hangs, corrupt downloads, or nothing but junk characters is being displayed on the screen. What do I need to do?

A: Force your NIC to 10Mbps or half duplex mode, and turn off the "Auto-negotiate" feature of your NIC as a temporary measure. (Please look at the Network Control Panel, in your Ethernet Adapter's Advanced Properties tab.)

4. Q: Why can't I connect to the Web Configuration?

A: you can remove the proxy server settings in your web browser.

9.5 N+ Mini Broadband Router Setup

1. Q: Why does N+ Mini Broadband Router's setup page shut down unexpectedly?

A: If one of the pages appears incompletely in N+ Mini Router's setup pages, please click on Logout item on the Main Menu before shutting it down. Don't keep it working. Then, close Internet browser and open it again for going back to the previous page.

2. Q: Why can't my USB devices and LAN ports work properly after setting the DHCP?

A: There are two rules over here.

Rule1: After connecting USB devices, please reboot your Router.

Rule2: Before finishing the DHCP setup, please don't connect any computer to LAN ports, because the conflict of having the same IP may occur and cause some computers a lot of trouble.

※Notice: Make sure that you always click on the Apply button after configuring each setting. And in order to let other LAN ports work properly, please reboot your PC.

3. Q: I don't know how to configure DHCP.

A: DHCP is commonly used in the large local network. It allows you to manage and distribute IP addresses from 2 to 254 throughout your local network via N+ Mini Router. Without DHCP, you would have to configure each computer separately. It's very troublesome. Please Open **Internet browser** > Input **192.168.1.1 in the**

website blank field > Select **DHCP Server under** the **IP Config Menu**. For more information, please refer to 3.3.2 (Router Mode) or 4.3.1 (AP Mode).

4. Q: How do I upgrade the firmware of N+ Mini Broadband Router?

A: Periodically, a new Flash Code is available for N+ Mini Router on your product supplier's website. Ideally, you should update N+ Mini Router's Flash Code using **Firmware Upgrade** on the **System Management** menu of N+ Mini Router Settings.

5. Q: My **N+ Mini Broadband Router** cannot connect to the ISP?

A: There are three possible solutions.

1. Check the Cable/XDSL modem is power on.
2. Check the Cable/XDSL link light is on to verify a good physical connection.
3. Check the WAN port LED to verify if the Cable/XDSL modem is connected to the router:

If your ISP Login method is following, please make sure the username and password are correct or not.

If your ISP is using dynamic IP addressing (DHCP) then the DHCP protocol does not have the authentication feature. Some Cable service providers often use the following to determine user's identification.

6. Q: Why is that I can ping to outside hosts, but cannot access Internet websites?

A: Check the DNS server settings on your PC. You should get the DNS servers settings from your ISP. If your PC is running a DHCP client, remove any DNS IP address setting. As the router assign the DNS settings to the DHCP-client-enabled PC.

7. Q: N+ Mini Broadband Router couldn't save the setting after click on Apply button?

A: N+ Mini Router will start to run after the setting finished applying, but the setting isn't written into memory. Here we suggest if you want to make sure the setting would be written into memory, please reboot the device via **Rebo**ot under **System Management** directory**.**

9.6 Wireless LAN

1. Q: Why couldn’t my wireless notebook work on-line after checking?

A: Generally, Wireless networks can sometimes be very complicated to set up, particularly if you're dealing with encryption and products from different vendors. Any number of variables can keep your workstations from talking to each other. Let's go over some of more common ones.

For starters, verify that your router and your workstation are using the same SSID descriptions. SSID acts as a password when a mobile device tries to connect to the wireless network. The SSID also differentiates one WLAN from another, so all access points and all devices attempting to connect to a specific WLAN must use the same SSID. A workstation will not be permitted to connect to the network unless it can provide this unique identifier. This is similar to the function of your network's Workgroup or Domain name.

When you're experiencing conductivity problems, it is always best to keep things simple. So next you are going to do is that, please disable any WEP encryption you might have configured.

Successful implementation of encryption also includes the use of a shared key. A HEX key is the most common, but other formats are also used. This key identifies the workstation to the router as a trusted member of this network. Different manufacturers can implement this key technology in ways that might prevent them from working correctly with another vendor's products. So pay attention to detail is going to be the key to a successful installation.

Next make sure the router and the NIC are configured to use the same communications channel. There are normally 11 of them, and the default channel can also vary from vendor to vendor. You might also want to confirm that the router has DHCP services enabled and an address pool configured. If not, the NIC won't be able to pick up an IP address. I have run across a few access points that offer DHCP services but do not assign all of the needed IP information to the NIC. As a result, I was able to connect to the network, but could not browse the web. The point is, don't assume anything. Verify for yourself that all of the required settings are being received by the workstation.

Finally, you might want to keep the system you're trying to configure in the same room as the router, at least during the initial configuration, in order to minimize potential interference from concrete walls or steel beams.

2. Q: My PC can't locate the Wireless Access Point.

A: Check the following:

- Your PC is set to Infrastructure Mode. (Access Points are always in Infrastructure Mode.)
- The SSID on your PC and the Wireless Access Point are the same. Remember that the SSID is case-sensitive. So, for example "Workgroup" does NOT match "workgroup".
- Both your PC and the Wireless Access Point must have the same setting for WEP. The default setting for the Wireless Router is disabled, so your wireless station should also have WEP disabled.
- If WEP is enabled on the Wireless Router, your PC must have WEP enabled, and the key must match.
- If the Wireless Router's Wireless screen is set to Allow LAN access to selected Wireless Stations only, then each of your Wireless stations must have been selected, or access will be blocked.
- To see if radio interference is causing a problem, see if connection is possible when close to the Wireless Access Point. Remember that the connection range can be as little as 100 feet in poor environments.

3. Q: Wireless connection speed is very slow.

A: The wireless system will connect at highest possible speed, depending on the distance and the environment. To obtain the highest possible connection speed, you can experiment with following:

- Access Point location: Try adjusting the location and orientation of the Access Point.
- Wireless Channel: If interference is the problem, changing to another channel may show a marked improvement.
- Radio Interference: Other devices may be causing interference. You can experiment by switching other devices off, and see if this helps. Any "noisy" devices should be shielded or relocated.
- RF Shielding: Your environment may tend to block transmission between the wireless stations. This will mean high access speed is only possible when close to the Access Point.

4. Q: Some applications do not run properly when using the Wireless Router.

A: The Wireless Router processes the data passing through it, so it is not transparent. Use the Special Application feature to allow the use of Internet applications which do not function correctly. If this does solve the problem, you can use the DMZ function. This should work with almost every application, but:

- It is a security risk, since the firewall is disabled.
- Only one (1) PC can use this feature.

5. Q: I can't connect to the Wireless Router to configure it.

A: Check the following:

- The Wireless Router is properly installed, LAN connections are OK, and it is powered ON.
- Make sure that your PC and the Wireless Router are on the same network segment.
- If your PC is set to "Obtain an IP Address automatically" (DHCP client), restart it.
- If your PC uses a Fixed (Static) IP address, make sure that it is using an IP Address within the range 192.168.1.129 to 192.168.1.253 and thus compatible with the Wireless Router's default IP Address of 192.168.1.254. Also, the Network Mask should be set to 255.255.255.0 to match the Wireless Router. In Windows, you can check these settings by using Control Panel ~ Network to check the Properties for the TCP/IP protocol.

6. Q: The WinXP wireless interface couldn't communicate the WEP with N+ Mini Router's wireless interface.

A: The default WEP of WinXP is **Authentication Open System - WEP**, but the WEP of **N+ Mini Router** is only for **Shared Key - WEP**, it caused both sides couldn't communicate. Please select the WEP of WinXP from Authentication Open System to **Pre-shared Key - WEP**, and then the WEP wireless interface between WinXP and N+ Mini Router would be communicated.

9.7 Support

1. Q: What is the maximum number of IP addresses that the XDSL Router will support?

A: The Router will support to 253 IP addresses with NAT mode.

5. Q: Is the Router cross-platform compatible?

A: Any platform that supports Ethernet and TCP/IP is compatible with the Router.

9.8 Others

1. Q: Why does the router dial out for PPPoE mode very often?

A: Normally some of game, music or anti-virus program will send out packets that trigger the router to dial out, you can close these programs. Or you can set the idle time to 0, then control to dial out manually.

2. Q: What can I do if there is already a DHCP server in LAN?

A: If there are two DHCP servers existing on the same network, it may cause conflict and generate trouble. In this situation, we suggest to disable DHCP server in router and configure your PC manually.

Chapter 10 Appendices

10.1 Operating Systems

1. Microsoft：Windows 2000, XP, Vista ,Win 7 32bit and the following related versions.
2. Apple：Mac OS X 10.4.7, Leopard and the following related versions.
3. Linux：Redhat 9, Fedora 6 & 7, Ubuntu 7.04 and the following related versions.

10.2 Browsers

1. Internet Explorer ver. 6 and 7 and the following related versions.
2. FireFox ver. 2.0.0.11 and the following related versions.3.
3. Safari ver. 3.04 and the following related versions.

10.3 Communications Regulation Information

Should any consumers need to learn more information, services and supports, please contact the supplier of your product directly.